



## Contents

<b>01 - Self-diagnosis . . . . .</b>	<b>1</b>
1 <b>Self-diagnosis . . . . .</b>	<b>1</b>
1.1    Self-diagnosis . . . . .	1
1.2    Function . . . . .	1
1.3    Technical data of self-diagnosis . . . . .	1
1.4    Connecting fault reader V.A.G 1551 and selecting engine electronics control unit . . . . .	2
1.5    Interrogating fault memory . . . . .	4
1.6    Fault table . . . . .	5
1.7    Erasing fault memory . . . . .	7
1.8    Final control diagnosis . . . . .	8
1.9    Coding control unit . . . . .	11
1.10   Erasing values learnt by engine electronics control unit . . . . .	12
1.11   Read measured value block and basic settings . . . . .	13
1.12   Display group overview . . . . .	13
<b>24 - Mixture preparation, Injection . . . . .</b>	<b>16</b>
1 <b>Mono-Motronic injection and ignition system . . . . .</b>	<b>16</b>
1.1    Mono-Motronic injection and ignition system . . . . .	16
1.2    Fitting locations overview . . . . .	16
1.3    Servicing injection part . . . . .	19
1.4    Servicing injection unit . . . . .	28
1.5    Safety precautions . . . . .	34
1.6    Rules for cleanliness . . . . .	35
1.7    Technical data . . . . .	35
1.8    Idling speed check . . . . .	35
1.9    Checking Lambda probe and Lambda control . . . . .	36
1.10   Checking Lambda probe heating . . . . .	38
1.11   Checking engine operating mode . . . . .	39
1.12   Checking overrun cut-off . . . . .	41
1.13   Checking throttle valve positioner . . . . .	41
1.14   Checking and adjusting idling switch . . . . .	43
1.15   Checking sender for throttle valve positioner . . . . .	47
1.16   Checking throttle valve potentiometer . . . . .	49
1.17   Checking coolant temperature sender . . . . .	51
1.18   Checking intake air temperature sender . . . . .	54
1.19   Checking injector . . . . .	59
1.20   Testing speed signal . . . . .	61
1.21   Checking control unit voltage supply . . . . .	62
1.22   Checking air conditioner and air conditioner compressor signals . . . . .	63
1.23   Matching engine electronic control unit to electronic immobilizer . . . . .	65
1.24   Matching automatic gearbox control unit and throttle valve potentiometer to one another . . . . .	66
1.25   Checking signal for automatic gearbox control unit . . . . .	66
1.26   Checking fuel pressure regulator and holding pressure . . . . .	67
1.27   Checking intake air system for leaks (unmetered air) . . . . .	70
1.28   Checking intake air preheating . . . . .	71
<b>28 - Ignition system . . . . .</b>	<b>73</b>
1 <b>Mono-Motronic injection and ignition system . . . . .</b>	<b>73</b>
1.1    Mono-Motronic injection and ignition system . . . . .	73
1.2    Servicing ignition part . . . . .	73
1.3    Safety precautions . . . . .	76
1.4    Adjustment data, Spark plugs . . . . .	77
1.5    Installing distributor . . . . .	77
1.6    Checking and adjusting ignition timing . . . . .	78



Golf 1992 , Vento 1992 >  
Mono Motronic injection and ignition system - Edition 05.1995

---

1.7	Checking ignition timing control . . . . .	80
1.8	Checking Hall sender . . . . .	80
1.9	Checking ignition transformer . . . . .	82
1.10	Checking ignition transformer output stage . . . . .	82