



Contents

| | |
|--|-----------|
| 01 - Self diagnosis, Electrical check | 1 |
| 1 Self diagnosis | 1 |
| 1.1 Self diagnosis | 1 |
| 1.2 Function | 1 |
| 1.3 Technical data of self diagnosis | 1 |
| 1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit | 2 |
| 1.5 Interrogating and erasing fault memory | 3 |
| 1.6 Fault table | 4 |
| 1.7 Final control diagnosis | 6 |
| 2 Electrical check | 9 |
| 2.1 Electrical check | 9 |
| 2.2 Wiring and component check with test box V.A.G 1598/18 | 9 |
| 24 - Mixture preparation, Injection | 14 |
| 1 Digifant injection and ignition system | 14 |
| 1.1 Digifant injection and ignition system | 14 |
| 1.2 Fitting locations overview | 14 |
| 1.3 Servicing injection part | 16 |
| 1.4 Safety precautions | 32 |
| 1.5 Rules for cleanliness | 33 |
| 1.6 Technical data | 33 |
| 1.7 Idling check | 33 |
| 1.8 Checking Lambda probe and Lambda control | 36 |
| 1.9 Checking acceleration/full throttle enrichment and overrun cut-off | 38 |
| 1.10 Checking engine operating mode | 39 |
| 1.11 Checking throttle valve potentiometer | 40 |
| 1.12 Matching automatic gearbox control unit and throttle valve potentiometer to one another | 42 |
| 1.13 Checking coolant temperature sender | 42 |
| 1.14 Checking intake air temperature sender | 43 |
| 1.15 Checking air mass meter potentiometer | 45 |
| 1.16 Checking control unit voltage supply | 47 |
| 1.17 Checking fuel pressure regulator and holding pressure | 48 |
| 1.18 Checking cold start valve | 50 |
| 1.19 Removing and installing injectors | 52 |
| 1.20 Checking injectors | 53 |
| 1.21 Checking intake air system for leaks (unmetered air) | 55 |
| 1.22 Checking intake air preheating | 56 |
| 1.23 Basic throttle valve setting | 57 |
| 1.24 Vacuum hose connection diagram | 58 |
| 28 - Ignition system | 62 |
| 1 Digifant injection and ignition system | 62 |
| 1.1 Digifant injection and ignition system | 62 |
| 1.2 Servicing ignition part | 62 |
| 1.3 Safety precautions | 65 |
| 1.4 Test data, spark plugs | 66 |
| 1.5 Installing distributor | 66 |
| 1.6 Checking ignition timing control | 67 |
| 1.7 Checking Hall sender | 68 |
| 1.8 Checking ignition transformer | 69 |
| 1.9 Checking ignition transformer output stage | 70 |