



Contents

01 - Self diagnosis	1
1 Self diagnosis	1
1.1 Self diagnosis	1
1.2 Function	1
1.3 Technical data of self diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
1.5 Interrogating and erasing fault memory	4
1.6 Fault table Digifant 3.0	5
1.7 Fault table Digifant 3.2	7
1.8 Final control diagnosis	10
1.9 Read measured value block and basic settings	13
1.10 Display group overview Digifant 3.0	13
1.11 Display group overview Digifant 3.2	15
24 - Mixture preparation, Injection	17
1 Digifant injection and ignition system	17
1.1 Digifant injection and ignition system	17
1.2 Fitting locations overview	17
1.3 Servicing injection part	20
1.4 Dismantling and assembling intake manifold upper part	27
1.5 Dismantling and assembling intake manifold lower part	30
1.6 Dismantling and assembling air cleaner	32
1.7 Safety precautions	34
1.8 Rules for cleanliness	34
1.9 Technical data	35
1.10 Performing basic setting	35
1.11 Checking Lambda probe and Lambda control	37
1.12 Checking Lambda probe heating	40
1.13 Checking idling stabilization	42
1.14 Checking acceleration/full throttle enrichment and overrun cut-off	43
1.15 Checking engine operating mode	44
1.16 Checking throttle valve potentiometer	45
1.17 Checking coolant temperature sender	48
1.18 Checking intake air temperature sender	50
1.19 Checking engine speed sender	53
1.20 Checking idling switch	55
1.21 Replacing and adjusting idling switch	58
1.22 Checking control unit voltage supply	59
1.23 Matching engine electronic control unit to electronic immobilizer	60
1.24 Checking starter signal	61
1.25 Checking injectors	62
1.26 Checking fuel pressure regulator and holding pressure	64
1.27 Checking intake air system for leaks (unmetered air)	66
1.28 Checking intake air preheating	67
28 - Ignition system	69
1 Digifant injection and ignition system	69
1.1 Digifant injection and ignition system	69
1.2 Servicing ignition part	69
1.3 Dismantling and assembling distributor	73
1.4 Safety precautions	74
1.5 Test data, spark plugs	75
1.6 Checking ignition timing control	75
1.7 Checking No. 1 Cyl. recognition sender/Hall sender	76



Golf 1992 , Vento 1992 >

Digital injection and ignition system (4-valve) - Edition 12.1994

1.8	Checking ignition transformer	77
1.9	Checking ignition transformer output stage	77
1.10	Checking knock sensors	80
1.11	Renewing rotor arm	81