



Contents

01 - Self-diagnosis	1
1 Self diagnosis	1
1.1 Self diagnosis	1
1.2 Features of self-diagnosis	1
1.3 Technical data of self diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit	2
1.5 Interrogating and erasing fault memory	3
1.6 Fault table	5
1.7 Final control diagnosis	9
1.8 Read measured value block and basic settings	12
1.9 Display group overview	13
24 - Mixture preparation, Injection	16
1 Servicing injection system	16
1.1 Servicing injection system	16
1.2 Fitting locations overview	16
1.3 General notes on injection	19
1.4 Removing and installing parts of the injection system	20
1.5 Dismantling and assembling fuel manifold with injectors	26
1.6 Dismantling and assembling intake manifold	27
1.7 Dismantling and assembling air cleaner	29
1.8 Safety precautions	32
1.9 Rules for cleanliness	32
1.10 Technical data	32
1.11 Performing basic setting	33
1.12 Checking Lambda probe and Lambda control	34
1.13 Checking Lambda probe heating	36
1.14 Checking engine operating mode	37
1.15 Checking throttle valve control part	39
1.16 Checking intake manifold pressure sender	45
1.17 Checking speed signal	47
1.18 Checking coolant temperature sender	49
1.19 Checking intake air temperature sender	52
1.20 Checking control unit voltage supply	54
1.21 Matching engine control unit to electronic immobilizer	56
1.22 Checking injectors	57
1.23 Checking fuel pressure regulator and holding pressure	59
1.24 Checking intake air system for leaks (unmetered air)	62
1.25 Checking intake air preheating	62
1.26 Wire routing engine wiring loom	64
28 - Ignition system	66
1 Servicing ignition system	66
1.1 Servicing ignition system	66
1.2 General notes to ignition system	66
1.3 Removing and installing parts of the ignition system	67
1.4 Dismantling and assembling distributor	70
1.5 Safety precautions	71
1.6 Adjustment data, Spark plugs	71
1.7 Checking and adjusting ignition timing	71
1.8 Checking Hall sender	73
1.9 Checking ignition transformer	74
1.10 Checking ignition transformer output stage	74
1.11 Checking knock sensor	76