



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Notes on installing	8
1.4 Tightening torques	9
1.5 Assembly mountings	10
1.6 Aligning engine and gearbox	11
1.7 Renewing engine carrier rubber mounting	12
1.8 Additional information and removal instructions for vehicles with air conditioner	14
13 - Crankshaft group	15
1 Dismantling and assembling engine	15
1.1 Dismantling and assembling engine	15
1.2 Removing and installing ribbed belt	35
1.3 Checking valve timing	36
1.4 Adjusting valve timing	39
2 Removing and installing sealing flanges and flywheel/drive plate	46
2.1 Removing and installing sealing flanges and flywheel/drive plate	46
2.2 Renewing crankshaft oil seal - vibration damper end -	51
2.3 Removing and installing drive plate	52
3 Removing and installing crankshaft	54
3.1 Removing and installing crankshaft	54
4 Dismantling and assembling pistons and conrods	57
4.1 Dismantling and assembling pistons and conrods	57
4.2 Piston and cylinder dimensions	64
15 - Cylinder head, Valve gear	65
1 Removing and installing cylinder head	65
1.1 Removing and installing cylinder head	65
1.2 Removing and installing cylinder head cover	72
1.3 Installing cylinder head	74
1.4 Checking compressions	75
2 Servicing valve gear	76
2.1 Servicing valve gear	76
2.2 Reworking valve seats	83
2.3 Removing and installing camshafts	84
2.4 Checking hydraulic bucket tappets	87
2.5 Checking valve guides	88
2.6 Renewing valve guides	88
2.7 Renewing valve stem seals	90
17 - Lubrication	92
1 Removing and installing parts of the lubrication system	92
1.1 Removing and installing parts of the lubrication system	92
1.2 Dismantling and assembling oil filter housing	98
1.3 Dismantling and assembling oil pump	101



1.4	Checking oil pressure and oil pressure switch	104
19 - Cooling system		106
1	Removing and installing parts of cooling system	106
1.1	Removing and installing parts of cooling system	106
1.2	Parts of cooling system body side	108
1.3	Parts of cooling system engine side	110
1.4	Dismantling and assembling coolant thermostat housing	114
1.5	Draining and filling cooling system	117
1.6	Removing and installing radiator and radiator fan	118
1.7	Removing and installing coolant pump	120
1.8	Checking coolant continued circulation pump and radiator fan run-on	123
20 - Fuel supply system		125
1	Removing and installing parts of fuel supply system	125
1.1	Removing and installing parts of fuel supply system	125
1.2	Safety precautions when working on the fuel supply system	125
1.3	Rules for cleanliness	125
1.4	Removing and installing fuel tank with its attachments and fuel filter, front wheel drive ..	126
1.5	Removing and installing fuel tank with its attachments and fuel filter, four wheel drive ..	132
1.6	Removing and installing fuel delivery unit, four wheel drive	138
1.7	Removing and installing fuel delivery unit	142
1.8	Adjusting throttle cable	144
1.9	Checking fuel pump	147
1.10	Removing and installing parts of the activated charcoal filter system	153
1.11	Checking fuel tank breather	155
26 - Exhaust system		158
1	Removing and installing parts of exhaust system, front wheel drive	158
1.1	Removing and installing parts of exhaust system, front wheel drive	158
1.2	Removing and installing parts of exhaust system, front wheel drive	159
1.3	Removing and installing parts of exhaust system, four wheel drive	164
1.4	Exhaust manifold, front exhaust pipe and catalyst with attachments	165
1.5	Silencer with mountings	167
1.6	Removing and installing front exhaust pipe and catalyst with attachments	169