



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Features of self-diagnosis	1
1.3 Technical data of self-diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit	2
2 Fault memory	3
2.1 Fault memory	3
2.2 Interrogating fault memory	3
2.3 Fault table	4
2.4 Erasing fault memory	11
3 Final control diagnosis	12
3.1 Final control diagnosis	12
3.2 Performing final control diagnosis	12
4 Measured value blocks	16
4.1 Measured value blocks	16
4.2 Safety precautions	16
4.3 Reading measured value block	16
4.4 Display group overview engine codes AFN, AVG, AHU, ALE, 1Z	17
4.5 Evaluating measured value blocks, engine codes AHU, 1Z	20
4.6 Evaluating measured value blocks, engine codes AFN, AVG	32
4.7 Evaluating measured value blocks, engine code ALE	42
4.8 Display group overview engine code AEY	53
4.9 Evaluating measured value blocks, engine code AEY	55
23 - Mixture preparation, Injection	65
1 Servicing Diesel direct injection system	65
1.1 Servicing Diesel direct injection system	65
1.2 Safety precautions	65
1.3 Rules for cleanliness	65
1.4 Fitting locations overview	66
1.5 Servicing injection pump	73
1.6 Servicing fuel filter	77
1.7 Servicing accelerator linkage	79
1.8 Setting engine to TDC number 1 cylinder, engine removed	81
1.9 Removing, installing and adjusting accelerator position sender	81
1.10 Checking sender adjustment	83
1.11 Checking throttle valve positioner housing	84
1.12 Removing and installing injection pump	85
1.13 Dynamically checking and adjusting commencement of injection	88
1.14 Checking valve timing	90
1.15 Removing and installing injectors	91
1.16 Servicing injectors	92
1.17 Renewing injection timing device cover O-ring	93
2 Checking components and functions	94
2.1 Checking components and functions	94
2.2 Wiring and component check with test box V.A.G 1598/18	94
2.3 Checking engine speed sender	94
2.4 Checking intake manifold pressure sender and elevation sender	96
2.5 Checking coolant temperature sender	97
2.6 Checking brake light switch and brake pedal switch	99
2.7 Checking clutch pedal switch	101
2.8 Checking intake manifold temperature sender	103



2.9	Checking intake air temperature sender	105
2.10	Checking Diesel direct injection system voltage supply	107
2.11	Checking fuel temperature sender	107
2.12	Checking modulating piston movement sender and quantity adjuster	109
2.13	Checking needle lift sender	112
2.14	Checking injection timing control range	113
2.15	Checking charge pressure control	117
2.16	Hose connection diagram for charge pressure control, engine codes AFN, AVG	123
2.17	Checking valve for throttle butterfly	124
2.18	Checking exhaust gas recirculation and air mass meter function	126
2.19	Checking speedometer sender	134
2.20	Checking accelerator position sender	135
3	Replacing, coding and matching engine control unit	137
3.1	Replacing, coding and matching engine control unit	137
3.2	Replacing engine control unit	137
3.3	Coding engine control unit	137
3.4	Matching engine electronic control unit to electronic immobilizer	139
28	Glow plug system	141
1	Checking glow plug system	141
1.1	Checking glow plug system	141
1.2	Checking glow plugs	141