



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Notes on removing .....	3
1.3 Notes on installing .....	5
1.4 Tightening torques .....	7
1.5 Assembly mountings .....	7
1.6 Renewing engine carrier rubber mounting .....	8
1.7 Additional information and removal instructions for vehicles with air conditioner .....	9
<b>13 - Crankshaft group</b> .....	<b>10</b>
<b>1 Dismantling and assembling engine</b> .....	<b>10</b>
1.1 Dismantling and assembling engine .....	10
1.2 Removing and installing ribbed belt .....	24
1.3 Removing and installing toothed belt .....	27
1.4 Checking semi-automatic toothed belt tensioning roller .....	33
1.5 Removing single part injection pump sprocket .....	33
<b>2 Removing and installing sealing flange and pressure plate/flywheel/drive plate</b> .....	<b>34</b>
2.1 Removing and installing sealing flange and pressure plate/flywheel/drive plate .....	34
2.2 Renewing crankshaft oil seal - pulley end - .....	38
2.3 Removing and installing drive plate .....	39
<b>3 Removing and installing crankshaft</b> .....	<b>43</b>
3.1 Removing and installing crankshaft .....	43
3.2 Crankshaft dimensions .....	46
<b>4 Dismantling and assembling pistons and conrods</b> .....	<b>47</b>
4.1 Dismantling and assembling pistons and conrods .....	47
4.2 Checking piston projection at TDC .....	54
4.3 Piston and cylinder dimensions .....	55
<b>15 - Cylinder head, Valve gear</b> .....	<b>56</b>
<b>1 Removing and installing cylinder head</b> .....	<b>56</b>
1.1 Removing and installing cylinder head .....	56
1.2 Removing and installing cylinder head .....	63
1.3 Checking compressions .....	65
<b>2 Servicing valve gear</b> .....	<b>67</b>
2.1 Servicing valve gear .....	67
2.2 Reworking valve seats .....	73
2.3 Checking valve guides .....	75
2.4 Renewing valve guides .....	76
2.5 Renewing valve stem seals .....	76
2.6 Removing and installing camshaft .....	78
2.7 Checking hydraulic bucket tappets .....	80
2.8 Replacing swirl chambers .....	81
<b>17 - Lubrication</b> .....	<b>82</b>
<b>1 Removing and installing parts of the lubrication system</b> .....	<b>82</b>
1.1 Removing and installing parts of the lubrication system .....	82



1.2	Checking oil pressure and oil pressure switch . . . . .	89
1.3	Removing and installing oil sump cap . . . . .	90
<b>19</b>	<b>- Cooling system . . . . .</b>	<b>91</b>
<b>1</b>	<b>Removing and installing parts of cooling system . . . . .</b>	<b>91</b>
1.1	Removing and installing parts of cooling system . . . . .	91
1.2	Parts of cooling system body side . . . . .	92
1.3	Parts of cooling system - engine side . . . . .	95
1.4	Dismantling and assembling coolant pump . . . . .	98
1.5	Draining and filling cooling system . . . . .	99
1.6	Removing and installing radiator and radiator fan . . . . .	101
<b>20</b>	<b>- Fuel supply system . . . . .</b>	<b>103</b>
<b>1</b>	<b>Removing and installing parts of fuel supply system . . . . .</b>	<b>103</b>
1.1	Removing and installing parts of fuel supply system . . . . .	103
1.2	Removing and installing fuel tank with its attachments, front drive . . . . .	104
1.3	Fuel tank with its attachments, four wheel drive . . . . .	107
1.4	Safety precautions when working on the fuel supply system . . . . .	111
1.5	Rules for cleanliness . . . . .	112
1.6	Removing and installing fuel delivery unit, four wheel drive . . . . .	112
1.7	Servicing accelerator mechanism . . . . .	116
1.8	Servicing cold start accelerator (CSA) operating cable . . . . .	118
1.9	Adjusting CSA operating cable . . . . .	119
<b>21</b>	<b>- Charging . . . . .</b>	<b>120</b>
<b>1</b>	<b>Charge air system with turbocharger . . . . .</b>	<b>120</b>
1.1	Charge air system with turbocharger . . . . .	120
1.2	Removing and installing turbocharger with attachments . . . . .	120
1.3	Removing and installing parts of charge air cooling system . . . . .	131
1.4	Rules for cleanliness . . . . .	132
1.5	Turbocharger hose/pipe connections . . . . .	133
1.6	Removing and installing turbocharger . . . . .	135
1.7	Checking turbocharger . . . . .	139
1.8	Checking pressure unit for charge pressure regulating valve . . . . .	142
1.9	Removing and installing pressure unit for charge pressure regulating valve . . . . .	143
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>144</b>
<b>1</b>	<b>Removing and installing parts of exhaust system, front wheel drive . . . . .</b>	<b>144</b>
1.1	Removing and installing parts of exhaust system, front wheel drive . . . . .	144
1.2	Engine code 1Y . . . . .	145
1.3	Front exhaust pipe and catalyst with attachments, engine codes 1Z, AHU, ALE . . . . .	147
1.4	Front exhaust pipe and catalyst with attachments, engine codes AFN, AVG . . . . .	148
1.5	Exhaust manifold, front exhaust pipe and catalyst with attachments, engine code AEY . . . . .	149
1.6	Silencer with mountings, engine codes 1Z, AEY, AFN, AVG, AHU, ALE . . . . .	150
1.7	Engine code AAZ . . . . .	153
<b>2</b>	<b>Removing and installing parts of exhaust system, four wheel drive . . . . .</b>	<b>155</b>
2.1	Removing and installing parts of exhaust system, four wheel drive . . . . .	155
2.2	Front exhaust pipe and catalyst with attachments . . . . .	156
2.3	Silencer with mountings . . . . .	158
<b>3</b>	<b>Exhaust gas recirculation system, engine codes 1Y, AEY . . . . .</b>	<b>160</b>
3.1	Exhaust gas recirculation system, engine codes 1Y, AEY . . . . .	160
3.2	Removing and installing parts of exhaust gas recirculation system . . . . .	161
3.3	Checking exhaust gas recirculation . . . . .	162
3.4	Checking exhaust gas recirculation valve . . . . .	163
3.5	Checking two-way valve . . . . .	163
<b>4</b>	<b>Exhaust gas recirculation system, engine codes AFN, AVG, AHU, ALE, 1Z . . . . .</b>	<b>164</b>
4.1	Exhaust gas recirculation system, engine codes AFN, AVG, AHU, ALE, 1Z . . . . .	164



4.2	Removing and installing parts of exhaust gas recirculation system . . . . .	165
4.3	Vacuum hose connection diagram . . . . .	168
4.4	Checking exhaust gas recirculation valve (mechanical) . . . . .	170
<b>5</b>	<b>Exhaust gas recirculation system, engine code AAZ . . . . .</b>	<b>171</b>
5.1	Exhaust gas recirculation system, engine code AAZ . . . . .	171
5.2	Removing and installing parts of exhaust gas recirculation system . . . . .	172
5.3	Checking exhaust gas recirculation . . . . .	173
5.4	Checking exhaust gas recirculation valve . . . . .	174
5.5	Checking two-way valve . . . . .	174