001	- Golf/Vento - Basic equipment	1-1	7
	1. Golf/Vento - Basic equipment	1	
	2. Battery, ignition/starter switch	2	
	3. Fresh air blower	3	
	4. Dash panel insert, warning lamps	4	
	5. Dash panel insert, digital clock, warning lamps, fuel gauge sender	5	
	6. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter	6	
	7. Heated rear window, heated exterior mirror, number plate lights	7	
	8. Front interior light, door contact switch, lights switched on warning buzzer	8	
	9. Luggage compartment light, radio, ashtray illumination	9	
	10. Self-diagnosis wiring junction, cigarette lighter	10	
	11. Headlight, side light, headlight dipper/flasher switch	11	
	12. Turn signal system and hazard warning lights system, parking light switch	12	
	13. Turn signal, tail light	13	
	14. Light switch, rear fog light	14	
	15. Reversing lights, dual tone horn	15	
	16. Windscreen washer/wiper system	16	
	17. Rear window wiper and washer system, brake light	17	
002	- 1.4 ltr./44 kW Motronic, engine code AEX, 1.6 ltr 1AV /55 kW, engine code AEE	18-	23
-	1. 1.4 ltr./44 kW Motronic, engine code AEX, 1.6 ltr 1AV /55 kW, engine code AEE	18	
	2. Injection system control unit, ignition system, Lambda probe	19	
	3. Control unit for injection system, knock sensor, coolant temperature sender, intake air	20	
	temperature sender		
	4. Control unit for injection system, injectors, throttle valve positioner, idle switch, throttle	21	
	positioner potentiometer		
	5. Control unit for injection system, engine speed sender, activated charcoal filter system solenoid	22	
	valve		
	6. Oil pressure switch, speedometer sender	23	
003	- 1.9 ltr./47 kW Diesel engine, engine code AEY	24-	32
	1. 1.9 ltr./47 kW Diesel engine, engine code AEY	24	
	2. Alternator, starter	25	
	3. Diesel direct injection system control unit, engine speed sender, air mass meter	26	
	4. Diesel direct injection system control unit, needle lift sender, modulating piston movement	27	
	sender		
	5. Diesel direct injection system control unit, accelerator pedal position sender, exhaust gas	28	
	recirculation valve, coolant heater element		
	6. Glow plug relay, diesel direct injection system control unit, commencement of injection valve,	29	
	fuel shut-off valve, throttle butterfly valve		
	7. Engine temperature sender, oil pressure switch, speedometer sender	30	
	8. Dash panel insert, warning lamps	31	
	9. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter	32	
004	- 2.8 ltr./128 kW Motronic, engine code AAA, 2.9 ltr./140 kW Motronic, engine code ABV	33-	42
	1. 2.8 ltr./128 kW Motronic, engine code AAA, 2.9 ltr./140 kW Motronic, engine code ABV	33	
	2. Alternator, starter, fuel pump, fuel gauge	34	
	3. Motronic control unit, ignition system, Lambda probe	35	
	4. Motronic control unit, knock sensors, throttle valve potentiometer, intake air temperature sender,	36	
	air mass meter		
	5. Motronic control unit, injectors	37	
	6. Motronic control unit, coolant temperature gauge sender, coolant temperature sender, throttle	38	
	valve control part		
	7. Motronic control unit, engine speed sender, activated charcoal filter system solenoid valve,	39	
	heater element crankcase breather, coolant circulation pump		
	8. Oil pressure switch, speedometer sender, oil temperature sender, coolant shortage indicator	40	
	sender		
	9. Dash panel insert, warning lamps	41	
	10. Dash panel insert, warning lamps, fuel gauge, coolant temperature gauge, rev. counter	42	
005	- Seat belt warning system	43-	45
	1. Seat belt warning system	43	
	Relay for belt warning system, belt switch driver's side	44	
	3. Warning lamp for seat belt warning system	45	
006	- Ecomatic	46-	56
	1. Ecomatic	46	
	2. Generator, battery, starter relay	47	
	3. Gear recognition switch, gear monitoring switch, hydraulic steering relay, ecomatic control unit	48	
	4. Ecomatic control unit, brake servo vacuum switch, clutch system pressure switch, clutch travel	49	
	sender. vacuum and breather valves for clutch positioner. priority switch valve		

	5. Ecomatic control unit, Ecomatic switch, gear recognition switch, diesel engine inhibitor switch,	50
	senders for engine, gearbox speed sender	<b>-</b> 4
	6. Automatic glow period control unit, commencement of fuel injection sender, idling speed boost	51
	actuator and injection begin, exhaust gas recirculation two-way valve	50
	7. Glow plugs, oil pressure switch, coolant temperature sender, engine temperature sender	52
	8. Sender for fuel supply, coolant circulation pump, junction box for self-diagnosis	53
	9. Second battery, control unit for second battery and driving lights	54
	10. Power supply relay, sender for speedometer	55
00-	11. Dash panel insert, warning lamps	56
007	- 1.6 ltr./74 kW Simos, engine code AFT	57-65
	1. 1.6 ltr./74 kW Simos, engine code AFT	57
	2. Alternator, starter, fuel pump, fuel gauge sender	58
	3. Simos control unit, ignition system, engine speed sender, knock sensor	59
	4. Simos control unit, Lambda probe, coolant temperature sender, intake manifold temperature sender	60
	5. Simos control unit, injectors, air mass meter, throttle valve control part, intake manifold	61
	change-over valve	
	6. Simos control unit, activated charcoal filter system solenoid valve	62
	7. Oil temperature sender, oil pressure switch, speedometer sender	63
	8. Dash panel insert, optical and acoustic oil pressure warning, odometer display, coolant shortage	64
	and coolant temperature warning, fuel gauge	
	9. Dash panel insert, speedometer, multi-function indicator switch	65
800	- Climatronic	66-75
	1. Climatronic	66-67
	2. Operating and display unit with control unit, temperature flap positioning motor	68
	3. Motors, self-diagnosis connection, sender for air flow temperature front	69
	4. Motor for centre vent, photo sensor, Climatronic fuse	70
	5. Valve strip, ambient temperature sensor, dash panel temperature sensor, fresh air duct	71
	temperature sensor	
	6. Fresh air blower, blower control unit, radiator fan	72-73
	7. Magnetic coupling, coolant fan control unit, pressure switch for air conditioning system	74-75
009	- Climatronic, for models with manual gearbox	76-83
	Climatronic, for models with manual gearbox	76-77
	2. Control and display unit with control unit, temperature flap control motor	78
	3. Climatronic control unit, positioning motors, self-diagnosis connection, front vent temperature	79
	sender	
	4. Climatronic control unit, centre vent positioning motor, sun sensor	80
	5. Climatronic control unit, valve strip, coolant temperature sender, dash panel temperature sensor	81
	6. Climatronic control unit, fresh air blower, blower control unit, radiator fan, ambient	82
	temperature sensor	
	7. Radiator fan control unit, magnetic coupling, air conditioner pressure switch, radiator fan	83
	thermo-switch	
010	- Climatronic	84-90
	1. Climatronic	84
	2. Operating and display unit with control unit, temperature flap positioning motor	85
	3. Motors, self-dianosis connection, sender for air flow temperature front	86
	4. Motor for centre vent, photo sensor, Climatronic fuse	87
	5. Valve strip, coolant temperature sender, dash panel temperature, ambient temperature sensor	88
	6. Fresh air blower, blower control unit, radiator fan	89
	7. Magnetic coupling, coolant fan control unit, pressure switch for air conditioning system	90
011	- Climatronic, for models with automatic gearbox	91-98
	Climatronic, for models with automatic gearbox	91-92
	2. Control and display unit with control unit, temperature flap control motor	93
	3. Climatronic control unit, positioning motors, self-diagnosis connection, front vent temperature	94
	sender	
	4. Climatronic control unit, centre vent positioning motor, sun sensor	95
	5. Climatronic control unit, valve strip, coolant temperature sender, dash panel temperature sensor	96
	6. Climatronic control unit, fresh air blower, blower control unit, radiator fan, ambient	97
	temperature sensor	
	7. Radiator fan control unit, magnetic coupling, air conditioner pressure switch, radiator fan	98
	thermo-switch	
012	- Air conditioning system	99-102
	Air conditioning system	99
	2. Fresh air blower switch, fresh air blower, Fresh air blower series resistance with overheating	100
	fuse	
	3. Switch for air conditioning system, switch for fresh and recirculation air flap, coolant fan	101
	4. Pressure switch for air conditioning system, ambient temperature switch, control unit for coolant	102

fan 013 - Air conditioning system 103-106 1. Air conditioning system 103 2. Fresh air blower switch, fresh air blower, fresh air blower series resistance with overheating 104 3. Switch for air conditioning system, switch for fresh and recirculation air flap, coolant fan 105 4. Pressure switch for air conditioning system, ambient temperature switch, control unit for coolant 106 014 - Air conditioning system, with 2 speed radiator fan 107-112 1. Air conditioning system, with 2 speed radiator fan 107-108 2. Fresh air blower switch, fresh air blower, fresh air blower series resistance with overheating 109 3. Switch for air conditioning system, fresh air and air recirculation switch, radiator fan, air 110-111 conditioner shut-off 4. Pressure switch for air conditioning system, ambient temperature switch, control unit for coolant 112 015 - Air conditioning system 113-116 1. Air conditioning system 113 2. Fresh air blower switch, fresh air blower, fresh air blower series resistance with overheating 114 3. Switch for air conditioning system, switch for fresh and recirculation air flap, coolant fan 115 4. Air conditioner pressure switch, ambient temperature switch, radiator fan control unit, air 116 conditioner shut-off 016 - Air conditioning system 117-121 1. Air conditioning system 117 2. Fresh air blower switch, fresh air blower, fresh air blower series resistance with overheating 118 fuse 3. Switch for air conditioning system, switch for fresh and recirculation air flap, coolant fan 119 4. Pressure switch for air conditioning system, ambient temperature switch, control unit for coolant 120-121 017 - Air conditioning system, with 3 speed radiator fan 122-127 1. Air conditioning system, with 3 speed radiator fan 122-123 2. Fresh air blower switch, fresh air blower, Fresh air blower series resistance with overheating 124 3. Switch for air conditioning system, Fresh air and air recirculation switch, radiator fan, air 125-126 conditioner shut-off 4. Pressure switch for air conditioning system, ambient temperature switch, control unit for coolant 127 fan 018 - High level brake light 128-129 1. High level brake light 128 2. Brake light left, brake light right, high level brake light 129 019 - 1.9 I/81 kW - Turbodiesel engine, engine code AFN 130-138 1. 1.9 I/81 kW - Turbodiesel engine, engine code AFN 130 2. Starter, alternator, radiator fan 131 3. Diesel direct injection system control unit, engine speed sender, air mass meter 132 4. Diesel direct injection system control unit, needle lift sender, modulating piston movement 133 5. Diesel direct injection system control unit, accelerator position sender, glow plugs - coolant 134 6. Diesel direct injection system control unit, fuel shut-off valve, glow plugs - engine 135 7. Engine temperature sender, oil pressure switch, speedometer sender 136 8. Dash panel insert, warning lamps 137 9. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter 138 020 - Automatic gearbox 139-143 1. Automatic gearbox 139 2. Starter inhibitor and reversing light relay, automatic gearbox control unit 140 3. Automatic gearbox control unit, solenoid valves 141 4. Automatic gearbox control unit, multi-function switch 142 5. Automatic gearbox control unit, road speed sender, selector lever lock solenoid 143 021 - Radio system "gamma" with CD changer and "digital sound packet" 144-148 1. Radio system "gamma" with CD changer and "digital sound packet" 144 2. Radio gamma, CD changer, aerial 145

146

147

148

149

149-154

3. Amplifier for digital sound packet, amplifier with bass loudspeaker

4. Amplifier for digital sound packet, rear left loudspeaker, rear right loudspeaker

5. Amplifier for digital sound packet, front left loudspeaker, front right loudspeaker

022 - 1.8 ltr./55 kW Mono-Motronic, engine code AAM, 1.8 ltr./66 kW Mono-Motronic, engine code ADZ

1. 1.8 ltr./55 kW Mono-Motronic. engine code AAM. 1.8 ltr./66 kW Mono-Motronic. engine code ADZ

	2. Starter, alternator, intake manifold preheating, Mono-Motronic control unit	150
	3. Mono-Motronic control unit, throttle valve potentiometer, intake air temperature sender, coolant	151-152
	temperature sender, idling speed switch, throttle valve positioner  4. Mono-Motronic control unit, Lambda probe, ignition system, fuel pump	153
	5. Oil pressure switch, oil temperature sender, speedometer sender	154
Λ	23 - Radio system "gamma" with CD changer and "digital sound packet"	155-159
0	Radio system "gamma" with CD changer and "digital sound packet"  1. Radio system "gamma" with CD changer and "digital sound packet"	155
	2. Radio gamma, CD changer, aerial	156
	3. Amplifier for digital sound packet	157
	4. Amplifier for digital sound packet, rear left loudspeaker, rear right loudspeaker	158
	5. Digital sound packet amplifier, loudspeaker front left, loudspeaker front right	159
0	24 - Fan, 2nd speed, engine code AGG, AKR	160-161
	1. Fan, 2nd speed, engine code AGG, AKR	160
	Radiator fan control unit, radiator fan, thermal switch for radiator fan	161
0	25 - Airbag with side airbag	162-164
	1. Airbag with side airbag	162
	2. Airbag control unit, airbag igniter, side airbag igniter, side airbag crash sensor, coil	163
	connector 3. ABS warning lamp, airbag warning lamp	164
Λ	3. ABS warning lamp, ambag warning lamp 26 - 1.9 l/66 kW - Turbodiesel engine, engine code 1Z	165-173
U	1. 1.9 I/66 kW - Turbodiesel engine, engine code 1Z	165-173
	2. Alternator, starter	166
	Diesel direct injection system control unit, engine speed sender, air mass meter	167
	4. Diesel direct injection system control unit, needle lift sender, modulating piston movement	168
	sender	.00
	5. Diesel direct injection system control unit, accelerator position sender, glow plugs - coolant	169
	6. Diesel direct injection system control unit, fuel shut-off valve, glow plugs - engine	170
	7. Engine temperature sender, oil pressure switch, speedometer sender	171
	8. Dash panel insert, warning lamps	172
	9. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter	173
0	27 - 1.6 ltr./74 kW Simos, engine code AKS	174-182
	1. 1.6 ltr./74 kW Simos, engine code AKS	174
	2. Alternator, starter, fuel pump, fuel gauge sender	175
	3. Simos control unit, ignition system, engine speed sender, knock sensor	176
	4. Simos control unit, Lambda probe, coolant temperature sender, intake air temperature sender	177 178
	<ol><li>Simos control unit, injectors, air mass meter, throttle valve control part, intake manifold change-over valve</li></ol>	170
	6. Simos control unit, activated charcoal filter system solenoid valve	179
	7. Oil temperature sender, oil pressure switch, speedometer sender	180
	8. Dash panel insert, optical and acoustic oil pressure warning, odometer display, coolant shortage	181
	and coolant temperature warning, fuel gauge	
	9. Dash panel insert, speedometer, multi-function indicator switch	182
0	28 - 2.0 I/85 kW Simos, engine code AKR	183-191
	1. 2.0 l/85 kW Simos, engine code AKR	183
	2. Alternator, starter, fuel pump, fuel gauge sender	184
	3. Simos control unit, ignition system, engine speed sender, knock sensor	185
	4. Simos control unit, lambda probe, coolant temperature sender, intake manifold temperature sender	186
	5. Simos control unit, injectors, air mass meter, throttle valve module	187
	6. Simos control unit, active charcoal filter system solenoid valve	188
	7. Oil temperature sender, oil pressure switch, speedometer sender	189
	8. Dash panel insert, optical and acoustic oil pressure warning, odometer display, coolant shortage	190
	and coolant temperature indicator, fuel gauge	101
Λ	9. Dash panel insert, speedometer, multifunction display switch 29 - 1.9 ltr./66 kW Turbo diesel engine, engine code ALE	191 192-200
U	1. 1.9 ltr./66 kW Turbo diesel engine, engine code ALE	192-200
	2. Alternator, starter	192
	Diesel direct injection system control unit, engine speed sender, air mass meter	194
	Diesel direct injection system control unit, engine speed sender, all mass meter     Diesel direct injection system control unit, needle lift sender, modulating piston movement	195
	sender	
	5. Diesel direct injection system control unit, accelerator position sender, coolant heater elements	196
	6. Diesel direct injection system control unit, fuel cut-off valve, engine glow plugs	197
	7. Engine temperature sender, oil pressure switch, speedometer sender	198
	8. Dash panel insert, warning lamps	199
	9. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter	200
0	30 - 1.8 l/55 kW Mono-Motronic, engine codes AAM, 1.8 l/66 kW Mono-Motronic, engine codes ADZ	201-210
	1. 1.8 l/55 kW Mono-Motronic. enaine codes AAM. 1.8 l/66 kW Mono-Motronic. enaine codes ADZ	201-202

2. Starter, alternator, intake manifold preheating, Mono-Motronic control unit	203
3. Mono-Motronic control unit, idling switch, throttle valve positioner, coolant temperature sender	204-205
4. Mono-Motronic control unit, throttle valve potentiometer, intake air temperature sender	206
5. Mono-Motronic control unit, Lambda probe, ignition system, fuel pump	207
<ol> <li>Oil temperature sender, oil pressure switch, speedometer sender</li> <li>Dash panel insert, optical and acoustic oil pressure warning, odometer display, coolant shortage</li> </ol>	208 e 209
and coolant temperature indicator, fuel gauge	209
8. Dash panel insert, speedometer, multi-function indicator switch, radiator fan	210
031 - Golf Cabriolet - Basic equipment	211-230
Golf Cabriolet - Basic equipment	211-212
2. Battery, ignition/starter switch, X contact relief relay	213
3. Dash panel insert, multi-function display switch, fresh air blower	214
4. Dash panel insert, main beam warning lamp, alternator warning lamp, turn signal warning lamp	215
5. Dash panel insert, digital clock, warning lamps	216
6. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter	217
7. Heated rear window, heated exterior mirror, brake fluid level warning contact	218
8. Interior light, door contact switches, lights switched on warning buzzer, number plate light	219
9. Luggage compartment light, radio, ashtray illumination	220
10. Terminal for self-diagnosis, cigarette lighter	221
11. Headlight range control	222 223
12. Headlights, side lights, front turn signals 13. Turn signals and hazard warning lights, headlight dipper/flasher switch	223 224
14. Parking light switch	225
15. Rear turn signals, tail light	226
16. Lighting switch, rear fog light	227
17. Reversing light, dual tone horn	228
18. Windscreen washer/wiper system	229
19. Brake lights, high level brake light	230
032 - Fog lights	231-234
1. Fog lights	231
2. Headlights, side lights, front turn signals	232
3. Lighting switch	233
4. Front and rear fog lights	234
033 - Headlight washer system	235-236
Headlight washer system     Headlight washer system	235 236
Headlight washer system     Anti-theft alarm system	237-240
1. Anti-theft alarm system	237
Control unit for anti-theft warning system, fuse, contact switch and horn for ATA	238
3. Anti-theft alarm system control unit, contact switch in lock cylinder, tailgate/boot lid contact	239
switch for anti-theft alarm	
4. Anti-theft alarm system control unit	240
035 - Trailer towing Golf Cabriolet	241-244
Trailer towing Golf Cabriolet	241
2. Left tail light	242
3. Trailer socket, rear fog light cut-out, contact switch	243
4. Right tail light	244
036 - Daytime driving lights and headlight washer system  1. Daytime driving lights and headlight washer system	245-250 245
Daytime driving lights and headlight washer system     Headlights, headlight dip and flasher switch	246
3. Hazard warning light relay, hazard warning light switch, turn signal switch, parking light switch	247
4. Turn signal, tail light	248
5. Lighting switch	249
6. Rear fog light, headlight washer system	250
037 - Central locking, 2-door with anti-theft alarm system	251-256
Central locking, 2-door with anti-theft alarm system	251
Central locking actuators, luggage compartment light	252
3. Pump for central locking control unit, central locking switch (in doors), control unit for 'open	253
doors' (Crash)	0-1
4. Anti-theft alarm control unit, fuse, contact switch and anti-theft alarm horn	254
5. Anti-theft alarm system control unit, boot lid contact switch, contact switch in lock cylinder	255
6. Anti-theft alarm system control unit	256 257-260
038 - Radio systems  1. Radio systems	257-260 257
Radio systems     Radio, CD changer, front loudspeakers	257 258
Radio, for changer, noncloudspeakers     Radio. front loudspeakers, rear loudspeakers	259

	000
4. Radio, aerial	260
039 - Radio system "GAMMA" with CD changer and "Digital Sound Packet"	261-265
Radio system "GAMMA" with CD changer and "Digital Sound Packet"     Radio gamma, CD changer, aerial	261 262
3. Amplifier for Digital Sound Packet	263
Amplifier for Digital Sound Packet, rear left loudspeaker, rear right loudspeaker	264
5. Amplifier for Digital Sound Packet, front left loudspeaker, front right loudspeaker	265
040 - Front seat heating, vehicles with cloth seats only	266-268
Front seat heating, vehicles with cloth seats only	266
2. Driver's seat heating	267
3. Front passenger's seat heating	268
041 - Front seat heating, vehicles with leather seats only	269-273
1. Front seat heating, vehicles with leather seats only	269
2. Driver's seat lateral support heating, driver's seat backrest heating	270
3. Regulator for heated driver's seat, heated driver's seat control unit, heated driver's seat,	271
temperature sensor for heated driver's seat	
4. Regulator for heated front passenger's seat, heated front passenger's seat control unit, heated	272
front passenger's seat, temperature sensor for heated front passenger's seat	070
5. Front passenger's seat lateral support heating, front passenger's seat backrest heating	273
042 - Hazard warning system	274-278 274
Hazard warning system     Headlights, side lights, front turn signals	274 275
3. Hazard warning light switch, additional relay for hazard warning system	276
4. Turn signal switch, headlight dipped beam/flasher switch, parking light switch	277
5. Rear turn signals, tail lights	278
043 - 2.0 litre/85 kW Motronic, engine codes ATU	279-289
1. 2.0 litre/85 kW Motronic, engine codes ATU	279-280
2. Starter, alternator, fuel pump, fuel gauge sender	281
3. Motronic control unit, ignition system, coolant temperature sender	282
4. Motronic control unit, throttle vale control part, intake manifold temperature sender, engine	283
speed sensor, fuel pump relay	
5. Motronic control unit, knock sensor, injectors	284
6. Motronic control unit, Lambda probes, activated charcoal filter system solenoid valve	285
7. Motronic control unit, air mass meter, secondary air pump motor, secondary air pump relay,	286
secondary air inlet valve	007
8. Speedometer sender, coolant shortage indicator sender, oil temperature sender, heater element	287
(crankcase breather) 9. Dash panel insert, optical and acoustic oil pressure warning, ambient temperature sensor, coolant	288
temperature/coolant shortage warning lamp	200
10. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, alternator warning lamp,	289
fault lamp for self-diagnosis	200
044 - 2.0 ltr./85 kW Simos, engine code AKR	290-298
1. 2.0 ltr./85 kW Simos, engine code AKR	290
2. Starter, alternator, fuel pump	291
3. Simos control unit, ignition system, coolant temperature sender	292
4. Simos control unit, throttle vale control part, intake air temperature sender, engine speed	293
sender, fuel pump relay	
5. Simos control unit, knock sensors, injectors	294
6. Simos control unit, Lambda probe, air mass meter, activated charcoal filter system solenoid valve,	295
Simos control unit current supply relay	206
<ol><li>Speedometer sender, coolant shortage indicator sender, oil temperature sender, thermo switch for radiator fan run-on</li></ol>	296
8. Dash panel insert, optical and acoustic oil pressure warning, ambient temperature sensor, coolant	297
temperature/coolant shortage warning lamp	291
Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, alternator warning lamp	298
045 - 1.6 ltr./74 kW Simos, engine code AKS	299-307
1. 1.6 ltr./74 kW Simos, engine code AKS	299
2. Starter, alternator, fuel pump	300
3. Simos control unit, ignition system, coolant temperature sender	301
4. Simos control unit, throttle vale control part, intake air temperature sender, engine speed	302
sender, fuel pump relay	
5. Simos control unit, knock sensor, intake manifold change-over valve, injectors	303
6. Simos control unit, Lambda probe, air mass meter, activated charcoal filter system solenoid valve,	304
Simos control unit current supply relay	205
<ol> <li>Speedometer sender, coolant shortage indicator sender, oil temperature sender</li> <li>Dash panel insert. optical and acoustic oil pressure warning, ambient temperature sender, coolant</li> </ol>	305 306
o. Dash pahel hisert, optical and accusite on pressure warning, amplent temperature sender, cooldni	300

temperature/coolant shortage warning lamp 9. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, alternator warning lamp 046 - 1.8 ltr./55 kW Mono-Motronic, engine code AAM	307 308-317
1. 1.8 ltr./55 kW Mono-Motronic, engine code AAM     2. Starter, alternator, fuel pump	308-309 310
<ul><li>3. Mono-Motronic control unit, ignition system, coolant temperature sender</li><li>4. Mono-Motronic control unit, throttle valve potentiometer, intake air temperature sender, fuel</li></ul>	311 312
pump relay, injector 5. Mono-Motronic control unit, sender for throttle valve positioner, idling switch, throttle valve positioner	313
Mono-Motronic control unit, Lambda probe, activated charcoal filter system solenoid valve, intake manifold preheating relay, heater element for intake manifold preheating	314
7. Speedometer sender, coolant shortage indicator sender, oil temperature sender 8. Dash panel insert, optical and acoustic oil pressure warning, ambient temperature sender, coolant temperature/coolant shortage warning lamp	315 316
<ul> <li>9. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, alternator warning lamp</li> <li>047 - Air conditioner</li> <li>1. Air conditioner</li> <li>2. Fresh air blower switch, fresh air blower</li> <li>3. Radiator fan control unit, air conditioner switch, fresh air and recirculating air flap switch,</li> </ul>	317 318-321 318 319 320
radiator fan thermo switch, radiator fan 4. Radiator fan control unit, thermo-switch for air conditioner switch-off, air conditioner pressure	321
switch, ambient air temperature switch, air conditioner magnetic coupling 048 - Air conditioning system	322-325
1. Air conditioning system	322
<ol> <li>Fresh air blower switch, fresh air blower</li> <li>Radiator fan control unit, air conditioner switch, fresh air and recirculating air flap switch, radiator fan thermo-switch, radiator fan, thermo-switch for radiator fan run-on</li> </ol>	323 324
<ol> <li>Radiator fan control unit, air conditioner pressure switch, ambient air temperature switch, air conditioner magnetic coupling</li> </ol>	325
<ul> <li>049 - Air conditioning system</li> <li>1. Air conditioning system</li> <li>2. Fresh air blower switch, fresh air blower</li> <li>3. Radiator fan control unit, air conditioner switch, fresh air and recirculating air flap switch,</li> </ul>	326-329 326 327 328
radiator fan thermo-witch, radiator fan  4. Radiator fan control unit, air conditioner pressure switch, ambient air temperature switch, air conditioner magnetic coupling	329
050 - Radiator fan, 2 speed	330-331
Radiator fan, 2 speed     Radiator fan, radiator fan thermo switch	330 331
051 - Immobilizer	332-333
Immobilizer     Immobilizer control unit, immobilizer reading coil	332 333
052 - Automatic gearbox	334-339
Automatic gearbox     Automatic gearbox control unit, relay for starter inhibitor and reversing lights.	334-335 336
<ol> <li>Automatic gearbox control unit, relay for starter inhibitor and reversing lights</li> <li>Automatic gearbox control unit, solenoid valves</li> </ol>	337
<ul><li>4. Automatic gearbox control unit, multi-function switch, gearbox sender</li><li>5. Automatic gearbox control unit, road speed sender, selector lever lock solenoid, kick-down switch</li></ul>	338 339
053 - Anti-locking brake system (ABS), Anti-locking brake system (ABS) with electronic differential lock (EDL)  1. Anti-locking brake system (ABS), Anti-locking brake system (ABS) with electronic differential	340-343 340
lock (EDL)  2. ABS control unit, brake light switch	341
3. ABS control unit, ABS warning lamp, ABS hydraulic pump	342
ABS control unit, speed sensor     Convertible top operation - Golf Cabriolet	343 344-345
Convertible top operation - Golf Cabriolet	344
Convertible top operation control unit, convertible top operating switch     Central locking with remote control	345 346-350
Central locking with remote control	346
Central locking actuator, tailgate/boot lid central locking switch     Central locking pump with control unit	347 348
4. Control unit for remote control - central locking, control unit to unlock doors (Crash)	349
5. Door contact switch, front interior lights 056 - 1.8 l/65 kW Digifant. engine codes ADD	350 351-358
1.1. In the second of the second seco	30.000

<ol> <li>1. 1,8 l/65 kW Digifant, engine codes ADD</li> <li>2. Battery, ignition/starter switch, X contact relief relay</li> <li>3. Digifant control unit, ignition system, lambda probe, Hall sender</li> <li>4. Digifant control unit, digifant control unit current supply relay, throttle valve potentiometer, coolant temperature sender, intake air temperature sender</li> </ol>	351 352 353 354
<ol> <li>Digifant control unit, fuel pump relay, injectors</li> <li>Digifant control unit, idling stabilization valve, activated charcoal filter system solenoid valve 1, terminal for self-diagnosis</li> </ol>	355 356
<ol> <li>Fuel pump, fuel gauge sender, speedometer sender, oil pressure switch</li> <li>Dash panel insert, fuel gauge, coolant temperature and coolant shortage gauge, optical and acoustical oil pressure warning</li> </ol>	357 358
057 - Golf Cabriolet - Basic equipment, for sales type 1V7 only  1. Golf Cabriolet - Basic equipment, for sales type 1V7 only  2. Battery, ignition/starter switch, X-contact relief relay  3. Multifunction display switch, fresh air blower switch  4. Dash panel insert, main beam warning lamp, alternator warning lamp, turn signal warning lamps, multifunction display	359-380 359-360 361 362 363
<ol> <li>Dash panel insert, digital clock, warning lamps</li> <li>Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, rear lid open warning lamp</li> </ol>	364 365
7. Handbrake warning switch, brake fluid level warning contact, heated rear window, coolant shortage indicator sender	366
<ol> <li>Driver door contact switch, front interior light, illuminated vanity mirror</li> <li>Front passenger door contact switch, left door warning lamp, right door warning lamp, side lights and radio buzzer</li> </ol>	367 368
Rear lid release switch, luggage compartment release solenoid, rear lid contact switch for anti-theft alarm system, luggage compartment light	369
11. Self-diagnosis connection, self-diagnosis wiring junction, cigarette lighter 12. Hazard warning light switch, radio, ashtray illumination bulb 13. Headlight range control 14. Headlight, side light, front turn signal 15. Hazard warning lights additional relay 16. Turn signal switch, headlight dipper/flasher switch, parking light switch 17. Rear turn signal, front tail light, rear fog light 18. Light switch, rear fog light switch 19. Horn plate, dual tone horn relay, dual tone horn, heated washer jets 20. Windscreen washer/wiper system 21. Reversing light switch, reversing light, brake light switch, brake light, washer pump 058 - Airbag systems, for sales type 1V7 only 1. Airbag systems, for sales type 1V7 only	370 371 372 373 374 375 376 377 378 379 380 381-383 381
<ol> <li>Airbag control unit, front airbag igniters, side airbag crash sensors</li> <li>Airbag control unit, side airbag igniter, airbag warning lamp</li> <li>Exterior mirror, heated and electrically adjustable, sales type 1V7 only</li> <li>Exterior mirror, heated and electrically adjustable, sales type 1V7 only</li> <li>Mirror adjustment switch, driver's mirror adjustment motors, driver's heated exterior mirror</li> <li>Front passenger's mirror adjustment motors, front passenger's heated exterior mirror</li> </ol>	382 383 384-386 384 385 386
<ul> <li>060 - Central locking with remote control, anti-theft alarm system, for sales type 1V7 only</li> <li>1. Central locking with remote control, anti-theft alarm system, for sales type 1V7 only</li> <li>2. Central locking actuator, central locking switch</li> <li>3. Pump with central locking control unit</li> <li>4. Central locking remote control, control unit, control unit to unlock doors (crash)</li> <li>5. Turn signal</li> <li>6. Anti-theft alarm system control unit, door contact switch, front interior light</li> <li>7. Anti-theft alarm system control unit, anti-theft alarm system horn, anti-theft alarm system contact switch</li> <li>8. Anti-theft alarm system control unit, rear lid release switch, luggage compartment release</li> </ul>	387-394 387 388 389 390 391 392 393
solenoid, rear lid contact switch for anti-theft alarm system, luggage compartment light  061 - Radio systems, for sales type 1V7 only  1. Radio systems, for sales type 1V7 only  2. Radio, CD changer, front loudspeakers  3. Radio, front right loudspeakers, rear loudspeakers  4. Radio  062 - Immobilizer, for sales type 1V7 only  1. Immobilizer, soutral unit immobilizer reading sail	395-398 395 396 397 398 399-400 399 400
Immobilizer control unit, immobilizer reading coil     Electric windows. for sales type 1V7 only	401-407

1. Electric windows, for sales type 1V7 only	401
2. Front left electric window control unit, front left electric window motor, front left electric	402
window switch, front right electric window switch (driver)	. • -
3. Front right electric window control unit, front right electric window switch, central locking	403
	403
switch (front passenger's side)	40.4
4. Door contact switch	404
5. Rear left electric window switch (driver), rear right electric window switch (driver)	405
Rear left electric window control unit, rear left electric window motor	406
7. Rear right electric window control unit, rear right electric window motor	407
064 - 2.0 l/85 kW Motronic, engine code AWF, for sales type 1V7 only 2.0 l/85 kW Motronic, engine	408-417
code AWG, for sales type 1V7 only	100 117
	400
1. 2.0 l/85 kW Motronic, engine code AWF, for sales type 1V7 only 2.0 l/85 kW Motronic, engine code	408
AWG, for sales type 1V7 only	
Starter, alternator, fuel pump, fuel gauge sender	409
3. Motronic control unit, ignition system	410
4. Motronic control unit, throttle valve module, intake air temperature sender, engine speed sender,	411
fuel pump relay	
5. Motronic control unit, knock sensor, injectors	412
	413
6. Motronic control unit, lambda probes, active charcoal filter system solenoid valve	
7. Motronic control unit, air mass meter, secondary air pump motor, secondary air pump relay,	414
coolant temperature sender	
8. Speedometer sender, coolant shortage indicator sender, oil temperature sender, heater element for	415
crankcase breather	
9. Dash panel insert, optical and acoustic oil pressure warning, ambient temperature sensor, coolant	416
temperature/coolant shortage warning lamp	710
	447
10. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, alternator warning lamp,	417
exhaust emissions warning lamp	
065 - Air conditioner	418-421
1. Air conditioner	418
2. Fresh air blower switch, fresh air blower	419
3. Radiator fan control unit, air conditioner switch, fresh air/air recirculation flap switch,	420
radiator fan thermal switch, radiator fan	720
	404
4. Radiator fan control unit, air conditioner switch-off thermal switch, air conditioner pressure	421
switch, ambient temperature switch, air conditioner magnetic coupling	
066 - Cabriolet top operation, sales type 1V7 only	422-424
1. Cabriolet top operation, sales type 1V7 only	422
2. Convertible top operation control unit, convertible top operation motor, convertible top	423
operation hydraulic pump relay, convertible top operating switch	
Convertible top operation control unit, handbrake warning switch	424
116 - Trailer towing Golf, From May 1995	425-428
1. Trailer towing Golf, From May 1995	425
2. Left tail light	426
Trailer socket, rear fog light cut-out, contact switch	427
4. Right tail light	428
117 - Trailer towing Golf Variant, From May 1995	429-432
1. Trailer towing Golf Variant, From May 1995	429
· · · · · · · · · · · · · · · · · · ·	430
0   aft tail limbs	4.30
2. Left tail light	
3. Trailer socket, rear fog light cut-out, contact switch	431
Trailer socket, rear fog light cut-out, contact switch     Right tail light	431 432
3. Trailer socket, rear fog light cut-out, contact switch	431
<ul><li>3. Trailer socket, rear fog light cut-out, contact switch</li><li>4. Right tail light</li><li>118 - Trailer towing Vento, From May 1995</li></ul>	431 432 433-436
<ul> <li>3. Trailer socket, rear fog light cut-out, contact switch</li> <li>4. Right tail light</li> <li>118 - Trailer towing Vento, From May 1995</li> <li>1. Trailer towing Vento, From May 1995</li> </ul>	431 432 433-436 433
<ul> <li>3. Trailer socket, rear fog light cut-out, contact switch</li> <li>4. Right tail light</li> <li>118 - Trailer towing Vento, From May 1995</li> <li>1. Trailer towing Vento, From May 1995</li> <li>2. Left tail light</li> </ul>	431 432 433-436 433 434
<ul> <li>3. Trailer socket, rear fog light cut-out, contact switch</li> <li>4. Right tail light</li> <li>118 - Trailer towing Vento, From May 1995</li> <li>1. Trailer towing Vento, From May 1995</li> <li>2. Left tail light</li> <li>3. Trailer socket, rear fog light cut-out, contact switch</li> </ul>	431 432 433-436 433 434 435
<ul> <li>3. Trailer socket, rear fog light cut-out, contact switch</li> <li>4. Right tail light</li> <li>118 - Trailer towing Vento, From May 1995</li> <li>1. Trailer towing Vento, From May 1995</li> <li>2. Left tail light</li> <li>3. Trailer socket, rear fog light cut-out, contact switch</li> <li>4. Right tail light</li> </ul>	431 432 433-436 433 434 435 436
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995	431 432 433-436 433 434 435 436 437-441
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995	431 432 433-436 433 434 435 436 437-441
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995	431 432 433-436 433 434 435 436 437-441 437 438
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995	431 432 433-436 433 434 435 436 437-441
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995 2. Headlight range control 3. Headlights, side lights	431 432 433-436 433 434 435 436 437-441 437 438
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995 2. Headlight range control 3. Headlights, side lights 4. Lighting switch, series resistor - town driving light	431 432 433-436 433 434 435 436 437-441 437 438 439 440
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995 2. Headlight range control 3. Headlights, side lights 4. Lighting switch, series resistor - town driving light 5. Front fog lights, rear fog light	431 432 433-436 433 434 435 436 437-441 437 438 439 440 441
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995 2. Headlight range control 3. Headlights, side lights 4. Lighting switch, series resistor - town driving light 5. Front fog lights, rear fog light 201Fitting locations:Relay plate with fuse box and additional relay plate	431 432 433-436 433 434 435 436 437-441 437 438 439 440 441
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light  118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light  119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995 2. Headlight range control 3. Headlights, side lights 4. Lighting switch, series resistor - town driving light 5. Front fog lights, rear fog light 201Fitting locations: Relay plate with fuse box and additional relay plate 1. Relay plate with fuse box and additional relay plate	431 432 433-436 433 434 435 436 437-441 437 438 439 440 441 442-447 442
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995 2. Headlight range control 3. Headlights, side lights 4. Lighting switch, series resistor - town driving light 5. Front fog lights, rear fog light 201Fitting locations:Relay plate with fuse box and additional relay plate 1. Relay plate with fuse box and additional relay plate 2. Fuse locations	431 432 433-436 433 434 435 436 437-441 437 438 439 440 441 442-447 442
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995 2. Headlight range control 3. Headlights, side lights 4. Lighting switch, series resistor - town driving light 5. Front fog lights, rear fog light 201Fitting locations:Relay plate with fuse box and additional relay plate 1. Relay plate with fuse box and additional relay plate 2. Fuse locations 3. Relay locations	431 432 433-436 433 434 435 436 437-441 437 438 439 440 441 442-447 442 443
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995 2. Headlight range control 3. Headlights, side lights 4. Lighting switch, series resistor - town driving light 5. Front fog lights, rear fog light 201Fitting locations:Relay plate with fuse box and additional relay plate 1. Relay plate with fuse box and additional relay plate 2. Fuse locations	431 432 433-436 433 434 435 436 437-441 437 438 439 440 441 442-447 442
3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 118 - Trailer towing Vento, From May 1995 1. Trailer towing Vento, From May 1995 2. Left tail light 3. Trailer socket, rear fog light cut-out, contact switch 4. Right tail light 119 - Town driving lights Great Britain, From May 1995 1. Town driving lights Great Britain, From May 1995 2. Headlight range control 3. Headlights, side lights 4. Lighting switch, series resistor - town driving light 5. Front fog lights, rear fog light 201Fitting locations:Relay plate with fuse box and additional relay plate 1. Relay plate with fuse box and additional relay plate 2. Fuse locations 3. Relay locations	431 432 433-436 433 434 435 436 437-441 437 438 439 440 441 442-447 442 443

6Fitting locations:Relay plate with fuse box and additional relay plate	447
202Fitting locations:Multi-pin connectors	448-452
1. Multi-pin connectors	448
2. On engine	449
3. On engine	450
4. On body	451
5. On body	452
203Fitting locations:Control units and relays	453-459
1. Contents	453
Pump relay control unit for central locking system	454
3. Radiator fan 2nd speed control unit with fan run-on	455
4. Radiator fan 3rd speed control unit without fan run-on	456
5. Radiator fan 2nd and 3rd speed control unit with fan run-on, vehicles with air conditioner	457
6. Anti-theft warning system control unit	458
7. Climatronic control unit	459
401Fault finding programme:Checking dash panel insert	460-464
1. Calling up dash panel insert test mode	460
2Fault finding programme:Checking dash panel insert	461
3. Checking dash panel insert power supply	462
4. Checking warning lamps in dash insert	463
5Fault finding programme:Checking dash panel insert	464
402Fault finding programme:Checking coolant temperature gauge	465-466
1. Checking coolant temperature gauge	465
2Fault finding programme:Checking coolant temperature gauge	466
403Fault finding programme:Checking fuel gauge	467-470
1. Contents	467
2. Checking fuel gauge	468
3. Checking fuel gauge sender (with adjustment screw)	469
4. Checking fuel gauge sender (without adjustment screw)	470
404Fault finding programme:Checking digital sound packet (Nokia)	471-472
1. Checking Digital sound packet (Nokia)	471
2Fault finding programme:Checking digital sound packet (Nokia)	472
405Fault finding programme:Checking additional heater glow pin plugs (for engines with engine	473-475
code 1Z, AFN, AHU and AEY)	
1. Function, Test prerequisites, Test preparation	473
2Fault finding programme:Checking additional heater glow pin plugs (for engines with engine code	474
1Z, AFN, AHU and AEY)	., .
3Fault finding programme:Checking additional heater glow pin plugs (for engines with engine code	475
1Z, AFN, AHU and AEY)	170
406Fault finding programme:Checking exterior mirror	476-484
1. Contents, Test prerequisites	476
Left exterior mirror not functioning	477
3Fault finding programme:Checking exterior mirror	478
4. Left exterior mirror heating not functioning	479
5Fault finding programme:Checking exterior mirror	480
6. Right exterior mirror not functioning	481
7Fault finding programme:Checking exterior mirror	482
8. Right exterior mirror heating not functioning	483
S. Right extend mirror heating not functioning     Fault finding programme:Checking exterior mirror	463 484
J I duit infamy programme. One onling exterior minor	704