



Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Technical data | 1 |
| 1.1 Running gear | 1 |
| 1.2 Wheels, tyres | 1 |
| 2 Checklist for evaluating running gear of accident vehicles | 2 |
| 3 General information | 4 |
| 40 - Front suspension | 5 |
| 1 Appraisal of accident vehicles | 5 |
| 2 Electrical/electronic components and locations | 6 |
| 2.1 Vehicle level sender on vehicles with dynamic headlight range control - general notes | 6 |
| 2.2 Vehicle level sender G78 on front axle | 7 |
| 2.3 Vehicle level sender G78 on front axle, R32 | 8 |
| 2.4 Vehicle level sender G76 on rear axle, front-wheel drive | 9 |
| 2.5 Vehicle level sender G76 on rear axle, four-wheel drive | 10 |
| 3 Repairing front suspension | 12 |
| 3.1 Overview - front axle | 12 |
| 3.2 I - Assembly overview, subframe, anti-roll bar and suspension link | 13 |
| 3.3 Modified fastening for anti-roll bar | 15 |
| 3.4 Checking swivel joint | 15 |
| 3.5 Removing and installing swivel joint | 16 |
| 3.6 Removing and installing suspension link | 18 |
| 3.7 Renewing suspension link bushes | 20 |
| 3.8 Removing and installing subframe | 23 |
| 3.9 Renewing bonded rubber bushes in subframe | 25 |
| 3.10 Repairing threads in longitudinal member | 27 |
| 3.11 II - Assembly overview - wheel bearing | 27 |
| 3.12 Removing and installing front wheel bearing with wheel bearing housing installed | 34 |
| 3.13 III - Assembly overview - suspension strut | 38 |
| 3.14 Vehicle data sticker | 40 |
| 3.15 Removing and installing suspension strut | 40 |
| 3.16 Repairing front coil spring suspension strut | 42 |
| 4 Repairing front suspension, R32 | 45 |
| 4.1 Overview - front axle | 45 |
| 4.2 I - Assembly overview - subframe, anti-roll bar and suspension link | 46 |
| 4.3 Checking swivel joint | 47 |
| 4.4 Removing and installing swivel joint | 48 |
| 4.5 Removing and installing suspension link | 50 |
| 4.6 Renewing suspension link bushes | 50 |
| 4.7 Removing and installing subframe | 53 |
| 4.8 Renewing bonded rubber bushes in subframe | 55 |
| 4.9 Repairing threads in longitudinal member | 57 |
| 4.10 II - Assembly overview - wheel bearing | 58 |
| 4.11 Pressing out and pressing in front wheel bearing | 63 |
| 4.12 III - Assembly overview - suspension strut | 67 |
| 4.13 Removing and installing suspension strut | 68 |
| 4.14 Repairing front coil spring suspension strut | 71 |
| 5 Repairing front drive shafts | 73 |
| 5.1 Overview - drive shafts | 73 |
| 5.2 Removing and installing drive shafts | 74 |
| 5.3 I - Repairing front drive shaft with constant velocity joint | 78 |
| 5.4 Checking outer constant velocity joint | 84 |



| | | |
|-----------|--|------------|
| 5.5 | Checking inner constant velocity joint | 85 |
| 5.6 | II - Repairing front drive shaft with constant velocity joint VL 3700 | 87 |
| 5.7 | III - Repairing front drive shaft with triple roller joint AAR 2000 | 91 |
| 5.8 | Dismantling and assembling triple roller joint | 94 |
| 5.9 | IV - Repairing front drive shaft with triple roller joint AAR 2900 | 96 |
| 5.10 | Dismantling and assembling triple roller joint AAR 2900 | 100 |
| 5.11 | V - Repairing drive shaft with triple roller joint AAR 3300i | 104 |
| 5.12 | Dismantling and assembling triple roller joint AAR 3300i | 108 |
| 42 | - Rear suspension | 111 |
| 1 | Appraisal of accident vehicles | 111 |
| 2 | Repairing rear axle | 112 |
| 2.1 | Removing and installing rear axle | 112 |
| 2.2 | Assembly overview - rear axle beam | 116 |
| 2.3 | Removing and installing bonded rubber bush | 119 |
| 2.4 | Removing and installing hydraulic bonded rubber bush | 123 |
| 2.5 | Removing and installing spring/shock absorber | 128 |
| 2.6 | Assembly overview - shock absorber on vehicle with front-wheel drive | 130 |
| 3 | Repairing wheel bearing | 132 |
| 3.1 | Repairing wheel bearing, front-wheel drive vehicles | 132 |
| 3.2 | Removing and installing wheel bearing/wheel hub on vehicles with disc brakes | 133 |
| 3.3 | Removing and installing wheel bearing/hub unit on vehicles with drum brakes | 136 |
| 4 | Repairing rear axle (vehicles with four-wheel drive) | 139 |
| 4.1 | Rear axle for four-wheel drive: exploded view | 139 |
| 4.2 | Removing and installing spring | 140 |
| 4.3 | Removing and installing spring, R32 | 145 |
| 4.4 | Removing and installing shock absorber | 151 |
| 4.5 | Assembly overview - springs and shock absorbers (four-wheel drive vehicles) | 153 |
| 5 | Assembly overview - trailing arm and transverse links | 155 |
| 5.1 | Pressing rear wheel bearing out and in with trailing arm installed | 158 |
| 5.2 | Removing and installing trailing arm bush | 162 |
| 5.3 | Removing and installing upper ball joints/bonded rubber bushes | 165 |
| 5.4 | Removing and installing lower ball joint/bonded rubber bush | 169 |
| 5.5 | Removing and installing trailing arm | 173 |
| 5.6 | Removing and installing transverse link | 177 |
| 6 | Assembly overview for subframe with final drive | 181 |
| 6.1 | Removing and installing subframe | 181 |
| 6.2 | Removing and installing subframe bushes | 185 |
| 6.3 | Removing and installing bonded rubber bushes for final drive | 187 |
| 7 | Repairing rear drive shaft | 190 |
| 7.1 | Removing and installing rear drive shafts | 190 |
| 7.2 | Repairing drive shaft with rear constant velocity joint | 192 |
| 43 | - Self-levelling suspension | 199 |
| 44 | - Wheels, tyres, vehicle geometry | 200 |
| 1 | Appraisal of accident vehicles | 200 |
| 2 | Torque settings for wheel bolts | 201 |
| 3 | Wheel alignment | 202 |
| 3.1 | General | 202 |
| 3.2 | Test prerequisites: | 203 |
| 3.3 | Test preparations | 203 |
| 3.4 | Vehicle data sticker | 204 |
| 3.5 | Wheel alignment specifications | 205 |
| 3.6 | Adjusting camber at front axle | 208 |



| | | |
|----------------------|--|------------|
| 3.7 | Adjusting camber on rear axle, vehicles with front-wheel drive | 209 |
| 3.8 | Adjusting rear axle camber, vehicles with four-wheel drive | 209 |
| 3.9 | Adjusting toe setting on rear axle (front-wheel drive vehicles) | 210 |
| 3.10 | Adjusting toe setting at rear wheels (four-wheel drive vehicles) | 210 |
| 3.11 | Adjusting front axle toe | 211 |
| 3.12 | Checking left and right-hand wheel lock | 211 |
| 4 | Wheels, tyres | 213 |
| 4.1 | Removing and installing wheel trim cap | 213 |
| 5 | Wheels, tyres | 214 |
| 5.1 | Models with breakdown set | 214 |
| 5.2 | Tyre sealant | 214 |
| 5.3 | Removing a tyre | 214 |
| 5.4 | Fitting a new tyre | 215 |
| 5.5 | Tyre sealant disposal | 215 |
| 6 | Instructions for changing or fitting wheels | 216 |
| 6.1 | Fitting wheels | 217 |
| 7 | Protecting wheel centring seat against corrosion | 218 |
| 8 | Vibration due to wheels/tyres - causes and rectification | 219 |
| 8.1 | Causes of vibration | 219 |
| 8.2 | Balancing wheels | 219 |
| 8.3 | Conducting a road test before balancing wheels | 219 |
| 8.4 | Balancing wheels on stationary wheel balancing machine | 220 |
| 8.5 | Vibration control system VAS 6230 | 222 |
| 8.6 | Finish balancer | 222 |
| 8.7 | Radial and lateral run-out of wheels and tyres | 223 |
| 8.8 | Checking radial and lateral run-out on wheels and tyres with tyre gauge V.A.G 1435 | 223 |
| 8.9 | Checking radial and lateral run-out on wheel rim | 224 |
| 8.10 | Matching | 225 |
| 8.11 | Flat spots caused by storage or handling | 226 |
| 48 - Steering | | 228 |
| 1 | Appraisal of accident vehicles | 228 |
| 2 | Airbag | 229 |
| 3 | Steering column | 230 |
| 3.1 | Removing and installing steering column | 230 |
| 3.2 | Checking steering column for damage | 236 |
| 3.3 | Removing and installing steering lock housing | 237 |
| 3.4 | Assembly overview - crossmember for steering column | 238 |
| 3.5 | Steering column variations | 239 |
| 3.6 | Removing and installing locking cable for ignition with key removal lock | 240 |
| 3.7 | Checking ignition key removal lock | 241 |
| 4 | Repairing power steering | 242 |
| 4.1 | Removing and installing power-assisted steering rack | 242 |
| 4.2 | Assembly overview - power steering rack (LHD) | 247 |
| 4.3 | Assembly overview - power steering rack (RHD) | 249 |
| 4.4 | Assembly overview, power steering rack with heat shield (vehicles with four-wheel drive) | 250 |
| 4.5 | Removing and installing track rod | 252 |
| 4.6 | Revised track rod ball joints | 253 |
| 4.7 | Revised track rods | 254 |
| 4.8 | Checking play, tightness and bellows of track rod ball joints | 255 |
| 4.9 | Determining centre position of steering rack | 255 |
| 4.10 | Adjusting steering rack | 255 |
| 5 | Vane pump, reservoir and hydraulic lines | 257 |



| | | |
|----------|---|------------|
| 5.1 | Checking delivery pressure of vane pump | 257 |
| 5.2 | Removing and installing vane pump, vehicles with bottom-mounted vane pump | 262 |
| 5.3 | Removing and installing vane pump, vehicles with top-mounted vane pump | 264 |
| 5.4 | Assembly overview: vane pump with hydraulic lines | 268 |
| 5.5 | Assembly overview - bottom-mounted power steering pump | 281 |
| 5.6 | Assembly overview - top-mounted vane pump | 282 |
| 6 | Definitions | 283 |