



Contents

68 - Interior equipment	1
1 Interior mirror	1
1.1 Automatic anti-dazzle interior mirror	1
1.2 Removing interior mirror	2
1.3 Installing interior mirror	2
1.4 Removing and installing interior mirror on vehicles with a rain sensor	2
1.5 Bonding on interior mirror base with rain sensor	3
2 Compartments, covers and trims	5
2.1 Assembly overview - centre console	5
2.2 Removing and installing centre console	5
2.3 Assembly overview - centre console extension	7
2.4 Removing and installing centre console extension	7
2.5 Removing and installing front ashtray	8
2.6 Assembly overview - rear ashtray	10
2.7 Removing and installing rear ashtray	10
2.8 Removing and installing front can holder	12
2.9 Removing and installing rear can holder	12
2.10 Removing and installing glove box	14
2.11 Removing and installing glove box locking cylinder	15
2.12 Removing and installing trim below steering column	16
2.13 Removing and installing front centre armrest	17
2.14 Removing and installing sun visor	18
2.15 Removing and installing middle sun visor	18
3 Grab handles	19
3.1 Removing and installing grab handles	19
4 Sill panel trims	20
4.1 Assembly overview - sill panel trim	20
4.2 Removing and installing sill panel moulding	20
4.3 Assembly overview - sill panel trim	22
4.4 Removing and installing sill panel trim	23
69 - Passenger protection	26
1 Seat belts	26
1.1 Safety regulations for belt tensioners	26
1.2 Disposal of belt tensioner units	26
1.3 Assembly overview - front seat belts	26
1.4 Removing and installing front seat belts	27
1.5 Assembly overview - rear outer seat belts	30
1.6 Removing and installing rear outer seat belts	30
1.7 Assembly overview - centre rear seat belt	32
1.8 Removing and installing centre rear seat belt	32
2 Inspecting seat belts	34
2.1 Points to check	34
3 Checking child seat anchors after an accident	38
3.1 Points to check	38
4 Airbag	39
4.1 Tools	39
4.2 Overview - installation locations	39
4.3 Overview - installation locations	40
4.4 Safety precautions when working on the airbag	42
4.5 Disposal of airbag units	42
4.6 Deactivating the airbag	43



4.7	Renewing airbag units following an accident	43
4.8	Assembly overview - driver airbag unit	44
4.9	Removing and installing driver airbag unit	44
4.10	Assembly overview - driver airbag unit	48
4.11	Removing and installing driver airbag unit	49
4.12	Assembly overview - steering wheel	52
4.13	Removing and installing steering wheel	52
4.14	Removing and installing return ring with slip ring	54
4.15	Assembly overview - front passenger airbag unit	55
4.16	Removing and installing front passenger airbag unit	56
4.17	Assembly overview - front passenger airbag unit	58
4.18	Removing and installing front passenger airbag unit	58
4.19	Removing and installing airbag control unit (J 234)	60
4.20	Assembly overview - driver/front passenger curtain airbag	60
4.21	Removing and installing curtain airbag on driver and passenger side	61
4.22	Assembly overview - driver/front passenger curtain airbag	64
4.23	Removing and installing curtain airbag on driver and passenger side	65
4.24	Assembly overview - driver/front passenger curtain airbag	67
4.25	Removing and installing curtain airbag on driver and passenger side	68
4.26	Assembly overview - driver/front passenger side airbag	71
4.27	Removing and installing driver and front passenger side airbag	71
4.28	Adapting components	73
5	Crash sensors	74
5.1	Assembly overview - driver/front passenger side airbag crash sensor	74
5.2	Removing and installing driver or front passenger side airbag crash sensor	74
5.3	Removing and installing crash sensor for rear side airbag, driver and front passenger sides	77
70	Trim, insulation	80
1	Dash panel	80
1.1	Tools	80
1.2	Removing and installing dash panel	80
2	Door trims	90
2.1	Tools	90
2.2	Assembly overview - front door trim on driver side	90
2.3	Removing and installing front door trim on driver side	91
2.4	Assembly overview - front door trim on passenger side	92
2.5	Removing and installing front door trim on passenger side	93
2.6	Assembly overview - rear door trim	94
2.7	Removing and installing rear door trim	95
2.8	Removing and installing loudspeaker	97
3	Pillar and side trims	99
3.1	Tools	99
3.2	Removing and installing upper A-pillar trim	99
3.3	Assembly overview - upper A-pillar trim	104
3.4	Removing and installing upper A-pillar trim	105
3.5	Removing and installing lower A-pillar trim	106
3.6	Assembly overview - upper B-pillar trim	107
3.7	Removing and installing upper B-pillar trim	108
3.8	Assembly overview - upper B-pillar trim	112
3.9	Removing and installing upper B-pillar trim	113
3.10	Assembly overview - upper B-pillar trim	115
3.11	Removing and installing upper B-pillar trim	116
3.12	Assembly overview - lower B-pillar trim	119
3.13	Removing and installing lower B-pillar trim	119
3.14	Assembly overview - upper C-pillar trim	121



3.15	Removing and installing upper C-pillar trim	122
3.16	Assembly overview - upper C-pillar trim	127
3.17	Removing and installing upper C-pillar trim	128
3.18	Removing and installing upper C-pillar trim	129
3.19	Assembly overview - upper C-pillar trim	135
3.20	Removing and installing upper C-pillar trim	136
3.21	Assembly overview - upper C-pillar trim	137
3.22	Removing and installing upper C-pillar trim	138
3.23	Assembly overview - upper C-pillar trim	142
3.24	Removing and installing upper C-pillar trim	143
3.25	Assembly overview - upper C-pillar trim	145
3.26	Removing and installing upper C-pillar trim	146
3.27	Assembly overview - upper D-pillar trim	147
3.28	Removing and installing upper D-pillar trim	148
3.29	Removing and installing wheel housing trim	150
3.30	Removing and installing wheel housing trim	151
3.31	Removing and installing wheel housing trim	152
3.32	Removing and installing rear shelf	153
3.33	Assembly overview - side trims	155
3.34	Removing and installing side trim	156
4	Luggage compartment trims	159
4.1	Assembly overview - support for luggage compartment cover	159
4.2	Removing and installing support for luggage compartment cover	159
4.3	Removing and installing retractor for luggage compartment cover	160
4.4	Assembly overview - right side luggage compartment trim	161
4.5	Removing and installing right side luggage compartment trim	162
4.6	Assembly overview - right side luggage compartment trim	164
4.7	Removing and installing right side luggage compartment trim	165
4.8	Assembly overview - right side luggage compartment trim	167
4.9	Removing and installing right side luggage compartment trim	168
4.10	Removing and installing right-hand stowage compartment	169
4.11	Removing luggage compartment floor covering	171
4.12	Removing and installing rear lock carrier cover	172
4.13	Removing and installing rear lock carrier cover	174
4.14	Removing and installing rear lock carrier cover	176
5	Rear lid trims	179
5.1	Tools	179
5.2	Assembly overview - rear lid lower trim	179
5.3	Removing and installing rear lid lower trim	180
5.4	Assembly overview - rear lid upper trim	181
5.5	Removing and installing rear lid upper trim	182
5.6	Removing and installing rear lid trim	183
5.7	Assembly overview - rear lid trims	185
5.8	Removing and installing rear lid trim	186
6	Roof trims	189
6.1	Tools	189
6.2	Removing and installing roof frame trim	189
6.3	Removing and installing roof frame trim	190
6.4	Removing and installing moulded headlining	190
6.5	Removing and installing moulded headlining	195
72	Seat frames	199
1	Front seats	199
1.1	Tools	199
1.2	Removing and installing front seat	199



1.3	Assembly overview - front seat	202
1.4	Assembly overview - front seat	203
1.5	Removing and installing front backrest	204
1.6	Removing and installing lumbar support	206
1.7	Removing and installing seat height adjustment element	208
1.8	Assembly overview - backrest lock cable	210
1.9	Removing and installing backrest lock cable	211
1.10	Removing and installing head restraint guides	212
1.11	Removing and installing trim, 8-way seat	213
1.12	Removing and installing control unit, 8-way seat	214
1.13	Removing and installing operating unit, 8-way seat	215
1.14	Removing and installing seat fore and aft adjustment, 8-way seat	216
1.15	Removing front height adjustment drive, 8-way seat	217
1.16	Removing rear height adjustment drive, 8-way seat	218
1.17	Removing backrest adjustment drive, 8-way seat	219
2	Rear seats	221
2.1	Removing and installing rear bench seat	221
2.2	Removing and installing bench seat with integrated child seat	222
2.3	Assembly overview - bench seat	223
2.4	Removing and installing rear bench seat	224
2.5	Removing and installing backrest	225
2.6	Removing and installing centre armrest	227
2.7	Removing and installing right backrest lock	229
74	Seat - padding, covers	232
1	Front seat covers and padding	232
1.1	Tools	232
1.2	Removing and installing front seat cover and padding	232
1.3	Removing and installing front seat cover and padding	234
1.4	Removing and installing front backrest cover and padding	237
1.5	Removing and installing front backrest cover and padding	241
2	Seat heater elements	245
2.1	Removing and installing front seat heater element	245
2.2	Removing and installing front seat backrest heater element	245
3	Rear seat covers and padding	247
3.1	Removing and installing bench seat cover and padding	247
3.2	Removing and installing centre armrest cover	248
3.3	Removing and installing backrest cover and padding	249