



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Vehicle identification data</b>	<b>1</b>
1.1 Vehicle identification number	1
1.2 Identification plate	1
1.3 Vehicle data plate	1
<b>2 Body foam insulation</b>	<b>2</b>
<b>3 Galvanized body parts</b>	<b>3</b>
<b>4 Strengthened steel body panels</b>	<b>4</b>
<b>5 Laser welding</b>	<b>5</b>
<b>6 Body panel gaps/shut lines</b>	<b>6</b>
6.1 Body - front (Golf)	6
6.2 Body - rear (Golf)	8
6.3 Body - front (Bora)	10
6.4 Body - rear (Bora)	12
6.5 Body - rear (estate)	14
<b>7 Body dimensions</b>	<b>16</b>
7.1 Body - front	16
7.2 Body - centre	20
7.3 Body - rear (Golf)	27
7.4 Body - rear (Bora)	30
7.5 Body - rear (estate)	33
7.6 Floor group - front	36
7.7 Floor group - centre	37
7.8 Floor group - rear	38
<b>8 Alignment jig</b>	<b>39</b>
8.1 Overview, Golf	39
8.2 Overview, Bora, Bora estate, Golf estate	50
8.3 Overview, Golf 4MOTION	53
8.4 Overview, Bora 4MOTION, Bora estate 4MOTION, Golf estate 4MOTION	58
8.5 Portal gauge (2-door)	63
8.6 Portal gauge (4-door)	64
<b>50 - Body - front</b>	<b>65</b>
<b>1 Renewing engine bracket</b>	<b>65</b>
1.1 Right engine console	65
<b>2 Renewing intermediate piece</b>	<b>67</b>
2.1 Removing	67
<b>3 Renewing wing connecting plate</b>	<b>69</b>
3.1 Removing	69
<b>4 Renewing upper wheel housing longitudinal member</b>	<b>71</b>
4.1 Removing	71
<b>5 Renewing front wheel housing</b>	<b>73</b>
5.1 Removing	73
<b>6 Renewing front wheel housing - partial renewal</b>	<b>75</b>
6.1 Removing	75
<b>7 Renewing front longitudinal member</b>	<b>77</b>
7.1 Removing	77
<b>8 Renewing front longitudinal member - partial renewal</b>	<b>79</b>
8.1 Removing	79
<b>9 Renewing front section of longitudinal member</b>	<b>81</b>



9.1	Removing	82
<b>51 - Body - centre</b>		<b>85</b>
<b>1</b>	<b>Renewing roof (Golf)</b>	<b>85</b>
1.1	Removing	86
<b>2</b>	<b>Renewing roof (Bora)</b>	<b>89</b>
2.1	Removing	90
<b>3</b>	<b>Renewing roof (estate)</b>	<b>92</b>
3.1	Tools	92
3.2	Dimensions for roof railing	98
<b>4</b>	<b>Renewing front roof cross member</b>	<b>99</b>
4.1	Removing	99
<b>5</b>	<b>Renewing roof reinforcement</b>	<b>101</b>
5.1	Removing	101
<b>6</b>	<b>Renewing rear roof cross member (Golf)</b>	<b>103</b>
6.1	Removing	103
<b>7</b>	<b>Renewing rear roof cross member (Bora)</b>	<b>105</b>
7.1	Removing	105
<b>8</b>	<b>Renewing rear roof cross member (estate)</b>	<b>107</b>
8.1	Removing	107
<b>9</b>	<b>Renewing A-pillar</b>	<b>109</b>
9.1	Removing	109
<b>10</b>	<b>Renewing inner A-pillar</b>	<b>113</b>
10.1	Removing	113
<b>11</b>	<b>Renewing B-pillar (4-door), renewing B-pillar (Bora)</b>	<b>116</b>
11.1	Removing	117
<b>12</b>	<b>Renewing inner B-pillar (2-door)</b>	<b>119</b>
12.1	Removing	119
<b>13</b>	<b>Renewing inner B-pillar (Golf 4-door), renewing inner B-pillar (Bora)</b>	<b>122</b>
13.1	Removing	122
<b>14</b>	<b>Renewing outer side member (2-door)</b>	<b>126</b>
14.1	Removing	126
<b>15</b>	<b>Renewing outer side member (Golf 4-door), renewing outer side member (Bora)</b>	<b>129</b>
15.1	Removing	130
<b>16</b>	<b>Renewing side member reinforcement</b>	<b>132</b>
16.1	Includes: Web plate part section	132
<b>17</b>	<b>Renewing floor panel - partial renewal</b>	<b>135</b>
17.1	Removing	135
<b>53 - Body - rear</b>		<b>138</b>
<b>1</b>	<b>Renewing rear cross panel (Golf)</b>	<b>138</b>
1.1	Removing	138
<b>2</b>	<b>Renewing outer rear cross panel (estate)</b>	<b>140</b>
2.1	Tools	140
2.2	Removing	141
<b>3</b>	<b>Renewing complete rear cross panel (estate)</b>	<b>144</b>
3.1	Tools	144
3.2	Removing	144
3.3	Welding in lock carrier	146
3.4	Welding in inner side panel	146
3.5	Welding in lower D-pillar reinforcing	147
3.6	D-pillar reinforcing	148



3.7	Welding in inner D-pillar reinforcing	149
3.8	Welding in tail light cluster mounting	150
3.9	Welding cross member to inner rear cross panel	150
<b>4</b>	<b>Renewing rear cross panel (4MOTION)</b>	<b>151</b>
4.1	Removing	151
<b>5</b>	<b>Renewing complete rear cross panel (4MOTION)</b>	<b>153</b>
5.1	Removing	153
<b>6</b>	<b>Renewing centre piece of rear cross panel (Bora)</b>	<b>157</b>
6.1	Removing	157
<b>7</b>	<b>Renewing rear roof cross panel (Bora)</b>	<b>160</b>
7.1	Removing	160
<b>8</b>	<b>Renewing tail light mounting (Golf)</b>	<b>162</b>
8.1	Removing	162
<b>9</b>	<b>Renewing cross member carrier (Golf)</b>	<b>165</b>
9.1	Removing	165
<b>10</b>	<b>Renewing cross member carrier (Bora)</b>	<b>167</b>
10.1	Removing	167
<b>11</b>	<b>Renewing towing eye (4MOTION)</b>	<b>169</b>
11.1	Removing	169
<b>12</b>	<b>Renewing C-pillar reinforcement (estate)</b>	<b>172</b>
12.1	Removing	172
<b>13</b>	<b>Renewing cover plate (Bora)</b>	<b>174</b>
13.1	Removing	174
<b>14</b>	<b>Renewing longitudinal member - partial renewal (Golf)</b>	<b>176</b>
14.1	Removing	176
<b>15</b>	<b>Renewing longitudinal member - partial renewal (4MOTION)</b>	<b>178</b>
15.1	Removing	179
<b>16</b>	<b>Renewing rear longitudinal member (Bora)</b>	<b>181</b>
16.1	Removing	181
<b>17</b>	<b>Renewing longitudinal member - partial renewal (Bora)</b>	<b>183</b>
17.1	Removing	183
<b>18</b>	<b>Renewing side panel - partial renewal (2-door)</b>	<b>185</b>
18.1	Removing	186
<b>19</b>	<b>Renewing side panel - partial renewal (Golf 4-door)</b>	<b>189</b>
19.1	Removing	190
<b>20</b>	<b>Renewing side panel - partial renewal (Bora)</b>	<b>193</b>
20.1	Removing	193
<b>21</b>	<b>Renewing side panel - partial renewal (estate)</b>	<b>197</b>
21.1	Removing	197
<b>22</b>	<b>Renewing outer wheel housing liner - partial renewal (Golf)</b>	<b>202</b>
22.1	Removing	202
<b>23</b>	<b>Renewing outer wheel housing liner - partial renewal (Bora)</b>	<b>204</b>
23.1	Removing	204
<b>24</b>	<b>Renewing outer wheel housing liner - partial renewal (estate)</b>	<b>207</b>
24.1	Removing	207
<b>25</b>	<b>Renewing spare wheel well (Golf)</b>	<b>210</b>
25.1	Removing	210
<b>26</b>	<b>Renewing spare wheel well - partial renewal (Golf)</b>	<b>212</b>
26.1	Removing	212
<b>27</b>	<b>Renewing spare wheel well (4MOTION)</b>	<b>214</b>
27.1	Removing	214



<b>28</b>	<b>Renewing spare wheel well (Bora)</b> .....	<b>217</b>
28.1	Removing .....	217