



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification of gearbox</b>	<b>1</b>
1.1 Location on gearbox	1
1.2 Code letters, allocation, ratios, capacities	1
<b>2 Identifying rear final drive</b>	<b>7</b>
2.1 Location on final drive	7
2.2 Code letters, allocation, ratios, capacities	7
<b>3 Overview - power transmission</b>	<b>10</b>
<b>4 Calculation of gear ratios</b>	<b>12</b>
4.1 Notes on performance test	12
<b>5 General repair instructions</b>	<b>13</b>
5.1 Components	13
<b>30 - Clutch</b>	<b>16</b>
<b>1 Fault finding, power transmission</b>	<b>16</b>
<b>2 Repairing clutch mechanism</b>	<b>17</b>
2.1 Overview	17
2.2 Assembly overview - pedal cluster	18
2.3 Distinguishing between clutch pedal switches F36	19
2.4 Removing and installing clutch pedal switch F36 with rectangular housing	19
2.5 Removing and installing clutch pedal switch F36 with round housing	20
2.6 Removing and installing over-centre spring	20
2.7 Removing and installing clutch pedal	22
2.8 Assembly overview - hydraulic system	23
2.9 Removing and installing master cylinder	25
2.10 Bleeding clutch system	28
<b>3 Repairing clutch release mechanism</b>	<b>30</b>
<b>4 Repairing clutch</b>	<b>33</b>
<b>34 - Controls, housing</b>	<b>36</b>
<b>1 Vehicle diagnostic, testing and information system VAS 5051</b>	<b>36</b>
1.1 Connecting vehicle diagnostic, testing and information system VAS 5051 and selecting function	36
<b>2 Electrical/electronic components and fitting locations</b>	<b>38</b>
2.1 Removing and installing electrical and electronic components	39
2.2 Removing and installing Haldex coupling pump V181	41
<b>3 Checking Haldex coupling</b>	<b>43</b>
3.1 Electrical check of Haldex coupling	43
<b>4 Fault finding, power transmission</b>	<b>48</b>
<b>5 Repairing selector mechanism</b>	<b>49</b>
5.1 Installation position of selector mechanism	49
5.2 Removing and installing gear knob and cover	51
5.3 Separating gaiter from gear lever and assembling with gear knob	52
5.4 Repairing gear lever and selector housing	52
5.5 Assembly overview - removing and installing selector cables	54
5.6 Removing and installing selector mechanism	57
5.7 Adjusting selector mechanism, gearbox with retaining pin (through gearbox date 18 05 3)	61
5.8 Adjusting selector mechanism, gearbox with angled rod (gearboxes manufactured as of 19 05 3)	63
5.9 Function	66



<b>6</b>	<b>Removing and installing gearbox</b>	<b>67</b>
6.1	Removing and installing gearbox (vehicles with 4-cylinder engine)	67
6.2	Removing and installing gearbox (vehicles with 5-cylinder engine)	84
6.3	Removing and installing gearbox (vehicles with 6-cylinder engine)	101
<b>7</b>	<b>Removing and installing bevel box</b>	<b>119</b>
7.1	Removing and installing bevel box (vehicles with 4-cylinder engine)	119
7.2	Removing and installing bevel box (vehicles with 5 and 6-cylinder engines)	123
<b>8</b>	<b>Checking gearbox oil</b>	<b>127</b>
<b>9</b>	<b>Dismantling and assembling gearbox</b>	<b>128</b>
9.1	Overview - gearbox	128
9.2	Assembly overview	129
9.3	Removing and installing gearbox housing and selector mechanism through gearbox date 18 05 3	130
9.4	Removing and installing gearbox housing and selector mechanism from gearbox date 19 05 3	132
9.5	Removing and installing input shaft, output shafts, differential, bevel box and selector rods	134
9.6	Installing to engine and gearbox support	137
9.7	Dismantling and assembling procedure for gearboxes through gearbox date 18 5 3	138
9.8	Dismantling and assembling procedure for gearboxes from gearbox date 19 05 3	144
<b>10</b>	<b>Repairing gearbox housing</b>	<b>157</b>
10.1	Repairing gearbox housing, through gearbox date 18 05 3	157
10.2	Repairing gearbox housing, from gearbox date 19 05 3	162
<b>11</b>	<b>Repairing clutch housing</b>	<b>172</b>
11.1	Repairing clutch housing, through gearbox date 18 05 3	172
11.2	Repairing clutch housing, from gearbox date 19 05 3	175
<b>12</b>	<b>Dismantling and assembling selector mechanism in gearbox</b>	<b>180</b>
12.1	Dismantling and assembling selector mechanism on gearbox side, through gearbox date 18 05 3	180
12.2	Dismantling and assembling selector mechanism on gearbox side, from gearbox date 19 05 3	182
<b>13</b>	<b>Repairing selector forks</b>	<b>186</b>
13.1	Repairing selector forks, through gearbox date 18 05 3	186
13.2	Repairing selector forks, from gearbox date 19 05 3	188
<b>35 - Gears, shafts</b>		<b>191</b>
<b>1</b>	<b>Input shaft</b>	<b>191</b>
1.1	Dismantling and assembling input shaft, through gearbox date 18 05 3	191
1.2	Adjusting input shaft (gearboxes manufactured up to 18 05 3)	198
1.3	Dismantling and assembling input shaft (gearboxes manufactured as of 19 05 3)	202
<b>2</b>	<b>Output shaft for 1st to 4th gears</b>	<b>209</b>
2.1	Dismantling and assembling output shaft for 1st through 4th gears	209
2.2	Adjusting output shaft for 1st through 4th gears	221
<b>3</b>	<b>Output shaft for 5th and 6th gears and reverse gear</b>	<b>227</b>
3.1	Dismantling and assembling output shaft for 5th, 6th and reverse gears	227
3.2	Adjusting output shaft for 5th, 6th and reverse gears	237
<b>39 - Final drive - rear differential</b>		<b>243</b>
<b>1</b>	<b>Propshaft</b>	<b>243</b>
1.1	Removing and installing propshaft	243
1.2	Removing and installing front flexible coupling	247
1.3	Removing and installing rear flexible coupling	249
1.4	Repairing propshaft	252
<b>2</b>	<b>Checking function of Haldex coupling</b>	<b>259</b>
<b>3</b>	<b>Seals</b>	<b>260</b>



3.1	Renewing seal for propshaft flange on rear final drive (final drive removed)	260
3.2	Renewing oil seals for flange shafts on rear final drive	262
<b>4</b>	<b>Renewing O-rings</b>	<b>265</b>
4.1	Renewing O-ring between Haldex coupling and pinion housing (final drive removed)	265
4.2	Renewing O-rings for rear final drive housing cover (final drive installed)	267
<b>5</b>	<b>Removing and installing rear final drive</b>	<b>269</b>
5.1	Removing	269
5.2	Installing	271
<b>6</b>	<b>Checking gear oil in rear final drive</b>	<b>274</b>
<b>7</b>	<b>Checking oil level or changing oil in Haldex coupling</b>	<b>275</b>
7.1	Checking oil level in Haldex coupling	275
7.2	Changing oil in Haldex coupling	276
7.3	Changing oil filter for Haldex coupling	277
<b>8</b>	<b>Dismantling and assembling rear final drive</b>	<b>279</b>
8.1	Dismantling and assembling rear final drive	279
8.2	Removing and installing cover for Haldex coupling and plates	280
8.3	Removing and installing pinion housing	281
8.4	Removing and installing differential and bevel gear with stub shaft	283
8.5	Removing and installing cover for Haldex coupling from plate housing	286
8.6	Assembly procedure	289
<b>9</b>	<b>Differential for rear final drive</b>	<b>302</b>
9.1	Dismantling and assembling differential	302
<b>10</b>	<b>Repairing shaft bevel gear bearing</b>	<b>307</b>
10.1	Assembly overview	307
<b>11</b>	<b>Repairing bearing for bevel gear with stub shaft</b>	<b>318</b>
11.1	Assembly overview	318
<b>12</b>	<b>Adjusting shaft bevel gear and bevel gear with stub shaft (final drive gear set)</b>	<b>326</b>
12.1	General information	326
12.2	Adjustment and marking of final drive gear sets	326
12.3	Position of shims	329
12.4	Adjustment overview - rear final drive	329
12.5	Recommended sequence for new adjustment of final drive gear set	330
12.6	Adjusting shaft bevel gear	330
12.7	Adjusting bevel gear (with stub shaft)	336
<b>39 - Final drive - front differential</b>		<b>342</b>
<b>1</b>	<b>Renewing flange shaft oil seals with gearbox and bevel box installed</b>	<b>342</b>
1.1	Renewing oil seal for left flange shaft	342
1.2	Renewing seal for right flange shaft	343
<b>2</b>	<b>Renewing bevel box output flange oil seal (bevel box removed)</b>	<b>346</b>
2.1	Removing	347
2.2	Installing	349
<b>3</b>	<b>Differential for manual gearbox</b>	<b>350</b>
3.1	Dismantling and assembling differential	350
3.2	Adjusting differential	358
<b>4</b>	<b>Adjustment overview - manual gearbox</b>	<b>362</b>
<b>5</b>	<b>Bevel box</b>	<b>363</b>
5.1	Dismantling and assembling bevel box	363
<b>6</b>	<b>Renewing needle bearing</b>	<b>379</b>
6.1	Renewing needle bearing (polygon bearing) for right flange shaft	379
<b>7</b>	<b>Adjusting shaft bevel gear and bevel gear with stub shaft (final drive gear set)</b>	<b>383</b>
7.1	General information	383
7.2	Adjustment and marking of final drive gear sets	383



7.3	Position of shims .....	384
7.4	Adjustment overview - bevel box .....	384
7.5	Recommended sequence for new adjustment of final drive gear set .....	385
7.6	Determining shim "S4" thickness when renewing output flange .....	385
7.7	Adjusting shaft bevel gear .....	386
7.8	Adjusting bevel gear (with stub shaft) .....	393