



Contents

00 - Technical data	1
1 Gearbox identification	1
2 Code letters, engine allocation	2
3 Capacities	3
3.1 Direct shift gearbox	3
3.2 Front bevel box	3
4 General repair instructions	4
4.1 Information on the direct shift gearbox DSG	4
4.2 Special tools	5
4.3 Gearbox	5
4.4 Seals and sealing rings	6
4.5 Checking oil and oil level	6
4.6 Overview	7
4.7 Nuts and bolts	8
4.8 Electrical components	8
4.9 Guided fault finding, vehicle self-diagnosis and testing	8
30 - Clutch	9
1 Notes on clutch*	9
2 Removing and installing clutch	10
2.1 Removing clutch cover (end cover)	10
2.2 Installing clutch cover (end cover)	11
2.3 Removing clutch	13
2.4 Preparing installation of multi-clutch	14
2.5 Installing and adjusting clutch	16
34 - Controls, housing	23
1 Electrical and electronic components and their locations DSG	23
1.1 Removing and installing mechatronics for direct shift gearbox J743 (gearbox installed) ..	23
1.2 Removing and installing mechatronics for direct shift gearbox J743 (gearbox removed) ..	30
1.3 Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509	38
2 Removing and installing oil cooler	40
2.1 Removing	40
2.2 Installing	41
3 Removing and installing oil pump	43
3.1 Removing oil pump	43
3.2 Installing oil pump	44
3.3 Renew seal on selector shaft lever	45
4 Repairing selector mechanism	48
5 Adjust selector lever cable	50
6 Removing and installing gearbox	52
6.1 Removing	52
6.2 Transporting gearbox	54
6.3 Installing	54
6.4 Torque settings	54
7 Changing oil and filter of direct shift gearbox and adjusting oil level	56
7.1 Changing oil and filter	57
35 - Gears, shafts	61
1 Currently, no repairs can be made to gears and shafts.	61



39 - Final drive - rear differential	62
1 Propshaft, Haldex coupling and rear final drive	62
2 Identifying rear final drive	63
2.1 Location on rear final drive	63
2.2 Identification code, assembly allocation, ratios, capacities	63
3 Notes on performance test	66
3.1 Radial oil seal for propshaft flange and shaft bevel gear on rear final drive	66
4 Electrical and electronic components and their locations	67
4.1 Removing and installing electrical and electronic components	68
4.2 Removing and installing Haldex coupling pump V181	70
5 Checking Haldex coupling	72
5.1 Electrical check of Haldex coupling	72
6 Propshaft	77
6.1 Removing and installing propshaft	77
6.2 Removing and installing front flexible coupling	81
6.3 Removing and installing rear flexible coupling	83
6.4 Repairing propshaft	86
7 Checking function of Haldex coupling	93
8 Oil seals	94
8.1 Renewing propshaft flange oil seal on rear final drive (final drive removed)	94
8.2 Renewing oil seals for flange shafts on rear final drive	96
9 Renewing O-rings	99
9.1 Renewing O-ring for pinion housing and Haldex coupling (final drive removed)	99
9.2 Renewing O-ring for rear axle housing cover (final drive installed)	101
10 Removing and installing rear final drive	103
10.1 Removing	103
10.2 Installing	105
11 Checking oil in rear final drive	108
12 Checking oil level or changing oil in Haldex coupling	109
12.1 Checking oil level in Haldex coupling	109
12.2 Changing oil in Haldex coupling	110
12.3 Changing oil filter for Haldex coupling	111
13 Dismantling and assembling rear final drive	113
13.1 Dismantling and assembling rear final drive	113
13.2 Removing and installing cover for Haldex coupling and plates	114
13.3 Removing and installing pinion housing	115
13.4 Removing and installing differential and bevel gear with stub shaft	117
13.5 Removing and installing cover for Haldex coupling from plate housing	120
13.6 Dismantling and assembling procedure	123
14 Differential for rear final drive	135
14.1 Dismantling and assembling differential	135
15 Repairing shaft bevel gear bearing	140
15.1 Assembly overview	140
16 Repairing bearing for bevel gear with stub shaft	151
16.1 Assembly overview	151
17 Adjusting shaft bevel gear and bevel gear with stub shaft (final drive gear set)	159
17.1 General notes	159
17.2 Adjustment and marking of final drive gear sets	159
17.3 Position of shims	162
17.4 Adjustment overview - rear final drive	162
17.5 Recommended sequence for new adjustment of final drive gear set	163
17.6 Adjusting shaft bevel gear	163



17.7	Adjusting bevel gear	169
39	- Final drive - front differential	175
1	Renewing oil seals for flange shafts	175
1.1	Renewing oil seal for left flange shaft	175
1.2	Renewing seal for right flange shaft	176
1.3	Checking oil level in front bevel box	178