



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Notes on removing	4
1.2 Securing engine to assembly stand	8
1.3 Notes on installing	8
1.4 Aligning engine and gearbox mountings	10
1.5 Specified torques	11
1.6 Assembly mountings	11
1.7 Additional information and assembly work for vehicles with air conditioner	12
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Assembly overview - parts I and II	13
1.2 Assembly overview - part I, belt drive	14
1.3 Assembly overview - part II, cylinder block	15
1.4 Removing and installing poly V-belt	17
2 Cylinder block, sealing flange	19
2.1 Assembly overview - aluminium cylinder block	19
2.2 Assembly overview - cast-iron cylinder block	21
2.3 Crankshaft dimensions	22
2.4 Renewing crankshaft oil seal - belt pulley end	23
2.5 Tightening procedure for poly V-belt pulley securing bolt	24
2.6 Removing and installing pressure plate/drive plate	26
2.7 Renewing crankshaft sealing flange - flywheel end	27
3 Pistons and conrods	36
3.1 Assembly overview	36
3.2 Separating new conrods	38
3.3 Piston and cylinder dimensions	39
15 - Cylinder head, valve gear	40
1 Cylinder head	40
1.1 Assembly overview	40
1.2 Checking valve timing	42
1.3 Removing, installing and tensioning toothed belt	43
1.4 Checking semi-automatic toothed belt tensioner	48
1.5 Removing and installing camshaft housing	52
1.6 Removing and installing cylinder head	55
1.7 Checking compression	60
2 Valve gear	63
2.1 Assembly overview	63
2.2 Reworking valve seats	66
2.3 Renewing camshaft oil seals	67
2.4 Checking valve guides	70
2.5 Renewing valve stem seals	71
17 - Lubrication	74
1 Parts of lubrication system	74
1.1 Engine oil	74



1.2	Assembly overview	74
1.3	Removing and installing oil sump	77
1.4	Removing and installing oil pump	78
1.5	Checking oil pressure and oil pressure switch	81
1.6	Removing and installing engine oil cooler (only engine codes ATN, AUS, AZD, BCB)	82
19	- Cooling	83
1	Parts of cooling system	83
1.1	Assembly overview - parts of cooling system, body side	83
1.2	Assembly overview - parts of cooling system, engine side	85
1.3	Coolant hose schematic diagram	86
1.4	Draining and filling coolant	88
1.5	Removing and installing radiator	90
1.6	Removing and installing coolant pump	91
20	- Fuel supply system	94
1	Parts of fuel supply system	94
1.1	Assembly overview - fuel tank with attachments and fuel filter	94
1.2	Safety precautions when working on fuel supply system	97
1.3	Rules for cleanliness	97
1.4	Removing and installing fuel delivery unit	97
1.5	Removing and installing fuel gauge sender G	99
1.6	Removing and installing fuel tank	99
1.7	Crash fuel shut-off	101
1.8	Checking fuel pump	101
2	Accelerator mechanism	108
2.1	Assembly overview - accelerator mechanism	108
2.2	Adjusting accelerator cable	108
3	Electronic power control (EPC)	110
3.1	Assembly overview	110
4	Activated charcoal filter system	111
4.1	Assembly overview	111
4.2	Checking fuel tank breather	112
24	- Mixture preparation - injection	114
1	Injection system	114
1.1	Assembly overview - parts of injection system	114
1.2	Assembly overview - intake manifold	117
1.3	Assembly overview - fuel rail with injectors	119
1.4	Assembly overview - air filter	119
1.5	Cleaning throttle valve module J338	122
1.6	Safety precautions	123
1.7	Rules for cleanliness	124
1.8	Technical data	125
2	Checking components	126
2.1	Checking injectors	126
2.2	Checking fuel pressure regulator and holding pressure	128
2.3	Checking intake air preheating	131
3	Engine control unit	133
3.1	Removing and installing engine control unit	133
26	- Exhaust system	134
1	Parts of the exhaust system	134
1.1	Assembly overview - exhaust manifold with catalytic converter and add-on parts	134
1.2	Assembly overview - silencers with mountings	137



2	Exhaust gas recirculation system	139
2.1	Assembly overview - exhaust gas recirculation system	139
2.2	Checking mechanical exhaust gas recirculation valve	140
28	Ignition system	142
1	Ignition system	142
1.1	Assembly overview - ignition system	142
1.2	Removing and installing ignition coils with output stage	144
1.3	Safety precautions	145
1.4	Test data, spark plugs	146