



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Notes on removing	3
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	8
1.4 Torque settings	9
1.5 Assembly mountings	10
1.6 Additional notes and repair work on vehicles with air conditioning	12
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Assembly overview	13
1.2 Removing and installing poly V-belt	17
2 Removing and installing sealing flange and flywheel or drive plate	20
2.1 Renewing crankshaft oil seal - pulley end-	21
2.2 Removing and installing front sealing flange	23
2.3 Removing and installing drive plate	26
3 Removing and installing crankshaft	28
3.1 Crankshaft dimensions	29
4 Dismantling and assembling pistons and conrods	31
4.1 Checking pistons, piston rings and cylinder bores	32
4.2 Piston and cylinder dimensions	34
15 - Cylinder head, valve gear	35
1 Cylinder head	35
1.1 Removing, installing and tensioning toothed belt	36
1.2 Checking semi-automatic toothed belt tensioning roller	41
1.3 Removing and installing cylinder head	42
1.4 Checking compression	46
2 Repairing valve gear	49
2.1 Reworking valve seats	51
2.2 Renewing exhaust camshaft seal	52
2.3 Removing and installing camshafts	55
2.4 Checking hydraulic tappets	57
2.5 Checking valve guides	58
2.6 Renewing valve guides	58
2.7 Renewing valve stem seals	59
17 - Lubrication	62
1 Removing and installing parts of lubrication system	62
1.1 Engine oil	62
1.2 Assembly overview - parts of lubrication system	62
1.3 Dismantling and assembling oil filler bracket	65
1.4 Dismantling and assembling oil pump with balancer shaft gear assembly	66
1.5 Removing and installing oil pump with balancer shaft gear assembly	67
1.6 Removing and installing oil sump	70
1.7 Checking oil pressure and oil pressure switch	72



19 - Cooling	74
1 Removing and installing parts of cooling system	74
1.1 Parts of cooling system - body side	74
1.2 Parts of cooling system - engine side	76
1.3 Coolant hose schematic diagram	78
1.4 Draining and filling coolant	79
1.5 Removing and installing radiator	81
1.6 Removing and installing coolant pump	83
1.7 Removing and installing thermostat	84
20 - Fuel supply system	87
1 Removing and installing parts of lubrication system	87
1.1 Removing and installing fuel tank with attachments and fuel filter	87
1.2 Removing, installing and checking suction jet pump: vehicles with all-wheel drive	92
1.3 Safety precautions when working on fuel supply system	95
1.4 Rules for cleanliness	96
1.5 Removing and installing fuel delivery unit	96
1.6 Removing and installing fuel gauge sender G	99
1.7 Removing and installing fuel tank	99
1.8 Crash fuel shut-off	101
1.9 Checking fuel pump	101
2 Power control	108
2.1 Repairing power control	108
2.2 Function of EPC system	108
3 Activated charcoal filter system	110
3.1 Function	110
3.2 Repairing parts of activated charcoal filter system	110
3.3 Checking fuel tank breather	111
24 - Mixture preparation - injection	113
1 Repairing injection system	113
1.1 Overview of installation locations	113
1.2 General notes on injection	116
1.3 Dismantling and assembling top part of intake manifold	116
1.4 Dismantling and assembling bottom part of intake manifold	118
1.5 Dismantling and assembling fuel rail with injectors	119
1.6 Dismantling and assembling air filter	120
1.7 Safety precautions	120
1.8 Rules for cleanliness	122
1.9 Technical data	122
2 Checking components	123
2.1 Checking injection rate and injectors for leaks	123
2.2 Checking fuel pressure regulator and holding pressure	125
2.3 Checking variable intake manifold change-over	128
3 Engine control unit	131
3.1 Renewing engine control unit	131
3.2 Adapting functions and components	131
26 - Exhaust system	134
1 Removing and installing parts of exhaust system	134
1.1 Vehicles with front wheel drive	134
1.2 Vehicles with all-wheel drive	137
2 Secondary air system	140
2.1 Function	140



2.2	Removing and installing parts of lubrication system	140
2.3	Checking combination valve	141
28	Ignition system	143
1	Repairing ignition system	143
1.1	General notes on ignition system	143
1.2	Removing and installing parts of ignition system	143
1.3	Safety precautions	145
1.4	Test data, spark plugs	145