

001 - Basic equipment, Golf Variant and Bora Variant	1-21
1. Basic equipment, Golf Variant and Bora Variant	1
2. Battery, ignition/starter switch, X-contact relief relay	2
3. Dash panel insert	3
4. Dash panel insert, immobilizer, rev. counter, odometer display, speedometer	4
5. Dash panel insert, trailer operation warning lamp, digital clock, bonnet contact switch, front left brake pad wear sender, brake pad warning lamp	5
6. Dash panel insert, brake system warning lamp, brake fluid level warning contact, turn signal warning lamps, main beam warning lamp, rear fog light warning lamp	6
7. Turn signal switch, headlight dipper/flasher switch, parking light switch, front left headlight, front left turn signal	7
8. Hazard warning light switch, turn signal relay, front right headlight, front right turn signal	8
9. Left tail light, left brake light, rear left turn signal, left reversing light, reversing lights switch, rear left fog light	9
10. Right tail light, right brake light, rear right turn signal, right reversing light, brake light switch	10
11. Self-diagnosis connection, connection for radio, cigarette lighter	11
12. Light switch, rear fog light switch	12
13. Glove compartment light, number plate lights	13
14. Dual tone horn, tank filler flap remote release switch, horn plate	14
15. Headlight range control regulator, headlight range control motor, illumination regulators - switches and instruments	15
16. Heated rear window switch, heated rear window, luggage compartment light	16
17. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air/recirculated air flap control motor	17
18. Rear window wiper motor, windscreen and rear window washer pump	18
19. Intermittent wiper switch, windscreen wiper motor, automatic intermittent wash and wipe relay	19
20. Front interior light, reading light, left door warning lamp, driver door contact switch, rear left door contact switch	20
21. Rear right reading light, right door warning lamp, illuminated vanity mirror	21
002 - Basic equipment, Golf and Bora	22-42
1. Basic equipment, Golf and Bora	22
2. Battery, ignition/starter switch, X-contact relief relay	23
3. Dash panel insert	24
4. Dash panel insert, immobilizer, rev. counter, odometer display, speedometer	25
5. Dash panel insert, trailer operation warning lamp, digital clock, bonnet contact switch, front left brake pad wear sender, brake pad warning lamp	26
6. Dash panel insert, brake system warning lamp, brake fluid level warning contact, turn signal warning lamps, main beam warning lamp, rear fog light warning lamp	27
7. Turn signal switch, headlight dipper/flasher switch, parking light switch, front left headlight, front left turn signal	28
8. Hazard warning light switch, turn signal relay, front right headlight, front right turn signal	29
9. Left tail light, left brake light, rear left turn signal, left reversing light, reversing lights switch, rear left fog light	30
10. Right tail light, right brake light, rear right turn signal, right reversing light, brake light switch	31
11. Self-diagnosis connection, connection for radio, cigarette lighter	32
12. Light switch, rear fog light switch	33
13. Glove compartment light, number plate lights	34
14. Dual tone horn, tank filler flap remote release switch, horn plate	35
15. Headlight range control regulator, headlight range control motor, illumination regulators - switches and instruments	36
16. Heated rear window switch, heated rear window, luggage compartment light	37
17. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air/recirculated air flap control motor	38
18. Rear window wiper motor, windscreen and rear window washer pump	39
19. Intermittent wiper switch, windscreen wiper motor, automatic intermittent wash and wipe relay	40
20. Front interior light, reading light, left door warning lamp, driver door contact switch, rear left door contact switch	41
21. Rear right reading light, right door warning lamp, illuminated vanity mirror	42
003 - 1.4 l/55 kW - 4AV, engine code AHW	43-53
1. 1.4 l/55 kW - 4AV, engine code AHW	43
2. Alternator, starter	44
3. 4AV injection system control unit, ignition system	45
4. 4CV injection system control unit, coolant temperature sender, Hall sender	46
5. 4CV injection system control unit, throttle valve module, engine speed sender	47

6. 4avant and 4CV injection system control unit, intake manifold pressure sender, intake air temperature sender, knock sensor, injectors	48
7. 4avant and 4CV injection system control unit, lambda probe, activated charcoal filter system solenoid valve, exhaust gas recirculation valve, fuel pump relay	49
8. Fuel pump, fuel gauge sender, coolant shortage indicator sender, heater element for crankcase breather	50
9. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	51
10. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp, exhaust emissions warning lamp	52
11. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection	53
004 - 1.6 l/74 kW Simos, engine code APF	54-70
1. 1.6 l/74 kW Simos, engine code APF	54
2. Alternator, starter	55
3. Current supply relay for Simos control unit	56
4. Simos control unit, ignition system, throttle valve module, throttle valve drive angle sender for electric throttle	57
5. Simos control unit, engine speed sender, power assisted steering pressure switch, coolant temperature sender, knock sensor	58
6. Simos control unit, Hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, variable intake manifold change-over valve, map-controlled engine cooling system thermostat	59
7. Simos control unit, heater element for crankcase breather	60
8. Simos control unit, injectors	61
9. Simos control unit, radiator outlet coolant temperature sender, potentiometer for temperature selection rotary knob, temperature flap position switch, 2-way valve for coolant shut-off valve	62
10. Simos control unit, accelerator position sender, lambda probe	63
11. Simos control unit, cruise control system switch (GND)	64
12. Simos control unit, secondary air pump motor, secondary air inlet valve, clutch pedal switch, cruise control system brake pedal switch, brake light switch	65
13. Simos control unit, lambda probe after catalytic converter, air mass meter, fuel pump relay, activated charcoal filter system solenoid valve	66
14. Fuel pump, fuel gauge sender, coolant shortage indicator sender	67
15. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	68
16. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	69
17. Dash panel insert, electric power control fault lamp, multifunction display, ambient temperature indicator, self-diagnosis connection	70
005 - 1.8 litre/92 kW Motronic, engine codes AGN	71-83
1. 1.8 litre/92 kW Motronic, engine codes AGN	71
2. Alternator, starter	72
3. Motronic control unit, ignition system	73
4. Motronic control unit, coolant temperature sender, hall sender	74
5. Motronic control unit, throttle valve control part, engine speed sensor, power steering pressure switch	75
6. Motronic control unit, knock sensor I, knock sensor II	76
7. Motronic control unit, heater element (crankcase breather)	77
8. Motronic control unit, injectors, air mass meter	78
9. Motronic control unit, lambda probe, activated charcoal filter system solenoid valve, intake manifold change-over valve, inlet camshaft timing adjustment valve, fuel pump relay	79
10. Fuel pump, fuel gauge sender, coolant shortage indicator sender	80
11. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	81
12. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	82
13. Dash panel insert, multi-function display, ambient temperature indicator, self-diagnosis connection, cruise control system warning lamp	83
006 - 2.0 litre/85 kW Motronic, engine codes AQY	84-95
1. 2.0 litre/85 kW Motronic, engine codes AQY	84
2. Alternator, starter	85
3. Motronic control unit, ignition system	86
4. Motronic control unit, coolant temperature sender, Hall sender	87
5. Motronic control unit, throttle valve control unit, knock sensor I, knock sensor II	88
6. Motronic control unit, engine speed sender, injectors	89

7. Motronic control unit, secondary air pump motor, secondary air inlet valve	90
8. Motronic control unit, air mass meter, lambda probes, activated charcoal filter system solenoid valve, fuel pump relay	91
9. Fuel pump, fuel gauge sender, coolant shortage indicator sender, heater element (crankcase breather)	92
10. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	93
11. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	94
12. Dash panel insert, multi-function display, ambient temperature indicator, self-diagnosis connection, cruise control system warning lamp, exhaust emissions warning lamp	95
007 - 2.3 litre/110 kW Motronic, engine codes AGZ	96-110
1. 2.3 litre/110 kW Motronic, engine codes AGZ	96
2. Alternator, starter	97
3. Ignition system	98
4. Motronic control unit, ignition system	99
5. Motronic control unit, coolant temperature sender, intake manifold change-over valve, Hall sender, intake manifold temperature sender, heater element (crankcase breather)	100
6. Motronic control unit, throttle valve control part, knock sensor I, knock sensor II	101
7. Motronic control unit, engine speed sender	102
8. Motronic control unit, injectors	103
9. Motronic control unit, cruise control system (CCS) switch, coolant continued circulation pump	104
10. Motronic control unit, secondary air pump motor, secondary air inlet valve, clutch pedal switch, brake pedal switch for CCS, brake light switch	105
11. Motronic control unit, lambda probe, air mass meter, activated charcoal filter system solenoid valve 1, fuel pump relay	106
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	107
13. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	108
14. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	109
15. Dash panel insert, cruise control system warning lamp, multi-function display, ambient temperature display, self-diagnosis connection	110
008 - 2.8 litre/150 kW Motronic, engine codes AQP	111-128
1. 2.8 litre/150 kW Motronic, engine codes AQP	111-112
2. Alternator, starter	113
3. Motronic control unit, ignition system	114
4. Motronic control unit, throttle valve control unit, throttle valve drive angel sender (electric throttle operation), engine speed sender, Hall sender	115
5. Motronic control unit, coolant temperature sender, knock sensor I, knock sensor II	116
6. Motronic control unit, injectors	117
7. Motronic control unit, continued circulation of coolant pump	118
8. Motronic control unit, intake manifold change-over valve, inlet camshaft timing adjustment valve, heater element (crankcase breather)	119
9. Motronic control unit, accelerator pedal position sender, lambda probe	120
10. Motronic control unit, activated charcoal filter system solenoid valve 1, lambda probe after catalyst, lambda probe after catalyst II	121
11. Motronic control unit, cruise control switch (CCS), Lambda probe II after catalyst	122
12. Motronic control unit, secondary air pump motor, secondary air inlet valve, clutch pedal switch, brake pedal switch for CCS, brake light switch	123
13. Motronic control unit, air mass meter, fuel pump relay	124
14. Fuel pump, fuel gauge sender, coolant shortage indicator sender	125
15. Dash panel insert, oil pressure warning lamp, oil level/oil temperature sender, speedometer sender	126
16. Dash panel insert, coolant temperature gauge and fuel gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	127
17. Dash panel insert, electric throttle control fault lamp, CCS warning lamp, multi-function display, ambient temperature display, self-diagnosis connection, exhaust emissions warning lamp	128
009 - 1.9 l/50 kW - Naturally aspirated diesel engine, engine code AGP	129-141
1. 1.9 l/50 kW - Naturally aspirated diesel engine, engine code AGP	129
2. Alternator, starter	130
3. Diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs - engine	131
4. Diesel direct injection system control unit, glow plug relay, fuel temperature sender, metering adjuster, modulating piston movement sender	132
5. Diesel direct injection system control unit, intake manifold flap motor, intake manifold	133

temperature sender, coolant temperature display sender	
6. Diesel direct injection system control unit, exhaust gas recirculation valve	134
7. Diesel direct injection system control unit, accelerator position sender, kickdown switch, idling speed switch, engine speed sender, needle lift sender	135
8. Diesel direct injection system control unit, cruise control system switch (GND), clutch pedal switch, commencement of injection valve, fuel shut-off valve	136
9. Diesel direct injection system control unit, coolant heating element, brake pedal switch, brake light switch, high and low heat output relay	137
10. Fuel gauge sender, coolant shortage indicator sender	138
11. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	139
12. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	140
13. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, cruise control system warning lamp, glow period warning lamp	141
010 - 1.9 l/66 kW - Turbodiesel engine, engine code AGR	142-155
1. 1.9 l/66 kW - Turbodiesel engine, engine code AGR	142
2. Alternator, starter	143
3. Diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs - engine	144
4. Diesel direct injection system control unit, glow plug relay, fuel temperature sender, metering adjuster, modulating piston movement sender	145
5. Diesel direct injection system control unit, coolant temperature display sender, intake manifold pressure sender, intake manifold temperature sender, heater element for crankcase breather	146
6. Diesel direct injection system control unit	147
7. Diesel direct injection system control unit, kickdown switch, engine speed sender, idling speed switch, accelerator position sender, needle lift sender	148
8. Diesel direct injection system control unit, air mass meter, exhaust gas recirculation valve, variable intake manifold flap change-over valve, exhaust gas recirculation valve, charge pressure control solenoid valve	149
9. Diesel direct injection system control unit, cruise control system switch (GND), clutch pedal switch, commencement of injection valve, fuel shut-off valve	150
10. Diesel direct injection system control unit, coolant heating element, cruise control system brake pedal switch/diesel direct injection system, brake light switch, high and low heat output relay	151
11. Fuel gauge sender, coolant shortage indicator sender	152
12. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	153
13. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	154
14. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, cruise control system warning lamp, glow period warning lamp	155
011 - 1.9 l/85 kW Turbo diesel engine with unit injectors, engine codes AJM	156-170
1. 1.9 l/85 kW Turbo diesel engine with unit injectors, engine codes AJM	156-157
2. Alternator, starter	158
3. Diesel direct injection system control unit, glow plugs - engine	159
4. Diesel direct injection system control unit, glow plug relay, kick-down switch, engine speed sender, idling switch, accelerator pedal position sender, terminal 30 voltage supply relay	160
5. Diesel direct injection system control unit, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, heater element (crankcase breather)	161
6. Diesel direct injection system control unit	162
7. Diesel direct injection system control unit, unit injector solenoid valves, hall sender (for camshaft position)	163
8. Diesel direct injection system control unit, air mass meter, intake manifold flap change-over valve, fuel temperature sender, exhaust gas recirculation valve, charge pressure control solenoid valve	164
9. Diesel direct injection system control unit, cruise control system switch (CCS), clutch pedal switch	165
10. Diesel direct injection system control unit, coolant heater element, cruise cont. sys. brake pedal switch (diesel direct inj. system), brake light switch, high and low heat output relay	166
11. Fuel gauge sender, fuel pump relay, fuel pump (pre-supply pump)	167
12. Oil level/oil temperature sender, oil pressure switch, speedometer sender, coolant shortage indicator sender	168
13. Dash panel insert, coolant temperature gauge and fuel gauge, fuel gauge, rev. counter, oil pressure warning lamp	169
14. Dash panel insert, multi-function display, ambient temperature indicator, self-diagnosis connection, glow period warning lamp, cruise control system warning lamp, speedometer	170
012 - Anti-lock brake system (ABS). anti-locking brake system (ABS) with electronic differential	171-176

lock (EDL) and traction control system (TCS)	
1. Anti-lock brake system (ABS), anti-locking brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS)	171
2. ABS control unit with EDL, brake light switch, longitudinal acceleration sender	172
3. ABS control unit with EDL, ABS hydraulic pump	173
4. ABS control unit with EDL, speed sensor	174
5. ABS control unit with EDL, ABS warning lamp, brake system warning lamp, traction control system warning lamp	175
6. Traction control system switch	176
013 - Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	177-184
1. Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	177
2. ABS/ABS control unit with EDL/ ASR/ ESP, TCS and ESP button	178
3. ABS/ABS control unit with EDL/ ASR/ ESP, steering angle sender	179
4. ABS control unit with EDL/ ASR/ ESP, speed sensor	180
5. ABS/ABS control unit with EDL/ ASR/ ESP, lateral acceleration sender, brake pressure sender, yaw rate sender, ABS hydraulic pump	181
6. ABS control unit with EDL/ ASR/ ESP, longitudinal acceleration sender, brake pressure solenoid valve, brake pressure solenoid trip switch	182
7. ABS/ABS control unit with EDL, brake fluid level warning contact, brake light suppression relay	183
8. Control unit with display in dash panel insert, brake system warning lamp, ABS warning lamp, TCS and ESP warning lamp, handbrake warning switch	184
014 - Airbag system	185-189
1. Airbag system	185-186
2. Airbag control unit, airbag coil connector, front airbag igniter , side airbag crash sensors	187
3. Airbag control unit, side airbag igniter, rear side airbag crash sensor, curtain airbag igniter	188
4. Airbag control unit, belt tensioner igniter, airbag warning lamp	189
015 - 1.4 litre/55 kW Motronic, engine codes APE	190-204
1. 1.4 litre/55 kW Motronic, engine codes APE	190-191
2. Alternator, starter	192
3. Motronic control unit, ignition system	193
4. Motronic control unit, throttle valve control unit, coolant temperature sender, intake air temperature sender, intake manifold pressure sender	194
5. Motronic control unit, Hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	195
6. Motronic control unit, knock sensor, engine speed sender, injectors	196
7. Motronic control unit	197
8. Motronic control unit, accelerator pedal position sender, lambda probe	198
9. Motronic control unit, cruise control system switch (CCS), clutch pedal switch	199
10. Motronic control unit, cruise control system brake pedal switch, brake light switch, lambda probe after catalyst, fuel pump relay, activated charcoal filter system solenoid valve	200
11. Fuel pump, fuel gauge sender, coolant shortage indicator sender, heater element (crankcase breather)	201
12. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	202
13. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	203
14. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multi-function display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	204
016 - 1.6 litre/74 kW Simos, engine codes AEH	205-217
1. 1.6 litre/74 kW Simos, engine codes AEH	205-206
2. Alternator, starter	207
3. Simos control unit, ignition system	208
4. Simos control unit, coolant temperature sender, Hall sender	209
5. Simos control unit, throttle valve control part, engine speed sensor, power steering pressure switch	210
6. Simos control unit, knock sensor, injectors	211
7. Simos control unit, heater element (crankcase breather)	212
8. Simos control unit, lambda probe, air mass meter, activated charcoal filter system solenoid valve, intake manifold change-over valve, fuel pump relay	213
9. Fuel pump, fuel gauge sender, coolant shortage indicator sender	214
10. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	215
11. Dash panel insert. coolant temperature gauge. fuel gauge. rev. counter. speedometer. alternator	216

warning lamp	
12. Dash panel insert, multi-function display, ambient temperature indicator, self-diagnosis connection, exhaust emissions warning lamp	217
017 - 1.8 l/110 kW Motronic, engine code ARZ	218-233
1. 1.8 l/110 kW Motronic, engine code ARZ	218
2. Alternator, starter	219
3. Motronic current supply relay	220
4. Motronic control unit, ignition system	221
5. Motronic control unit	222
6. Motronic control unit, coolant temperature sender, Hall sender, charge air pressure sender, charge pressure control solenoid valve, turbocharger air recirculation valve	223
7. Motronic control unit, throttle valve module, throttle valve drives angle sender (electric throttle), knock sensor 1, intake air temperature sender	224
8. Motronic control unit, engine speed sender, knock sensor 2, power assisted steering pressure switch	225
9. Motronic control unit, injectors, lambda probe	226
10. Motronic control unit, accelerator position sender, lambda probe after catalytic converter, active charcoal filter system solenoid valve 1	227
11. Motronic control unit, fuel pump relay, cruise control system switch (GND), air mass meter	228
12. Motronic control unit, secondary air pump motor, secondary air inlet valve, clutch pedal switch, cruise control system brake pedal switch, brake light switch	229
13. Fuel pump, fuel gauge sender, coolant shortage indicator sender	230
14. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	231
15. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	232
16. Dash panel insert, cruise control system warning lamp, multifunction display, ambient temperature indicator, self-diagnosis connection, exhaust emissions warning lamp	233
018 - Cruise control system (CCS)	234-237
1. Cruise control system (CCS)	234-235
2. Simos control unit, cruise control system switch, clutch pedal switch, cruise control system brake pedal switch, brake light switch	236
3. Simos control unit, throttle valve control unit	237
019 - Cruise control system (CCS)	238-240
1. Cruise control system (CCS)	238
2. Motronic control unit, cruise control system switch, clutch pedal switch, cruise control system brake pedal switch, brake light switch	239
3. Motronic control unit, throttle valve control part	240
020 - Cruise control system (CCS)	241-244
1. Cruise control system (CCS)	241-242
2. Motronic control unit, cruise control system switch, clutch pedal switch, cruise control system brake pedal switch, brake light switch	243
3. Motronic control unit, throttle valve control unit	244
021 - Radiator fan, 2 speed	245-246
1. Radiator fan, 2 speed	245
2. Radiator fan, 2 speed	246
022 - Radiator fan	247-249
1. Radiator fan	247
2. Radiator fan control unit, radiator fan	248
3. Simos control unit, coolant temperature sender - radiator outlet, rotary knob temperature selection potentiometer, temperature flap position switch, coolant cut-off valve two-way valve	249
023 - Radiator fan, 2 speed, with radiator fan run-on	250-253
1. Radiator fan, 2 speed, with radiator fan run-on	250-251
2. Radiator fan control unit, radiator fan thermo-switch	252
3. Radiator fan control unit, radiator fan, continued circulation of coolant pump	253
024 - Radiator fan, 2 speed, (not for models with air conditioner)	254-256
1. Radiator fan, 2 speed, (not for models with air conditioner)	254-255
2. Radiator fan, radiator fan thermo-switch, radiator fan relay connection	256
025 - Air conditioning system	257-261
1. Air conditioning system	257
2. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air/recirculated air flap control motor	258
3. Radiator fan control unit, air conditioning system switch, ambient temperature switch, temperature sender for compressor switch-off	259
4. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling, continued coolant circulation pump	260
5. Radiator fan control unit. radiator fan. thermal switch for radiator fan. high pressure sender	261

026 - Air conditioning system	262-267
1. Air conditioning system	262
2. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air/recirculated air flap control motor	263
3. Radiator fan control unit, air conditioning system switch, ambient temperature switch, temperature sender for compressor switch-off	264
4. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling, continued coolant circulation pump	265
5. Radiator fan control unit, high pressure sender	266
6. Simos control unit, radiator outlet coolant temperature sender, potentiometer for temperature selection rotary knob, temperature flap position switch, 2-way valve for coolant shut-off valve	267
027 - Climatronic	268-275
1. Climatronic	268
2. Climatronic control unit, temperature flap control motor	269
3. Climatronic control unit, central flap control motor, footwell and defrost flap control motor	270
4. Climatronic control unit, air flow flap control motor, vent temperature sender, fresh air intake duct temperature sensor	271
5. Climatronic control unit, ambient temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photo-sensor	272
6. Climatronic control unit	273
7. Radiator fan control unit, radiator fan, air conditioner magnetic coupling, continued coolant circulation pump	274
8. Radiator fan control unit, radiator fan thermal switch, high pressure sender	275
028 - Climatronic	276-284
1. Climatronic	276
2. Climatronic control unit, temperature flap control motor	277
3. Climatronic control unit, central flap control motor, footwell and defroster flap control motor	278
4. Climatronic control unit, air flow flap control motor, vent temperature sender, fresh air intake duct temperature sensor	279
5. Climatronic control unit, ambient temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photosensor	280
6. Climatronic control unit	281
7. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling	282
8. Radiator fan control unit, high pressure sender	283
9. Simos control unit, radiator outlet coolant temperature sender, 2-way valve for coolant shut-off valve, coolant shut-off valve relay	284
029 - 4-speed automatic gearbox (AG4)	285-291
1. 4-speed automatic gearbox (AG4)	285
2. Starter inhibitor and reversing light relay	286
3. Automatic gearbox control unit, multifunction switch	287
4. Automatic gearbox control unit, solenoid valves, gearbox speed sender, kickdown switch, gearbox oil temperature sender	288
5. Automatic gearbox control unit, vehicle speed sender	289
6. Automatic gearbox control unit, selector lever lock solenoid	290
7. Automatic gearbox control unit	291
030 - Four-speed automatic gearbox (AG4)	292-299
1. Four-speed automatic gearbox (AG4)	292-293
2. Starter inhibitor and reversing light relay	294
3. Automatic gearbox control unit, multi-function switch	295
4. Automatic gearbox control unit, solenoid valve, gearbox speed sender, gearbox oil temperature sender	296
5. Automatic gearbox control unit, vehicle speed sender	297
6. Automatic gearbox control unit, selector lever lock solenoid	298
7. Automatic gearbox control unit	299
031 - Four-wheel drive (4 Motion) with petrol engine	300-303
1. Four-wheel drive (4 Motion) with petrol engine	300
2. Four-wheel drive control unit, haldex coupling pump	301
3. Four-wheel drive control unit, hydraulic temperature sender, oil pressure control motor, fuel pump, fuel gauge sender	302
4. Dash panel insert, brake system warning lamp, fuel gauge, coolant temperature gauge, handbrake warning switch	303
032 - Four-wheel drive (4 Motion) with diesel engine	304-308
1. Four-wheel drive (4 Motion) with diesel engine	304
2. Four-wheel drive control unit, haldex coupling pump	305
3. Four-wheel drive control unit, hydraulic temperature sender, oil pressure control motor, oil pressure switch	306

4. Dash panel insert, brake system warning lamp, handbrake warning switch, fuel pump, fuel pump relay, fuel gauge sender	307
5. Dash panel insert, fuel gauge, coolant temperature gauge	308
033 - Fog light and rear fog light	309-314
1. Fog light and rear fog light	309
2. Left fog light, left headlight, left side light, front left turn signal	310
3. Right fog light, fog light relay, right headlight, right side light, front right turn signal	311
4. Light switch, fog light switch, rear fog light switch	312
5. Rear fog light, left tail light, brake light, reversing light	313
6. Dash panel insert, turn signal warning lamps, main beam warning lamp, rear fog light warning lamp	314
034 - Day driving light	315-320
1. Day driving light	315
2. Dash panel insert, turn signal switch, headlight dipper/flasher switch, parking light switch	316
3. Left headlight, left side light, front left turn signal, right headlight, right side light, front right turn signal	317
4. Light switch, rear fog light switch	318
5. Left brake light, rear fog light, left reversing light, left tail light, rear left turn signal, high level brake light	319
6. Right tail light, right brake light, rear right turn signal, right reversing light, high level brake light	320
035 - Headlight washer system	321-323
1. Headlight washer system	321
2. Intermittent wash/wipe relay, intermittent wiper control, headlight washer system pump, windscreen washer fluid level sender	322
3. Intermittent wiper switch, windscreen wiper motor, automatic intermittent wash/wipe relay, windscreen and rear window washer pump	323
036 - Trailer towing	324-328
1. Trailer towing	324
2. Rear left turn signal, left reversing light, left tail light, left brake light, rear fog light	325
3. Trailer towing socket, rear fog light cut-off	326
4. Behind right turn signal, right tail light, right brake light, high level brake light, right reversing light	327
5. Dash panel insert, trailer towing warning lamp, rear fog light warning lamp, turn signal warning lamp	328
037 - Trailer operation	329-333
1. Trailer operation	329
2. Rear left turn signal, left reversing light, left tail light, left brake light, rear fog light	330
3. Trailer socket, rear fog light switch-off	331
4. Rear right turn signal, right tail light, right brake light, high level brake light, right reversing light	332
5. Dash panel insert, trailer operation warning lamp, rear fog light warning lamp, turn signal warning lamps	333
038 - Exterior mirror, electrically adjustable and heated	334-336
1. Exterior mirror, electrically adjustable and heated	334
2. Mirror adjustment switch, electrically adjustable exterior mirror for driver's door	335
3. Front passenger's door electrically adjustable exterior mirror	336
039 - Exterior mirror, electrically adjustable and separated heating	337-340
1. Exterior mirror, electrically adjustable and separated heating	337-338
2. Mirror adjustment switch, electrically adjustable exterior mirror for driver's door	339
3. Electrically adjustable exterior mirror for front passenger's door, heated exterior mirror relay	340
040 - Automatic anti-dazzle interior mirror, rain sensor	341-343
1. Automatic anti-dazzle interior mirror, rain sensor	341
2. Automatic intermittent wash and wipe relay, automatic anti-dazzle interior mirror, rain sensor	342
3. Intermittent wiper switch, windscreen wiper motor, automatic intermittent wash and wipe relay, windscreen and rear window washer pump	343
041 - 12 V socket	344-345
1. 12 V socket	344
2. 12 V socket	345
042 - Telephone system	346-347
1. Telephone system	346
2. Mobile phone operating electronics control unit, aerial, microphone	347
043 - Radio and navigation system with black/white-display, radio navigation system (MFD) with colour display	348-352
1. Radio and navigation system with black/white-display, radio navigation system (MFD) with colour display	348
2. Control unit with display for radio and navigation system.	349

3. Control unit with display for radio and navigation, front loudspeaker, radio, telephone and auxiliary heater aerial, navigation system aerial (GPS)	350
4. Control unit with display for radio and navigation system, rear loudspeaker	351
5. Control unit with display for radio and navigation system	352
044 - Radio and navigation system (black/white-display) with CD changer and 'digital sound package', radio and navigation system (MFD) (colour display) with CD changer and 'digital sound package'	353-359
1. Radio and navigation system (black/white-display) with CD changer and 'digital sound package', radio and navigation system (MFD) (colour display) with CD changer and 'digital sound package'	353
2. Control unit with display for radio and navigation system,	354
3. Control unit with display for radio and navigation system, CD changer	355
4. Control unit with display for radio and navigation, navigation system aerial (GPS), telephone and auxiliary heater aerial	356
5. Control unit with display for radio and navigation system, amplifier 'digital sound package'	357
6. Amplifier 'digital sound package', front right loudspeaker	358
7. Amplifier 'digital sound package', rear right loudspeaker	359
045 - Central locking with remote control	360-372
1. Central locking with remote control	360
2. Central locking and anti-theft alarm system control unit, driver side central locking lock unit, left door warning lamp, central locking deadlock function warning lamp	361
3. Central locking and anti-theft alarm system control unit, front passenger side central locking lock unit, right door warning lamp	362
4. Central locking and anti-theft alarm system control unit, rear left central locking lock unit	363
5. Central locking and anti-theft alarm system control unit, rear right central locking lock unit, rear lid remote release relay, rear lid release motor	364
6. Central locking and anti-theft alarm system control unit, rear lid release switch, luggage compartment light	365
7. Central locking and anti-theft alarm system control unit, rear lid handle release button, key operated switch to block release of rear lid remote, rear lid central locking motor	366
8. Central locking and anti-theft alarm system control unit, rear lid remote release relay, rear lid release motor, rear lid handle release button	367
9. Central locking and anti-theft alarm system control unit, luggage compartment light (only Golf Variant/Bora Variant)	368
10. Convenience system central control unit, sliding sunroof adjustment regulator, sliding sunroof adjustment regulator	369
11. Central locking and anti-theft alarm system control unit, front interior light, rear and front reading lights, illuminated vanity mirror (driver- and front passenger side)	370
12. Central locking and anti-theft alarm system control unit, anti-theft alarm system horn, central locking and anti-theft alarm system aerial, bonnet contact switch	371
13. Central locking and anti-theft alarm system control unit	372
046 - Convenience system	373-391
1. Convenience system	373
2. Driver door control unit, window regulator for driver door, interior locking switch, window regulator switch, rear window regulator isolation switch	374
3. Driver door control unit, driver side central locking lock unit, driver side central locking warning lamp, left door warning lamp	375
4. Driver door control unit, electrically adjustable exterior mirror for driver door	376
5. Driver door control unit, mirror adjustment switch, exterior mirror heater button, mirror fold-in feature system switch	377
6. Front passenger door control unit, window regulator for front passenger door, front passenger side central locking lock unit	378
7. Front passenger door control unit, electrically adjustable exterior mirror for front passenger door, right door warning lamp	379
8. Rear left door control unit, rear left door window regulator, rear left central locking lock unit	380
9. Rear right door control unit, rear right door window regulator, rear right central locking lock unit	381
10. Front interior light, rear and front reading lights, illuminated vanity mirror (driver- and front passenger side)	382
11. Convenience system central control unit	383
12. Convenience system central control unit, sliding sunroof adjustment regulator, sliding sunroof adjustment regulator	384
13. Convenience system central control unit, rear lid central locking motor, rear lid remote release relay, rear lid release motor	385
14. Convenience system central control unit, luggage compartment light (only Golf/ Bora)	386
15. Convenience system central control unit, rear lid handle release button, key operated switch to block release of rear lid remote	387
16. Convenience system central control unit. rear lid remote release relay. rear lid release motor.	388

rear lid handle release button	
17. Convenience system central control unit, luggage compartment light (only Golf Variant/ Bora Variant)	389
18. Convenience system central control unit, anti-theft alarm system horn, central locking and anti-theft alarm system aerial, bonnet contact switch	390
19. Convenience system central control unit	391
047 - Interior monitoring (models with central locking)	392-397
1. Interior monitoring (models with central locking)	392
2. Central locking and anti-theft alarm system control unit, anti-theft alarm system horn, bonnet contact switch	393
3. Central locking control unit and anti-theft alarm system, alarm horn, central locking and anti-theft alarm system aerial	394
4. Central locking control unit and anti-theft alarm system, interior monitoring deactivation switch, front interior light, front reading lights	395
5. Central locking control unit and anti-theft alarm system, transmitter and sensor for interior monitoring, reading lights rear	396
6. Central locking control unit and anti-theft alarm system	397
048 - Interior monitoring (models with convenience system)	398-403
1. Interior monitoring (models with convenience system)	398
2. Convenience system central control unit, anti-theft alarm system horn, bonnet contact switch	399
3. Convenience system central control unit, alarm horn, central locking and anti-theft alarm system	400
4. Convenience system central control unit, interior monitoring deactivation switch, front interior light, front reading lights	401
5. Convenience system central control unit, sender and sensor for interior monitoring, reading lights rear	402
6. Convenience system central control unit	403
049 - Sliding / tilting sunroof	404-405
1. Sliding / tilting sunroof	404
2. Sliding sunroof adjustment control unit, sliding sunroof adjustment regulator	405
050 - Gas discharge headlights with automatic headlight range control	406-411
1. Gas discharge headlights with automatic headlight range control	406
2. Left gas discharge light control unit, left gas discharge bulb, left main beam bulb, left side light bulb, front left turn signal bulb	407
3. Headlight range control, control unit, headlight range control motor	408
4. Control unit for headlight range control, vehicle inclination sender	409
5. Right gas discharge light control unit, right gas discharge bulb, right main beam bulb, right side light bulb, front right turn signal bulb	410
6. Dash panel insert, turn signal warning lamp, main beam warning lamp	411
051 - CAN-bus network, drive train	412-415
1. CAN-bus network, drive train	412
2. Dash panel insert, self-diagnosis connection	413
3. Dash panel insert, data bus diagnostic interface, connection for: steering angle sender, airbag control unit, ABS/ABS with EDL control unit	414
4. Connection for: four-wheel drive control unit, automatic gearbox control unit, engine control units	415
052 - 1.6 litre/77kW 4LV, engine codes ATN	416-430
1. 1.6 litre/77kW 4LV, engine codes ATN	416-417
2. Alternator, starter	418
3. 4LV/4MV control unit (injection system), ignition system	419
4. 4LV/4MV control unit (injection system), throttle valve control unit, engine speed sender, coolant temperature sender	420
5. 4LV/4MV control unit (injection system), intake air temperature sender, intake manifold pressure sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, hall sender	421
6. 4LV/4MV control unit (injection system), heater element (crankcase breather)	422
7. 4CV control unit (injection system), injectors, knock sensor	423
8. 4CV control unit (injection system), accelerator pedal position sender, Lambda probe (before catalyst)	424
9. 4LV/4MV control unit (injection system), cruise control system switch (CCS), clutch pedal switch, cruise control system brake pedal switch, brake light switch	425
10. 4LV/4MV control unit (injection system), fuel pump relay, lambda probe after catalyst, activated charcoal filter system solenoid valve 1	426
11. Fuel pump, fuel gauge sender, coolant shortage indicator sender	427
12. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	428
13. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	429

14. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multi-function display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	430
053 - 2.0 l/88 kW Motronic, engine code ATF	431-446
1. 2.0 l/88 kW Motronic, engine code ATF	431-432
2. Alternator, starter	433
3. Motronic current supply relay	434
4. Motronic control unit, ignition system, throttle valve module, throttle valve drive angle sender for electric throttle	435
5. Motronic control unit, coolant temperature display sender, Hall sender, heater element for crankcase breather	436
6. Motronic control unit, engine speed sender, knock sensor 1, knock sensor 2	437
7. Motronic control unit	438
8. Motronic control unit, injectors, lambda probe after catalytic converter	439
9. Motronic control unit, accelerator position sender, lambda probe (upstream of catalytic converter), active charcoal filter system solenoid valve	440
10. Motronic control unit, fuel pump relay, cruise control system switch (GND), air mass meter	441
11. Motronic control unit, secondary air pump motor, clutch pedal switch, cruise control system brake pedal switch, brake light switch	442
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	443
13. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	444
14. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	445
15. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, self-diagnosis connection, exhaust emissions warning lamp	446
054 - Tailgate/boot lid release	447-449
1. Tailgate/boot lid release	447
2. Tailgate/boot lid remote release control unit, tailgate/boot lid release motor, tailgate/boot lid handle release button, contact switch in lock cylinder for tailgate/boot lid	448
3. Tailgate/boot lid remote release control unit, luggage compartment light	449
055 - 5-speed automatic gearbox (AG5)	450-457
1. 5-speed automatic gearbox (AG5)	450-451
2. Starter inhibitor and reversing light relay	452
3. Automatic gearbox control unit, multifunction switch	453
4. Automatic gearbox control unit, solenoid valve, brake pressure switch, gearbox oil temperature sender	454
5. Automatic gearbox control unit, vehicle speed sender, intermediate shaft speed sender, gearbox input speed sender, Tiptronic switch	455
6. Automatic gearbox control unit	456
7. Automatic gearbox control unit, selector lever lock solenoid	457
056 - 1.9 l/110 kW - Turbo diesel engine with unit injectors, engine code ARL	458-472
1. 1.9 l/110 kW - Turbo diesel engine with unit injectors, engine code ARL	458-459
2. Alternator, starter	460
3. Diesel direct injection system control unit, glow plugs - engine	461
4. Diesel direct injection system control unit, glow plug relay, kickdown switch, engine speed sender, idling speed switch, accelerator position sender, terminal 30 voltage supply relay	462
5. Diesel direct injection system control unit, coolant temperature display sender, intake manifold pressure sender, intake manifold temperature sender, heater element for crankcase breather	463
6. Diesel direct injection system control unit	464
7. Diesel direct injection system control unit, unit injector valves, Hall sender, (for camshaft position)	465
8. Diesel direct injection system control unit, air mass meter, variable intake manifold flap change-over valve, fuel temperature sender, exhaust gas recirculation valve, charge pressure control solenoid valve	466
9. Diesel direct injection system control unit, cruise control system switch, clutch pedal switch	467
10. Diesel direct injection system control unit, coolant heating element, cruise control system brake pedal switch/diesel direct injection system, brake light switch, high and low heat output relay	468
11. Fuel pump relay, fuel gauge sender, fuel pump (pre-supply pump)	469
12. Oil level and oil temperature sender, oil pressure switch, speedometer sender, coolant shortage indicator sender	470
13. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, oil pressure warning lamp	471
14. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, glow period warning lamp, cruise control system warning lamp, speedometer	472

057 - Radiator fan, 2 speed, for vehicles with four-wheel drive and trailer tow bar (not for models with air conditioner)	473-475
1. Radiator fan, 2 speed, for vehicles with four-wheel drive and trailer tow bar (not for models with air conditioner)	473
2. Radiator fan control unit, radiator fan thermo-switch	474
3. Radiator fan control unit, radiator fan	475
058 - Multi-function steering wheel for CCS and radio	476-479
1. Multi-function steering wheel for CCS and radio	476
2. Operating unit in steering wheel, horn plate, airbag coil connector, airbag igniter, driver's side	477
3. Multi-function steering wheel control unit, dual tone horn relay	478
4. Multi-function steering wheel control unit, cruise control system switch (CCS), dual tone horn	479
059 - Radio systems	480-483
1. Radio systems	480
2. Radio, CD changer, front left loudspeaker	481
3. Radio, front right loudspeaker, rear loudspeaker	482
4. Radio, aerial	483
060 - Driving school vehicle	484-486
1. Driving school vehicle	484
2. Footwell lighting switch, left footwell light, warning buzzer switch, brake pedal switch, buzzer	485
3. Clutch pedal switch for warning buzzer (front passenger's side), brake pedal switch for engine off (front passenger's side), accelerator pedal switch for warning buzzer (front passenger's side), 12 V socket, buzzer	486
061 - Radio and navigation system (MFD) (colour display) with traffic information evaluation	487-491
1. Radio and navigation system (MFD) (colour display) with traffic information evaluation	487
2. Control unit with display for radio and navigation system,	488
3. Control unit with display for radio and navigation, traffic information control unit, front loudspeaker, radio, telephone and auxiliary heater aerial, navigation system aerial (GPS)	489
4. Control unit with display for radio and navigation system, rear loudspeaker	490
5. Control unit with display for radio and navigation system	491
062 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS)	492-497
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS)	492
2. ABS/ABS with EDL/TCS control unit, traction control system switch	493
3. ABS/ABS with EDL/TCS control unit, ABS hydraulic pump	494
4. ABS/ABS with EDL/TCS control unit, speed sensors	495
5. ABS/ABS with EDL/TCS control unit, handbrake warning switch, self-diagnosis connection	496
6. Dash panel insert, brake system warning lamp, ABS warning lamp, TCS warning lamp, brake pad/lining warning lamp, brake fluid level warning contact	497
063 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability programme (ESP)	498-504
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability programme (ESP)	498
2. ABS with EDL/TCS/ESP control unit, TCS/ESP button	499
3. ABS with EDL/TCS/ESP control unit, steering angle sender	500
4. ABS with EDL/TCS/ESP control unit, speed sensors	501
5. ABS with EDL/ TCS/ ESP control unit, lateral acceleration sender, brake pressure sender, yaw rate sender, ABS hydraulic pump, longitudinal acceleration sender	502
6. ABS with EDL/TCS/ESP control unit, handbrake warning switch, self-diagnosis connection	503
7. Dash panel insert, brake system warning lamp, ABS warning lamp, TCS/ESP warning lamp, brake pad/lining warning lamp, brake fluid level warning contact	504
064 - Parking aid	505-508
1. Parking aid	505
2. Parking aid control unit, reversing light switch	506
3. Parking aid control unit, parking aid warning buzzer	507
4. Parking aid control unit, rear parking aid sender	508
065 - 1.6 l/75 kW Simos, engine code AVU	509-526
1. 1.6 l/75 kW Simos, engine code AVU	509
2. Alternator, starter	510
3. Current supply relay for Simos control unit	511
4. Simos control unit, ignition system, throttle valve module, throttle valve drive angle sender for electric throttle	512
5. Simos control unit, engine speed sender, power assisted steering pressure switch, coolant temperature sender, knock sensor	513
6. Simos control unit. Hall sender. exhaust gas recirculation potentiometer. exhaust gas	514

recirculation valve, variable intake manifold change-over valve, map-controlled engine cooling system thermostat	
7. Simos control unit, heater element for crankcase breather	515
8. Simos control unit, injectors	516
9. Simos control unit, radiator outlet coolant temperature sender, potentiometer for temperature selection rotary knob, temperature flap position switch, 2-way valve for coolant shut-off valve	517
10. Simos control unit, air mass meter, lambda probe	518
11. Simos control unit, brake servo control unit, vacuum pump for brakes	519
12. Simos control unit, secondary air pump motor, cruise control system brake pedal switch, brake light switch	520
13. Simos control unit, cruise control system switch, clutch pedal switch	521
14. Simos control unit, lambda probe after catalytic converter, fuel pump relay, active charcoal filter system solenoid valve, accelerator position sender	522
15. Fuel pump, fuel gauge sender, coolant shortage indicator sender	523
16. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	524
17. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	525
18. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	526
066 - 1.6 l/77 kW, 4MV, engine code AZD	527-541
1. 1.6 l/77 kW, 4MV, engine code AZD	527
2. Alternator, starter	528
3. 4MV injection system control unit	529
4. 4MV injection system control unit, ignition system	530
5. 4MV injection system control unit, throttle valve module, engine speed sender, coolant temperature sender	531
6. 4MV injection system control unit, intake air temperature sender, intake manifold pressure sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, Hall sender	532
7. 4MV injection system control unit, heater element for crankcase breather	533
8. 4MV injection system control unit, injectors, knock sensor	534
9. 4MV injection system control unit, accelerator position sender, lambda probe upstream of catalytic converter	535
10. 4MV injection system control unit, cruise control system switch, clutch pedal switch, cruise control system brake pedal switch, brake light switch	536
11. 4MV injection system control unit, fuel pump relay, lambda probe after catalytic converter, activated charcoal filter system solenoid valve	537
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	538
13. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	539
14. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	540
15. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	541
067 - 2.0 litre/85 kW Motronic, engine codes APK	542-553
1. 2.0 litre/85 kW Motronic, engine codes APK	542
2. Alternator, starter	543
3. Motronic control unit, ignition system	544
4. Motronic control unit, coolant temperature sender, hall sender	545
5. Motronic control unit, throttle valve control unit, knock sensor I, knock sensor II	546
6. Motronic control unit, engine speed sender, injectors	547
7. Motronic control unit, heater element (crankcase breather)	548
8. Motronic control unit, air mass meter, lambda probe, activated charcoal filter system solenoid valve, fuel pump relay	549
9. Fuel pump, fuel gauge sender, coolant shortage indicator sender	550
10. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	551
11. Dash panel insert, coolant temperature gauge and fuel gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	552
12. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multi-function display, ambient temperature indicator, self-diagnosis connection, exhaust emissions warning lamp	553
068 - 2.3 l/125 kW Motronic, engine code AQN	554-573
1. 2.3 l/125 kW Motronic. engine code AQN	554

2. Alternator, starter	555
3. Motronic control unit	556
4. Motronic control unit, ignition system	557
5. Motronic control unit, ignition system, throttle valve module, heater element for crankcase breather, continued coolant circulation pump	558
6. Motronic control unit, coolant temperature sender, Hall sender	559
7. Motronic control unit, engine speed sender, knock sensor 1, knock sensor 2	560
8. Motronic control unit	561
9. Motronic control unit, injectors	562
10. Motronic control unit, lambda probe upstream of catalytic converter, inlet camshaft control, variable intake manifold change-over valve	563
11. Motronic control unit, lambda probe after catalytic converter, lambda probe 2	564
12. Motronic control unit, accelerator position sender, lambda probe 2 after catalytic converter, activated charcoal filter system solenoid valve	565
13. Motronic control unit, brake servo control unit, vacuum pump for brakes	566
14. Motronic control unit, secondary air pump motor, secondary air inlet valve, cruise control system brake pedal switch, brake light switch	567
15. Motronic control unit, cruise control system switch, clutch pedal switch	568
16. Motronic control unit, air mass meter, fuel pump relay	569
17. Fuel pump, fuel gauge sender, coolant shortage indicator sender	570
18. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	571
19. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	572
20. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	573
069 - Radio and navigation system (MFD) (colour display) with "digital sound package" and TV tuner	574-581
1. Radio and navigation system (MFD) (colour display) with "digital sound package" and TV tuner	574
2. Control unit with display for radio and navigation system, dash panel insert	575
3. Control unit with display for radio and navigation, radio and telephone aerial, navigation system aerial (GPS)	576
4. Control unit with display for radio and navigation system, traffic information control unit, TV tuner	577
5. Control unit with display for radio and navigation system, rear window aerial, navigation system tuner for TV	578
6. Amplifier 'digital sound package'	579
7. Amplifier 'digital sound package', front loudspeaker	580
8. Amplifier 'digital sound package', rear loudspeaker	581
070 - Radio and navigation system (MFD) (colour display) with CD changer and TV tuner	582-588
1. Radio and navigation system (MFD) (colour display) with CD changer and TV tuner	582
2. Control unit with display for radio and navigation system,	583
3. Control unit with display for radio and navigation system, rear loudspeaker	584
4. Control unit with display for radio and navigation system, CD changer	585
5. Control unit with display for radio and navigation, traffic information control unit, front loudspeaker, radio, telephone and auxiliary heater aerial, navigation system aerial (GPS)	586
6. Control unit with display for radio and navigation system, traffic information control unit, TV tuner	587
7. Control unit with display for radio and navigation system, rear window aerial, navigation system tuner for TV	588
071 - Electric seat adjustment front, memory for driver's seat and exterior mirror	589-598
1. Electric seat adjustment front, memory for driver's seat and exterior mirror	589
2. Seat adjustment (with memory) control unit, height adjustment button, longitudinal adjustment button, backrest adjustment switch driver's seat, 'Emergency "OFF" switch' for memory funktion	590
3. Seat adjustment (with memory) control unit, seat longitudinal adjustment motor, seat front height adjustment motor, seat rear height adjustment motor	591
4. Seat adjustment (with memory) control unit, backrest (top) adjustment motor	592
5. Seat adjustment (with memory) control unit, self-diagnosis connection	593
6. Seat adjustment front passenger's seat	594
7. Door control unit (driver's side), electrically adjustable exterior mirrors for driver's door	595
8. Door control unit (driver's side), mirror adjustment switch, mirror fold system switch	596
9. Door control unit (driver's side), door control unit (front passenger's side)	597
10. Door control unit (front passenger's side), electrically adjustable exterior mirrors for front passenger's door	598
073 - Basic equipment, Golf and Bora	599-619
1. Basic equipment, Golf and Bora	599
2. Batterv. ignition/starter switch. X-contact relief relav	600

3. Dash panel insert	601
4. Dash panel insert, immobilizer, rev. counter, odometer display, speedometer, alternator warning lamp	602
5. Dash panel insert, trailer operation warning lamp, digital clock, bonnet contact switch, front left brake pad wear sender, brake pad warning lamp	603
6. Dash panel insert, brake system warning lamp, brake fluid level warning contact, turn signal warning lamps, main beam warning lamp, rear fog light warning lamp	604
7. Turn signal switch, headlight dipper/flasher switch, parking light switch, front left headlight, front left turn signal	605
8. Hazard warning light switch, turn signal relay, front right headlight, front right turn signal	606
9. Left tail light, left brake light, rear left turn signal, reversing lights switch, left reversing light, rear fog light, high level brake light bulb (Golf)	607
10. Right tail light, right brake light, rear right turn signal, right reversing light, brake light switch, high level brake light (Bora)	608
11. Self-diagnosis connection, connection for radio, cigarette lighter	609
12. Light switch, rear fog light switch	610
13. Glove compartment light, number plate lights	611
14. Dual tone horn, tank filler flap remote release switch, horn plate	612
15. Headlight range control regulator, headlight range control motor, illumination regulators - switches and instruments	613
16. Heated rear window switch, heated rear window, luggage compartment light	614
17. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air/recirculated air flap control motor	615
18. Rear window wiper motor, windscreen and rear window washer pump	616
19. Intermittent wiper switch, windscreen wiper motor, automatic intermittent wash and wipe relay	617
20. Front interior light, rear left reading light, left door warning lamp	618
21. Rear right reading light, right door warning lamp, illuminated vanity mirror	619
074 - Central locking (with remote control)	620-632
1. Central locking (with remote control)	620
2. Central locking and anti-theft alarm system control unit, central locking lock unit (driver's side), Door warning lamp, left, central locking warning lamp -SAFE-	621
3. Central locking control unit and anti-theft alarm system, central locking lock unit (front passenger's side), door warning lamp, right	622
4. Central locking control unit and anti-theft alarm system, central locking lock unit (rear left)	623
5. Central locking control unit and anti-theft alarm system, central locking lock unit (rear right), tailgate/boot lid release motor	624
6. Central locking control unit and anti-theft alarm, luggage compartment light (only Golf/ Bora)	625
7. Central locking control unit and anti-theft alarm system, release button (tailgate/boot lid handle), tailgate/bootlid remote release key switch	626
8. Central locking control unit and anti-theft alarm, tailgate/bootlid release motor, release button (tailgate/boot lid handle)	627
9. Central locking and anti-theft alarm system control unit, luggage compartment light (only Golf estate/Bora estate)	628
10. Central locking control unit and anti-theft alarm system, sliding sunroof adjustment control unit, sliding sunroof adjustment regulator	629
11. Central locking control unit and anti-theft alarm, interior light front, reading lights front and rear, illuminated vanity mirror (driver's and front passenger's side)	630
12. Central locking control unit and anti-theft alarm system, anti-theft alarm system horn, central locking and anti-theft alarm system aerial, bonnet contact switch	631
13. Central locking control unit and anti-theft alarm system	632
075 - Convenience system	633-651
1. Convenience system	633
2. Door control unit (driver's side), window lifters for driver's side, interior locking switch, window lifter switch, rear window lifter isolation switch	634
3. Door control unit (driver side), central locking lock unit (driver side), central locking warning lamp, door warning lamp left	635
4. Door control unit (driver side), mirror adjustment switch, exterior mirror heating button, mirror fold system switch	636
5. Door control unit (driver's side), electrically adjustable exterior mirrors for driver's door	637
6. Door control unit (front passenger's side), window lifter for front passenger's door, central locking lock unit (front passenger's side)	638
7. Door control unit (front passenger's side), electrically adjustable exterior mirrors for front passenger's door, door warning lamp, right	639
8. Door control unit (rear left), rear left window lifter for door, central locking lock unit (rear left)	640
9. Door control unit (rear right). rear right window lifter for door. central locking lock unit	641

(rear right)	
10. Interior light front, reading lights front and rear, illuminated make-up mirror (driver and front passenger's side)	642
11. Convenience system central control unit	643
12. Convenience system central control unit, sliding sunroof adjustment control unit, sliding sunroof adjustment regulator	644
13. Convenience system central control unit, central locking motor, tailgate/boot lid, tailgate/bootlid release motor	645
14. Convenience system central control unit, luggage compartment light (only Golf/ Bora)	646
15. Convenience system central control unit, release button (tailgate/bootlid handle), tailgate/boot lid remote release key switch	647
16. Convenience system central control unit, tailgate/bootlid release motor, release button (tailgate/bootlid handle)	648
17. Convenience system central control unit, luggage compartment light (only Golf Variant/ Bora Variant)	649
18. Convenience system central control unit, anti-theft alarm system horn, central locking and anti-theft alarm system aerial, bonnet contact switch	650
19. Convenience system central control unit	651
076 - Interior monitor	652-656
1. Interior monitor	652
2. Central locking and anti-theft alarm system control unit, convenience system central control unit, anti-theft alarm system horn, bonnet contact switch	653
3. Central locking and anti-theft alarm system control unit, convenience system central control unit, interior monitoring deactivation switch, front interior light, front reading lights	654
4. Central locking and anti-theft alarm system control unit, convenience system central control unit, interior monitoring sensor and sender, rear reading lights	655
5. Central locking and anti-theft alarm system control unit, convenience system central control unit	656
077 - 2.0 l/85 kW Motronic, engine code AZJ	657-672
1. 2.0 l/85 kW Motronic, engine code AZJ	657
2. Alternator, starter	658
3. Motronic current supply relay, Motronic control unit	659
4. Motronic control unit, ignition system	660
5. Motronic control unit, throttle valve module, variable intake manifold change-over valve, heater element for crankcase breather	661
6. Motronic control unit, coolant temperature sender, Hall sender	662
7. Motronic control unit, engine speed sender, knock sensors	663
8. Motronic control unit	664
9. Motronic control unit, injectors, lambda probe after catalytic converter	665
10. Motronic control unit, accelerator position sender, lambda probe (upstream of catalytic converter), active charcoal filter system solenoid valve	666
11. Motronic control unit, fuel pump relay, cruise control system switch (GND), air mass meter	667
12. Motronic control unit, secondary air pump motor, clutch pedal switch, cruise control system brake pedal switch, brake light switch	668
13. Fuel pump, fuel gauge sender, coolant shortage indicator sender	669
14. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	670
15. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	671
16. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	672
078 - 2.8 l/150 kW Motronic, engine code BDE	673-691
1. 2.8 l/150 kW Motronic, engine code BDE	673
2. Alternator, starter	674
3. Motronic current supply relay	675
4. Motronic control unit, ignition system	676
5. Motronic control unit, ignition system, inlet camshaft control valve	677
6. Motronic control unit, throttle valve module, variable intake manifold change-over valve, continued coolant circulation pump, heater element for crankcase breather	678
7. Motronic control unit, engine speed sender, Hall sender, coolant temperature sender	679
8. Motronic control unit, knock sensors	680
9. Motronic control unit, injectors	681
10. Motronic control unit, active charcoal filter system solenoid valve	682
11. Motronic control unit, accelerator position sender, lambda probe	683
12. Motronic control unit, lambda probe after catalytic converter, lambda probe 2	684
13. Motronic control unit, cruise control system switch, lambda probe 2 after catalytic converter	685
14. Motronic control unit. secondary air pump motor. secondary air inlet valve. clutch pedal switch.	686

cruise control system brake pedal switch, brake light switch	
15. Motronic control unit, air mass meter, fuel pump relay	687
16. Fuel pump, fuel gauge sender, coolant shortage indicator sender	688
17. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	689
18. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	690
19. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	691
079 - 1.9 l/74 kW - Turbo diesel engine with unit injectors, engine code AXR	692-705
1. 1.9 l/74 kW - Turbo diesel engine with unit injectors, engine code AXR	692
2. Alternator, starter	693
3. Diesel direct injection system control unit, glow plugs - engine	694
4. Diesel direct injection system control unit, glow plug relay, kickdown switch, engine speed sender, idling speed switch, accelerator position sender, terminal 30 voltage supply relay	695
5. Diesel direct injection system control unit, unit injector valves, Hall sender, (for camshaft position)	696
6. Diesel direct injection system control unit	697
7. Diesel direct injection system control unit, coolant temperature display sender, intake manifold pressure sender, intake manifold temperature sender, heater element for crankcase breather	698
8. Diesel direct injection system control unit, air mass meter, variable intake manifold flap change-over valve, exhaust gas recirculation valve, charge pressure control solenoid valve, intake manifold flap motor	699
9. Diesel direct injection system control unit, cruise control system switch (GND), clutch pedal switch, fuel temperature sender	700
10. Diesel direct injection system control unit, coolant heating element, brake pedal switch, brake light switch, high and low heat output relay	701
11. Fuel pump relay, fuel gauge sender, fuel pump (pre-supply pump)	702
12. Oil level and oil temperature sender, oil pressure switch, speedometer sender, coolant shortage indicator sender	703
13. Dash panel insert, coolant temperature/coolant shortage, fuel gauge, rev. counter	704
14. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, glow period warning lamp, cruise control system warning lamp, speedometer	705
080 - Fog light and rear fog light	706-711
1. Fog light and rear fog light	706
2. Left fog light, left headlight, left side light, front left turn signal	707
3. Right fog light, fog light relay, right headlight, right side light, front right turn signal	708
4. Light switch, fog light switch, rear fog light switch	709
5. Rear fog light, left tail light, brake light, reversing light	710
6. Dash panel insert, turn signal warning lamps, main beam warning lamp, rear fog light warning lamp	711
081 - Day driving light	712-718
1. Day driving light	712
2. Dash panel insert	713
3. Left headlight, left side light, front left turn signal, turn signal switch, headlight dipper/flasher switch	714
4. Right headlight, right side light, front right turn signal	715
5. Light switch, rear fog light switch	716
6. Left brake light, rear fog light, left reversing light, left tail light, rear left turn signal	717
7. Right tail light, right brake light, rear right turn signal, right reversing light, high level brake light	718
082 - Airbags system	719-723
1. Airbags system	719
2. Airbag control unit, airbag coil connector, front airbag igniter, side airbag crash sensors	720
3. Airbag control unit, side airbag igniter, belt tensioner igniter	721
4. Airbag control unit, rear side airbag crash sensor, curtain airbag igniter	722
5. Airbag control unit, airbag warning lamp, diagnostic socket	723
083 - 1.8 l/110 kW Motronic, engine code AUM	724-742
1. 1.8 l/110 kW Motronic, engine code AUM	724-725
2. Alternator, starter	726
3. Motronic current supply relay	727
4. Motronic control unit, ignition system	728
5. Motronic control unit	729
6. Motronic control unit, coolant temperature sender, Hall sender, charge air pressure sender, charge pressure control solenoid valve, turbocharger air recirculation valve, inlet camshaft control valve 1	730
7. Motronic control unit. throttle valve module. throttle valve drives anale sender (electric	731

throttle), knock sensor 1, intake air temperature sender	
8. Motronic control unit, engine speed sender, knock sensor 2, power assisted steering pressure switch	732
9. Motronic control unit, injectors, lambda probe after catalytic converter	733
10. Motronic control unit, accelerator position sender, lambda probe, active charcoal filter system solenoid valve	734
11. Motronic control unit, brake servo control unit, vacuum pump for brakes	735
12. Motronic control unit, secondary air pump relay, secondary air pump motor, secondary air inlet valve, brake light switch, cruise control system brake pedal switch	736
13. Motronic control unit, cruise control system switch, clutch pedal switch	737
14. Motronic control unit, fuel pump relay, air mass meter	738
15. Fuel pump, fuel gauge sender, coolant shortage indicator sender	739
16. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	740
17. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	741
18. Dash panel insert, cruise control system warning lamp, multifunction display, ambient temperature indicator, self-diagnosis connection, exhaust emissions warning lamp	742
085 - e-generation with PDA (personal data assistant)	743-745
1. e-generation with PDA (personal data assistant)	743
2. Position of fuses	744
3. Mobile phone operating electronics control unit, aerial, microphone, pocket PC (PDA)	745
086 - Front seat heating	746-748
1. Front seat heating	746
2. Heated driver seat control unit, temperature sensor, heated driver seat, driver seat cushion lateral support heater	747
3. Heated front passenger seat control unit, temperature sensor, heated front passenger seat cushion, heated front passenger seat backrest	748
087 - Front seat heating, leather seat	749-752
1. Front seat heating, leather seat	749
2. Driver seat cushion lateral support heater, heated driver seat backrest	750
3. Heated driver seat control unit, temperature sensor, heated driver seat	751
4. Heated front passenger seat control unit, temperature sensor, heated front passenger seat cushion, front passenger seat cushion lateral support heater	752
088 - 1.6 l/81 kW Motronic, engine code BAD	753-772
1. 1.6 l/81 kW Motronic, engine code BAD	753
2. Alternator, starter	754
3. Motronic control unit	755
4. Motronic control unit, ignition system	756
5. Motronic control unit, throttle valve module, engine speed sender, coolant temperature sender	757
6. Motronic control unit, intake air temperature sender, intake manifold pressure sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, fuel pressure sender	758
7. Motronic control unit, intake manifold flap potentiometer, Hall sender	759
8. Motronic control unit, knock sensor	760
9. Motronic control unit, injectors	761
10. Motronic control unit, accelerator position sender, Motronic current supply relay	762
11. Motronic control unit, inlet camshaft control valve, fuel pressure regulating valve, fuel metering valve, intake manifold flap air flow control valve	763
12. Motronic control unit, lambda probe, map-controlled engine cooling system thermostat, active charcoal filter system solenoid valve	764
13. Motronic control unit, NOx sensor control unit, NOx sender, brake servo pressure sensor	765
14. Motronic control unit, potentiometer for temperature selection rotary knob, temperature flap position switch, 2-way valve for coolant shut-off valve	766
15. Motronic control unit, cruise control system switch, exhaust gas temperature sender, radiator outlet coolant temperature sender	767
16. Motronic control unit, fuel pump relay, air mass meter, brake pedal switch, cruise control system brake pedal switch, brake light switch, clutch pedal switch	768
17. Fuel pump, fuel gauge sender, coolant shortage indicator sender	769
18. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	770
19. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	771
20. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	772
089 - 1.6 l/77 kW 4LV, engine code BCB	773-787
1. 1.6 l/77 kW 4LV. engine code BCB	773

2. Alternator, starter	774
3. 4LV control unit (injection system), heater element (crankcase breather)	775
4. 4LV control unit (injection system), ignition system	776
5. 4LV control unit (injection system), throttle valve control module, engine speed sender, coolant temperature sender	777
6. 4LV control unit (injection system), intake air temperature sender, intake manifold pressure sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, Hall sender	778
7. 4LV control unit (injection system)	779
8. 4LV control unit (injection system), injectors, knock sensor	780
9. 4LV control unit (injection system), accelerator pedal position sender, lambda probe (before catalyst)	781
10. 4LV control unit (injection system), cruise control system switch (CCS), clutch pedal switch, cruise control system brake pedal switch, brake light switch	782
11. 4LV control unit (injection system), fuel pump relay, lambda probe after catalyst, active charcoal filter system solenoid valve 1	783
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	784
13. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	785
14. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	786
15. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multi-function display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	787
090 - Tailgate/boot lid release	788-790
1. Tailgate/boot lid release	788
2. Tailgate/bootlid remote release control unit, tailgate/bootlid release motor, tailgate/bootlid handle release button, contact switch in lock cylinder for tailgate/bootlid	789
3. Tailgate/boot lid remote release control unit, luggage compartment light	790
091 - Gas discharge headlights with automatic headlight range control	791-796
1. Gas discharge headlights with automatic headlight range control	791
2. Left gas discharge light control unit, left gas discharge bulb, left main beam bulb, left side light bulb, front left turn signal bulb	792
3. Headlight range control, control unit, headlight range control motor	793
4. Control unit for headlight range control, vehicle inclination sender	794
5. Right gas discharge light control unit, right gas discharge bulb, right main beam bulb, right side light bulb, front right turn signal bulb	795
6. Dash panel insert, turn signal warning lamp, main beam warning lamp	796
092 - Multi-function steering wheel for CCS and radio	797-800
1. Multi-function steering wheel for CCS and radio	797
2. Operating unit in steering wheel, horn plate, airbag coil connector, driver airbag igniter	798
3. Multi-function steering wheel control unit, dual tone horn relay	799
4. Multi-function steering wheel control unit, cruise control system switch (CCS), dual tone horn	800
093 - Automatic anti-dazzle interior mirror, rain sensor	801-804
1. Automatic anti-dazzle interior mirror, rain sensor	801
2. Automatic anti-dazzle interior mirror	802
3. Windscreen wiper motor, automatic intermittent wash/wipe relay, rain sensor	803
4. Intermittent wiper switch, automatic intermittent wash/wipe relay, windscreen and rear window washer pump	804
094 - Headlight washer system	805-807
1. Headlight washer system	805
2. Automatic intermittent wash/wipe relay, intermittent wiper control, headlight washer system pump, windscreen washer fluid level sender	806
3. Intermittent wiper switch, windscreen wiper motor, automatic intermittent wash/wipe relay, windscreen and rear window washer pump	807
095 - Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	808-814
1. Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	808
2. ABS/ABS control unit with EDL/ ASR/ ESP, TCS and ESP button	809
3. ABS/ABS control unit with EDL/ ASR/ ESP, steering angle sender	810
4. ABS/ABS control unit with EDL/ ASR/ ESP, speed sensor	811
5. ABS/ABS control unit with EDL/ ASR/ ESP, lateral acceleration sender, brake pressure sender, yaw rate sender, ABS hydraulic pump, longitudinal acceleration sender, ESP sensor unit	812
6. ABS/ABS control unit with EDL/ ASR/ ESP, handbrake warning switch, self-diagnosis connection	813
7. Dash panel insert, brake system warning lamp, ABS warning lamp, ESP and TCS warning lamp, brake pad wear control, brake fluid level warning contact	814

096 - Climatronic	815-823
1. Climatronic	815
2. Climatronic control unit, temperature flap control motor	816
3. Climatronic control unit, central flap control motor, footwell and defroster flap control motor	817
4. Climatronic control unit, air flow flap control motor, vent temperature sender, fresh air intake duct temperature sensor	818
5. Climatronic control unit, ambient temperature sensor, fresh air blower, fresh air blower control unit, evaporator output temperature sender, sunlight penetration photosensor	819
6. Climatronic control unit, air conditioning system magnetic coupling	820
7. Motronic control unit, radiator outlet coolant temperature sender, 2-way valve for coolant shut-off valve	821
8. Radiator fan control unit, radiator fan	822
9. Radiator fan control unit, high pressure sender	823
097 - Radiator fan (not for models with air conditioning system)	824-827
1. Radiator fan (not for models with air conditioning system)	824
2. Radiator fan control unit, radiator fan	825
3. Motronic control unit, potentiometer for temperature selection rotary knob, temperature flap position switch, 2-way valve for coolant shut-off valve	826
4. Motronic control unit, radiator outlet coolant temperature sender	827
098 - Climatronic	828-835
1. Climatronic	828
2. Climatronic control unit, temperature flap control motor	829
3. Climatronic control unit, central flap control motor, footwell and defrost flap control motor	830
4. Climatronic control unit, air flow flap control motor, vent temperature sender, fresh air intake duct temperature sensor	831
5. Climatronic control unit, ambient temperature sensor, fresh air blower, fresh air blower control unit, evaporator out-flow temperature sender, sunlight penetration photo-sensor	832
6. Climatronic control unit	833
7. Radiator fan control unit, radiator fan, air conditioner magnetic coupling, continued coolant circulation pump	834
8. Radiator fan control unit, radiator fan thermal switch, high pressure sender	835
100 - 2.0 l/85 kW Motronic, engine code BEH, bivalent (natural gas/petrol)	836-854
1. 2.0 l/85 kW Motronic, engine code BEH, bivalent (natural gas/petrol)	836
2. Alternator, starter	837
3. Motronic current supply relay	838
4. Gas or petrol operating mode change-over switch, high pressure valve for gas mode, fuel tank shut-off valves, shut-off valve relay 1	839
5. Motronic control unit, variable intake manifold change-over valve, heater element for crankcase breather	840
6. Motronic control unit, ignition system	841
7. Motronic control unit, throttle valve module, coolant temperature sender	842
8. Motronic control unit, Hall sender, fuel tank pressure sensor, gas fuel rail sensor	843
9. Motronic control unit, engine speed sender, knock sensors	844
10. Motronic control unit	845
11. Motronic control unit, gas injection valves	846
12. Motronic control unit, injectors, lambda probe after catalytic converter	847
13. Motronic control unit, accelerator position sender, lambda probe (upstream of catalytic converter), active charcoal filter system solenoid valve	848
14. Motronic control unit, fuel pump relay, cruise control system switch (GND), air mass meter	849
15. Motronic control unit, secondary air pump motor, clutch pedal switch, cruise control system brake pedal switch, brake light switch	850
16. Fuel pump, fuel gauge sender, fuel pump switch-off relay	851
17. Coolant shortage indicator sender, oil level and oil temperature sender, speedometer sender	852
18. Dash panel insert, coolant temperature/coolant shortage indicator, alternator warning lamp, fuel gauge, oil pressure warning, rev. counter	853
19. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, exhaust emissions warning lamp, cruise control system warning lamp, natural gas mode warning lamp, speedometer	854
101 - 1.4 l /55 kW Motronic, engine codes BCA	855-870
1. 1.4 l /55 kW Motronic, engine codes BCA	855
2. Alternator, starter	856
3. Motronic control unit	857
4. Motronic control unit, ignition system	858
5. Motronic control unit, heater element (crankcase breather)	859
6. Motronic control unit, throttle valve control module, coolant temperature sender, intake air temperature sender, intake manifold pressure sender	860

7. Motronic control unit, hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, engine speed sender	861
8. Motronic control unit, injectors, knock sensor	862
9. Motronic control unit, lambda probe before catalytic converter, lambda probe after catalytic converter	863
10. Motronic control unit, accelerator pedal position sender, active charcoal filter system solenoid valve	864
11. Motronic control unit, cruise control system switch (CCS), clutch pedal switch	865
12. Motronic control unit, fuel pump relay, CCS brake pedal switch, brake light switch	866
13. Fuel pump, fuel gauge sender, coolant shortage indicator sender	867
14. Dash panel insert, oil pressure warning, oil level and oil temperature warning, speedometer sender, coolant temperature and coolant shortage warning lamp	868
15. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	869
16. Dash panel insert, electrically operated throttle fault lamp, CCS warning lamp, multi-function display, ambient temperature display, exhaust emissions warning lamp, diagnostic socket	870
102 - 3.2 l/177 kW Motronic, engine code BFH	871-889
1. 3.2 l/177 kW Motronic, engine code BFH	871
2. Alternator, starter	872
3. Motronic current supply relay	873
4. Motronic control unit, ignition system	874
5. Motronic control unit, ignition system, inlet camshaft control valve	875
6. Motronic control unit, throttle valve module, variable intake manifold change-over valve, continued coolant circulation pump, heater element for crankcase breather	876
7. Motronic control unit, engine speed sender, Hall sender, coolant temperature sender	877
8. Motronic control unit, knock sensors	878
9. Motronic control unit, injectors	879
10. Motronic control unit	880
11. Motronic control unit, accelerator position sender, lambda probe	881
12. Motronic control unit, lambda probe after catalytic converter, lambda probe 2, exhaust flap valve	882
13. Motronic control unit, cruise control system switch, lambda probe 2 after catalytic converter	883
14. Motronic control unit, secondary air pump relay, secondary air pump motor, clutch pedal switch, brake pedal switch, brake light switch	884
15. Motronic control unit, air mass meter, fuel pump relay, secondary air inlet valve, active charcoal filter system solenoid valve 1	885
16. Fuel pump, fuel gauge sender, coolant shortage indicator sender	886
17. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	887
18. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	888
19. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	889
103 - 1.6 l/75 kW Simos, engine code BFQ	890-907
1. 1.6 l/75 kW Simos, engine code BFQ	890
2. Alternator, starter	891
3. Current supply relay for Simos control unit	892
4. Simos control unit, ignition system, throttle valve module, throttle valve drive angle sender for electric throttle	893
5. Simos control unit, engine speed sender, power assisted steering pressure switch, coolant temperature sender, knock sensor	894
6. Simos control unit, Hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, variable intake manifold change-over valve, map-controlled engine cooling system thermostat	895
7. Simos control unit	896
8. Simos control unit, injectors	897
9. Simos control unit, radiator outlet coolant temperature sender, potentiometer, temperature selection rotary knob, accelerator position sender	898
10. Simos control unit, air mass meter, lambda probe	899
11. Simos control unit, brake servo control unit, vacuum pump for brakes	900
12. Simos control unit, secondary air pump motor, cruise control system brake pedal switch, brake light switch, active charcoal filter system solenoid valve	901
13. Simos control unit, cruise control system switch, clutch pedal switch	902
14. Simos control unit, lambda probe after catalytic converter, fuel pump relay	903
15. Fuel pump, fuel gauge sender, coolant shortage indicator sender, heater element for crankcase breather	904

16. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	905
17. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	906
18. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	907
104 - Gas discharge headlights with automatic headlight range control	908-914
1. Gas discharge headlights with automatic headlight range control	908
2. Gas discharge light control unit with headlight range control left, left gas discharge light control unit, left gas discharge (xenon) bulb, left headlight main beam bulb, left side light bulb, front left turn signal bulb	909
3. Gas discharge light control unit with headlight range control left, left headlight range control motor, rear left vehicle level sender, front left vehicle level sender	910
4. Gas discharge light control unit with headlight range control left, gas discharge light control unit with headlight range control right	911
5. Gas discharge light control unit with headlight range control right, right headlight range control motor	912
6. Right gas discharge light control unit, right gas discharge bulb, right main beam bulb, right side light bulb, front right turn signal bulb	913
7. Dash panel insert, turn signal warning lamp, main beam warning lamp	914
105 - 1.6 l/74 kW Simos, engine codes AEH	915-926
1. 1.6 l/74 kW Simos, engine codes AEH	915
2. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	916
3. Alternator, starter	917
4. Dash panel insert, CCS warning lamp, multi-function display, ambient temperature display, exhaust emissions warning lamp, diagnostic socket	918
5. Simos control unit, ignition system	919
6. Simos control unit, coolant temperature sender, hall sender	920
7. Simos control unit, throttle valve control module, engine speed sender, power assisted steering pressure switch	921
8. Simos control unit, knock sensor, injectors	922
9. Simos control unit, heater element (crankcase breather)	923
10. Simos control unit, lambda probe, air mass meter, active charcoal filter system solenoid valve, intake manifold change-over valve, fuel pump relay	924
11. Fuel pump, fuel gauge sender, coolant shortage indicator sender	925
12. Dash panel insert, oil pressure warning, oil level and oil temperature warning, speedometer sender, coolant temperature and coolant shortage warning lamp	926
106 - 1.6 l/75 kW Simos, engine code AVU	927-944
1. 1.6 l/75 kW Simos, engine code AVU	927
2. Alternator, starter	928
3. Current supply relay for Simos control unit	929
4. Simos control unit, ignition system, throttle valve module, throttle valve drive angle sender for electric throttle	930
5. Simos control unit, engine speed sender, power assisted steering pressure switch, coolant temperature sender, knock sensor	931
6. Simos control unit, Hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, variable intake manifold change-over valve, map-controlled engine cooling system thermostat	932
7. Simos control unit, heater element for crankcase breather	933
8. Simos control unit, injectors	934
9. Simos control unit, radiator outlet coolant temperature sender, potentiometer, temperature selection rotary knob, lambda probe after catalytic converter	935
10. Simos control unit, air mass meter, lambda probe	936
11. Simos control unit, brake servo control unit, vacuum pump for brakes	937
12. Simos control unit, secondary air pump motor, cruise control system brake pedal switch, brake light switch	938
13. Simos control unit, cruise control system switch, clutch pedal switch	939
14. Simos control unit, active charcoal filter system solenoid valve, accelerator position sender, fuel pump relay	940
15. Fuel pump, fuel gauge sender, coolant shortage indicator sender	941
16. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	942
17. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	943

18. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	944
107 - 1.6 l/77 kW, 4MV, engine code AZD	945-959
1. 1.6 l/77 kW, 4MV, engine code AZD	945
2. Alternator, starter	946
3. 4MV injection system control unit, heater element for crankcase breather	947
4. 4MV injection system control unit, ignition system	948
5. 4MV injection system control unit, throttle valve module, engine speed sender, coolant temperature sender	949
6. 4MV injection system control unit, intake air temperature sender, intake manifold pressure sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, Hall sender	950
7. 4MV injection system control unit	951
8. 4MV injection system control unit, injectors, knock sensor	952
9. 4MV injection system control unit, accelerator position sender, lambda probe upstream of catalytic converter	953
10. 4MV injection system control unit, cruise control system switch, clutch pedal switch, cruise control system brake pedal switch, brake light switch	954
11. 4MV injection system control unit, fuel pump relay, lambda probe after catalytic converter, activated charcoal filter system solenoid valve	955
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	956
13. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	957
14. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	958
15. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	959
108 - 1.6 l/77 kW 4LV, engine codes BCB	960-974
1. 1.6 l/77 kW 4LV, engine codes BCB	960
2. Alternator, starter	961
3. 4LV control unit (injection system), crankcase breather heater element	962
4. 4LV control unit (injection system), ignition system	963
5. 4LV control unit (injection system), throttle valve control module, engine speed sender, coolant temperature sender	964
6. 4LV control unit (injection system), intake air temperature sender, intake manifold pressure sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, hall sender	965
7. 4LV control unit (injection system)	966
8. 4LV control unit (injection system), injectors, knock sensor	967
9. 4LV control unit (injection system), accelerator pedal position sender, lambda probe (before catalytic converter)	968
10. 4LV control unit (injection system), cruise control system switch (CCS), clutch pedal switch, CCS brake pedal switch, brake light switch	969
11. 4LV control unit (injection system), fuel pump relay, lambda probe after catalytic converter, active charcoal filter solenoid valve	970
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	971
13. Dash panel insert, oil pressure warning, oil level and oil temperature warning, speedometer sender, coolant temperature and coolant shortage warning lamp	972
14. Dash panel insert, coolant temperature and coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	973
15. Dash panel insert, electrically operated throttle fault lamp, CCS warning lamp, multi-function display, ambient temperature display, exhaust emissions warning lamp, diagnostic socket	974
109 - 1.6 l/81 kW Motronic, engine code BAD	975-994
1. 1.6 l/81 kW Motronic, engine code BAD	975
2. Alternator, starter	976
3. Motronic control unit	977
4. Motronic control unit, ignition system	978
5. Motronic control unit, throttle valve module, engine speed sender, coolant temperature sender	979
6. Motronic control unit, intake air temperature sender, intake manifold pressure sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, fuel pressure sender	980
7. Motronic control unit, intake manifold flap potentiometer, Hall sender	981
8. Motronic control unit, knock sensor	982
9. Motronic control unit, injectors	983
10. Motronic control unit, accelerator position sender, Motronic current supply relay	984
11. Motronic control unit, inlet camshaft control valve, fuel pressure regulating valve, fuel metering valve, intake manifold flap air flow control valve	985

12. Motronic control unit, lambda probe, map-controlled engine cooling system thermostat, active charcoal filter system solenoid valve	986
13. Motronic control unit, NOx sensor control unit, NOx sender, brake servo pressure sensor	987
14. Motronic control unit, potentiometer for temperature selection rotary knob, exhaust temperature sender, radiator outlet coolant temperature sender, air mass meter	988
15. Motronic control unit, cruise control system switch, clutch pedal switch	989
16. Motronic control unit, fuel pump relay, brake light switch, brake pedal switch	990
17. Fuel pump, fuel gauge sender, coolant shortage indicator sender	991
18. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	992
19. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	993
20. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	994
110 - 1.8 l/110 kW Motronic, engine code AUM	995-1012
1. 1.8 l/110 kW Motronic, engine code AUM	995
2. Alternator, starter	996
3. Motronic current supply relay	997
4. Motronic control unit, ignition system	998
5. Motronic control unit	999
6. Motronic control unit, coolant temperature sender, Hall sender, charge air pressure sender, charge pressure control solenoid valve, turbocharger air recirculation valve, inlet camshaft control valve 1	1000
7. Motronic control unit, throttle valve module, throttle valve drives angle sender (electric throttle), knock sensor 1, intake air temperature sender	1001
8. Motronic control unit, engine speed sender, knock sensor 2, power assisted steering pressure switch	1002
9. Motronic control unit, injectors, lambda probe after catalytic converter	1003
10. Motronic control unit, accelerator position sender, lambda probe, active charcoal filter system solenoid valve	1004
11. Simos control unit, brake servo control unit, vacuum pump for brakes	1005
12. Motronic control unit, secondary air pump relay, secondary air pump motor, secondary air inlet valve, brake light switch, cruise control system brake pedal switch	1006
13. Motronic control unit, cruise control system switch, clutch pedal switch	1007
14. Motronic control unit, fuel pump relay, air mass meter	1008
15. Fuel pump, fuel gauge sender, coolant shortage indicator sender	1009
16. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	1010
17. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	1011
18. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	1012
111 - 2.0 l/85 kW Motronic, engine code AQY	1013-1025
1. 2.0 l/85 kW Motronic, engine code AQY	1013
2. Alternator, starter	1014
3. Motronic control unit, ignition system	1015
4. Motronic control unit, coolant temperature sender, Hall sender	1016
5. Motronic control unit, throttle valve module, knock sensor 1, knock sensor 2	1017
6. Motronic control unit, engine speed sender, injectors	1018
7. Motronic control unit, heater element for crankcase breather	1019
8. Motronic control unit, lambda probe, lambda probe after catalytic converter, activated charcoal filter system solenoid valve 1, secondary air pump relay, secondary air pump motor	1020
9. Motronic control unit, fuel pump relay, air mass meter	1021
10. Fuel pump, fuel gauge sender, coolant shortage indicator sender	1022
11. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	1023
12. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	1024
13. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	1025
112 - Double clutch gearbox 02E (DSG)	1026-1032
1. Double clutch gearbox 02E (DSG)	1026
2. Starter motor relay, reversing light relay	1027
3. Mechatronic unit for double clutch gearbox. input shaft speed sender. gearbox oil temperature	1028

sender, temperature sender in control unit, hydraulic pressure sender, Tiptronic switch in steering wheel	
4. Mechatronics for direct shift gearbox, selector lever lock solenoid, selector lever sensors control unit, selector lever position display, gear selector movement sensor	1029
5. Mechatronic unit for double clutch gearbox, gearbox output speed sender, reversing light switch	1030
6. Mechatronic unit for double clutch gearbox, gear selector movement sensor, solenoid valves, gearbox input speed sender, clutch temperature sender	1031
7. Fuse locations	1032
113 - Radio "gamma" with CD changer and "digital sound package"	1033-1038
1. Radio "gamma" with CD changer and "digital sound package"	1033
2. Amplifier for 'Digital sound package', programme selection operating unit	1034
3. Amplifier 'Digital sound package', front loudspeakers	1035
4. Amplifier for 'Digital sound package', rear loudspeakers	1036
5. Radio, CD changer	1037
6. Radio, aerial	1038
114 - Climatronic	1039-1047
1. Climatronic	1039
2. Climatronic control unit, temperature flap control motor	1040
3. Climatronic control unit, central flap control motor, footwell and defroster flap control motor	1041
4. Climatronic control unit, air flow flap control motor, vent temperature sender, fresh air intake duct temperature sensor	1042
5. Climatronic control unit, ambient temperature sensor, fresh air blower, fresh air blower control unit, evaporator output temperature sender, sunlight penetration photosensor	1043
6. Climatronic control unit, air conditioner compressor regulating valve	1044
7. Motronic control unit, radiator outlet coolant temperature sender	1045
8. Radiator fan control unit, radiator fan	1046
9. Radiator fan control unit, high pressure sender	1047
115 - 1.8 l/132 kW Motronic, engine code BEK	1048-1063
1. 1.8 l/132 kW Motronic, engine code BEK	1048
2. Alternator, starter	1049
3. Motronic current supply relay	1050
4. Motronic control unit, ignition system	1051
5. Motronic control unit	1052
6. Motronic control unit, coolant temperature sender, Hall sender, charge air pressure sender, charge pressure control solenoid valve, turbocharger air recirculation valve, inlet camshaft control valve	1053
7. Motronic control unit, throttle valve module, knock sensor 1, intake air temperature sender	1054
8. Motronic control unit, engine speed sender, knock sensor 2, power assisted steering pressure switch	1055
9. Motronic control unit, injectors, lambda probe after catalytic converter	1056
10. Motronic control unit, accelerator position sender, lambda probe, active charcoal filter system solenoid valve	1057
11. Motronic control unit, cruise control system switch, clutch pedal switch	1058
12. Motronic control unit, fuel pump relay, brake light switch, brake pedal switch, air mass meter	1059
13. Fuel pump, fuel gauge sender, coolant shortage indicator sender	1060
14. Dash panel insert, oil pressure warning, speedometer sender, coolant temperature/coolant shortage warning lamp	1061
15. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	1062
16. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	1063
116 - 2.0 l/85 kW Motronic, engine code BER	1064-1078
1. 2.0 l/85 kW Motronic, engine code BER	1064
2. Alternator, starter	1065
3. Motronic current supply relay	1066
4. Motronic control unit, ignition system, coolant temperature sender	1067
5. Motronic control unit, throttle valve module, engine speed sender, Hall sender	1068
6. Motronic control unit, intake air temperature sender, intake manifold pressure sender, knock sensors	1069
7. Motronic control unit	1070
8. Motronic control unit, injectors	1071
9. Motronic control unit, accelerator position sender, lambda probe upstream of catalytic converter, lambda probe after catalytic converter	1072
10. Motronic control unit, cruise control system switch, clutch pedal switch	1073
11. Motronic control unit. fuel pump relay. active charcoal filter system solenoid valve. brake	1074

light switch, brake pedal switch	
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	1075
13. Dash panel insert, oil pressure warning, speedometer sender, coolant temperature/coolant shortage warning lamp	1076
14. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp	1077
15. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	1078
117 - 1.9 l/110 kW - Turbo diesel engine with unit injectors, engine code ARL	1079-1092
1. 1.9 l/110 kW - Turbo diesel engine with unit injectors, engine code ARL	1079
2. Alternator, starter	1080
3. Glow plug activation control unit, glow plugs - engine	1081
4. Diesel direct injection system control unit, kickdown switch, idling speed switch, accelerator position sender, terminal 30 voltage supply relay	1082
5. Diesel direct injection system control unit, coolant temperature display sender, intake manifold pressure sender, intake manifold temperature sender, heater element for crankcase breather	1083
6. Diesel direct injection system control unit	1084
7. Diesel direct injection system control unit, unit injector valves, Hall sender	1085
8. Diesel direct injection system control unit, air mass meter, fuel temperature sender, exhaust gas recirculation valve and charge pressure control, exhaust gas recirculation cooler change-over valve	1086
9. Diesel direct injection system control unit, cruise control system switch, clutch pedal switch	1087
10. Diesel direct injection system control unit, coolant heating element, brake pedal switch, brake light switch, high and low heat output relay	1088
11. Fuel pump relay, fuel gauge sender, fuel system pressurisation pump	1089
12. Oil level and oil temperature sender, oil pressure switch, speedometer sender, coolant shortage indicator sender	1090
13. Dash panel insert, coolant temperature and coolant shortage warning lamp, fuel gauge, rev. counter, oil pressure warning lamp	1091
14. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, glow period warning lamp, cruise control system warning lamp, alternator warning lamp	1092
118 - 2.8 l/150 kW Motronic, engine code BDE	1093-1111
1. 2.8 l/150 kW Motronic, engine code BDE	1093
2. Alternator, starter	1094
3. Motronic current supply relay	1095
4. Motronic control unit, ignition system	1096
5. Motronic control unit, ignition system, inlet camshaft control valve	1097
6. Motronic control unit, throttle valve module, variable intake manifold change-over valve, continued coolant circulation pump, heater element for crankcase breather	1098
7. Motronic control unit, engine speed sender, Hall sender, coolant temperature sender	1099
8. Motronic control unit, knock sensors	1100
9. Motronic control unit, injectors	1101
10. Motronic control unit, active charcoal filter system solenoid valve	1102
11. Motronic control unit, accelerator position sender, lambda probe	1103
12. Motronic control unit, lambda probe after catalytic converter, lambda probe 2	1104
13. Motronic control unit, cruise control system switch, lambda probe 2 after catalytic converter	1105
14. Motronic control unit, secondary air pump motor, secondary air inlet valve, clutch pedal switch, brake pedal switch, brake light switch	1106
15. Motronic control unit, air mass meter, fuel pump relay	1107
16. Fuel pump, fuel gauge sender, coolant shortage indicator sender	1108
17. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender	1109
18. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, speedometer, alternator warning lamp	1110
19. Dash panel insert, electronic power control fault lamp, cruise control system warning lamp, multifunction display, ambient temperature indicator, exhaust emissions warning lamp, self-diagnosis connection	1111
120 - Climatronic	1112-1120
1. Climatronic	1112
2. Climatronic control unit, temperature flap control motor	1113
3. Climatronic control unit, central flap control motor, footwell and defroster flap control motor	1114
4. Climatronic control unit, air flow flap control motor, vent temperature sender, fresh air intake duct temperature sensor	1115
5. Climatronic control unit, ambient temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photosensor	1116
6. Climatronic control unit	1117
7. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling	1118

8. Radiator fan control unit, high pressure sender	1119
9. Simos control unit, radiator outlet coolant temperature sender	1120
121 - 4-speed automatic gearbox (AG4)	1121-1127
1. 4-speed automatic gearbox (AG4)	1121
2. Starter inhibitor and reversing light relay	1122
3. Automatic gearbox control unit, multifunction switch	1123
4. Automatic gearbox control unit, solenoid valves, gearbox speed sender, kickdown switch, gearbox oil temperature sender	1124
5. Automatic gearbox control unit, vehicle speed sender	1125
6. Automatic gearbox control unit, selector lever lock solenoid	1126
7. Automatic gearbox control unit, selector lever lock solenoid	1127
122 - 1.9 l/110 kW - Turbo diesel engine with unit injectors, engine code ARL	1128-1141
1. 1.9 l/110 kW - Turbo diesel engine with unit injectors, engine code ARL	1128
2. Alternator, starter	1129
3. Diesel direct injection system control unit, glow plugs - engine	1130
4. Diesel direct injection system control unit, glow plug relay, kickdown switch, engine speed sender, idling speed switch, accelerator position sender, terminal 30 voltage supply relay	1131
5. Diesel direct injection system control unit, coolant temperature display sender, intake manifold pressure sender, intake manifold temperature sender, heater element for crankcase breather	1132
6. Diesel direct injection system control unit	1133
7. Diesel direct injection system control unit, unit injector valves, Hall sender	1134
8. Diesel direct injection system control unit, air mass meter, fuel temperature sender, exhaust gas recirculation valve and charge pressure control, exhaust gas recirculation cooler change-over valve	1135
9. Diesel direct injection system control unit, cruise control system switch, clutch pedal switch	1136
10. Diesel direct injection system control unit, coolant heating element, brake pedal switch, brake light switch, high and low heat output relay	1137
11. Fuel pump relay, fuel gauge sender, fuel system pressurisation pump	1138
12. Oil level and oil temperature sender, oil pressure switch, speedometer sender, coolant shortage indicator sender	1139
13. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, oil pressure warning lamp	1140
14. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, glow period warning lamp, cruise control system warning lamp, alternator warning lamp	1141
123 - 1.9 l/74 kW - Turbo diesel engine with unit injectors, engine code AXR	1142-1155
1. 1.9 l/74 kW - Turbo diesel engine with unit injectors, engine code AXR	1142
2. Alternator, starter	1143
3. Diesel direct injection system control unit, glow plugs - engine	1144
4. Diesel direct injection system control unit, glow plug relay, kickdown switch, engine speed sender, idling speed switch, accelerator position sender, terminal 30 voltage supply relay	1145
5. Diesel direct injection system control unit, unit injector valves, Hall sender	1146
6. Diesel direct injection system control unit	1147
7. Diesel direct injection system control unit, coolant temperature display sender, intake manifold pressure sender, intake manifold temperature sender, heater element for crankcase breather	1148
8. Diesel direct injection system control unit, air mass meter, variable intake manifold flap change-over valve, exhaust gas recirculation valve, charge pressure control solenoid valve, intake manifold flap motor	1149
9. Diesel direct injection system control unit, cruise control system switch (GND), clutch pedal switch, fuel temperature sender	1150
10. Diesel direct injection system control unit, coolant heating element, brake pedal switch, brake light switch, high and low heat output relay	1151
11. Fuel pump relay, fuel gauge sender, fuel system pressurisation pump	1152
12. Oil level and oil temperature sender, oil pressure switch, speedometer sender, coolant shortage indicator sender	1153
13. Dash panel insert, coolant temperature/coolant shortage indicator, fuel gauge, rev. counter, oil pressure warning lamp	1154
14. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, glow period warning lamp, cruise control system warning lamp, alternator warning lamp	1155
125 - Heated rear window with automatic time switch	1156-1158
1. Heated rear window with automatic time switch	1156
2. Fuse 26 in fuse holder	1157
3. Heated rear window switch, heated rear window	1158
126 - Socket (12V)	1159-1160
1. Socket (12V)	1159
2. 12 V socket	1160
201 - -Fitting locations: Position of relays and fuses - 3	1161-1173
1. Position of relays and fuses	1161-1173

1.1 Position of relays and fuses	1161-1173
1.1.1 Relay positions on relay plate:	1161
1.1.2 Fuse locations on relay plate:	1161
1.1.4 Fuse locations on 13 position additional relay carrier, left-handdrive vehicles:	1162
1.1.6 Fuse on 13 position additional relay carrier, right-handdrive vehicles:	1163-1164
1.1.8 Fuses in fuse holder:	1165
1.1.9 Fuses in fuse holder:	1166
1.1.10 Fuses in fuse holder:	1167
1.1.11 Fuses in fuse holder:	1168
1.1.12 Fuses in fuse holder:	1169
1.1.13 Fuses in fuse holder:	1170
1.1.14 Fuses in fuse holder:	1171
1.1.15 Fuses in fuse holder:	1172-1173
202 - -Fitting locations:Wiring harness coupling stations	1174-1177
1. Wiring harness coupling stations	1174
2. Coupling station in protective housing in plenum chamber	1175
3. Coupling stations on left and right-hand A-pillars, Coupling station on left-hand C-pillar, Golf	1176
4. Coupling station on left-hand C-pillar, Bora, Coupling station on tailgate, Golf estate/Bora estate, Coupling station on right-hand D-pillar, Golf estate/Bora estate	1177
203 - -Fitting locations:Control units and relays	1178-1185
1. Control units and relays	1178
2. Control unit for ABS/ABS with EDL	1179
3. Central control unit for convenience system/control unit for central locking and anti-theft alarm system, Control unit for sliding sunroof adjustment	1180
4. Control unit for Climatronic	1181
5. Door control unit for electric windows, driver's and front passenger's sides	1182
6. Door control unit for electric windows, rear left and rear right	1183
7. Control unit for radiator fan, 2 speed with fan run-on	1184
8. Operating and control unit for heater with mapped cooling	1185
204 - -Fitting locations:Multi-pin connectors	1186-1194
1. Contents	1186
2. Automatic gearbox/AG4	1187
3. Automatic gearbox/AG4, Self-diagnosis	1188
4. Lights, lamps, switches - interior, anti-theft alarm	1189
5. Lights, lamps, switches - interior, anti-theft alarm	1190
6. Lights, lamps, switches - interior, anti-theft alarm	1191
7. Lights, lamps, switches - interior, anti-theft alarm, Wiring	1192
8. Wiring	1193
9. Wiring	1194
401 - -Fault finding programme:Battery discharges (Voltage leakage suspected)	1195-1196
1. Test prerequisites, Fuse assignment in fuse holder/battery	1195
2. -Fault finding programme:Battery discharges (Voltage leakage suspected)	1196
402 - -Fault finding programme:Starter motor does not turn	1197-1198
1. Test prerequisites	1197
2. -Fault finding programme:Starter motor does not turn	1198
403 - -Fault finding programme:Starter motor turns too slowly and does not crank engine	1199
1. Test prerequisites	1199
404 - -Fault finding programme:Alternator warning lamp does not go out as speed increases	1200
1. Alternator warning lamp does not go out as spees increases	1200
405 - -Fault finding programme:Alternator warning lamp does not light up when ignition is switched on	1201
1. Test prerequisites	1201
406 - -Fault finding programme:Checking alternator and voltage regulator	1202-1204
1. Contents, Test prerequisites	1202
2. Checking alternator and voltage regulator with V.A.G 1715, Test prerequisites	1203
3. -Fault finding programme:Checking alternator and voltage regulator	1204
407 - -Fault finding programme:Checking cruise control system (CCS)	1205-1206
1. Contents	1205
2. Activating or deactivating cruise control system	1206
408 - -Fault finding programme:Checking sliding/tilting sunroof	1207-1213
1. Contents, Test prerequisites	1207
2. Checking sliding/tilting sunroof (vehicles with electric windows)	1208
3. -Fault finding programme:Checking sliding/tilting sunroof	1209
4. -Fault finding programme:Checking sliding/tilting sunroof	1210
5. Checking sliding/tilting sunroof (vehicles without electric windows)	1211
6. -Fault findina proaramme:Checkina slidina/tiltina sunroof	1212

