



Contents

1	Engine list	1
2	Service work	7
2.1	Information on long-life service and time or distance dependent service	7
2.2	Service tables	9
2.3	Delivery inspection	14
2.4	Oil change service	15
2.5	Interval service ▶2007	16
2.6	Interval service 2008▶	18
2.7	Interval service inspection ▶2007	19
2.8	Inspection service 2008▶	22
2.9	Additional work based on time or distance	24
3	General information	29
3.1	Raising vehicle with lifting platform or trolley jack	29
3.2	Stickers	30
3.3	Entries in service schedule	31
3.4	Connecting vehicle diagnostic tester	31
3.5	Vehicle identification number	34
3.6	Vehicle data sticker	35
3.7	Severe operating conditions	36
3.8	Countries where diesel has a high sulphur content	36
3.9	Engine code and engine number	37
3.10	RME fuel (biodiesel) for vehicles up to 05.2006	37
3.11	Type plate	38
4	Descriptions of work:	39
4.1	Removable tow coupling: checking and cleaning if necessary	41
4.2	Swivel joints: inspecting	43
4.3	Automatic headlight control and cornering light: checking function	43
4.4	Automatic gearbox: Checking ATF level, 09G gearbox	44
4.5	Automatic gearbox: changing ATF (09G gearbox)	45
4.6	Battery: checking battery terminal clamps for secure seating	45
4.7	Battery: Checking using battery tester with printer VAS 5097A or VAS 6161	49
4.8	Tyres: checking condition, wear pattern, tyre pressure, tread depth and age of tyres	49
4.9	Brake and clutch system: Changing brake fluid	54
4.10	Brake fluid level: checking	59
4.11	Brake system and shock absorbers: inspecting for leaks and damage	60
4.12	Front and rear brake pads/linings: Check thickness	61
4.13	Diesel particulate filter: checking	62
4.14	6-speed dual clutch gearbox (DSG) 02E: Change DSG transmission oil and filter	63
4.15	Electric windows: checking positioning (open and close functions)	63
4.16	Vehicle system test: Carry out test	64
4.17	Front passenger airbag: checking key switch and "ON/OFF function"	65
4.18	Bonnet: greasing arrester	67
4.19	Boots: inspecting	68
4.20	Haldex coupling (Golf 4motion): changing oil	68
4.21	Interior and exterior body: inspecting for corrosion with doors and flaps open	72
4.22	Poly V-belt: adjusting tension on engines without automatic tensioning roller	73
4.23	Poly V-belt: checking condition	73
4.24	Calibrating compass (for North American region)	74
4.25	Cooling system: checking frost protection and coolant level	75
4.26	Diesel fuel filter: renewing	77
4.27	Air filter: cleaning housing and renewing filter element	83
4.28	Engine cover panel -top-: removing and installing	92
4.29	Removing and installing engine compartment cover (noise insulation) -bottom-	103



4.30	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	103
4.31	Engine oil level: checking	103
4.32	Engine oil: draining or extracting, renewing oil filter and replenishing engine oil	104
4.33	Road test: performing (driving behaviour, noises, air conditioner etc.)	115
4.34	Wheel securing bolts: tightening to specified torque	116
4.35	Radio code: reading using vehicle diagnostic tester	118
4.36	Radio/radio navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	118
4.37	Tyre Pressure Loss Indicator: Performing basic setting	119
4.38	Tyre repair set: checking if bottle is damaged or used; checking and entering use-by date of tyre sealant	121
4.39	Dust and pollen filter: cleaning housing and renewing filter element	122
4.40	Headlight adjustment: Checking and adjusting as necessary	122
4.41	Service interval display: resetting	130
4.42	Service interval display: recoding	133
4.43	Sunroof: checking function, cleaning and greasing guide rails	134
4.44	Sliding sunroof drains: checking for blockage, cleaning if necessary	134
4.45	Window wiper and washer system and headlight washer system: Checking function	136
4.46	Wiper blade protection: removing	140
4.47	Wiper blades: checking park position	143
4.48	Track rod ends: checking clearance, firm seating and boots	144
4.49	Auxiliary heater: setting weekday in menu of dash panel insert	144
4.50	Door arrester: greasing	145
4.51	Transportation mode: switching off	145
4.52	Transportation devices: removing blocking pieces from springs on front axle	147
4.53	Underbody: inspecting for damage to underbody sealant, underbody cladding, routing of lines, plugs etc.	147
4.54	Clock and date: setting	148
4.55	Toothed belt and toothed belt tensioning roller: Renewing (TDI unit injector)	149
4.56	Camshaft drive toothed belt: Renewing (only 2.0 l FSI and TFSI)	149
4.57	Camshaft drive toothed belt: Check (4-cylinder petrol engines 1.4 l 55 kW and 1.6 l 75 kW)	149
4.58	Spark plugs: renewing	150
4.59	Driving instructor pedals: greasing	163
4.60	Front and rear final drive: Check oil level	167
5	Exhaust emissions test	168
5.1	Exhaust emissions test for petrol engines	168
5.2	Exhaust emissions test for diesel engines without OBD	170
5.3	Exhaust emissions test for diesel engines with OBD	173
6	Glossary	177