



Contents

00 - Technical data	1
1 Brake allocation via PR No.	1
1.1 Front brakes, Golf	1
1.2 Front brakes, Eos	2
1.3 Rear brakes, front-wheel drive Golf	2
1.4 Rear brakes, four-wheel drive Golf	3
1.5 Rear brakes, Eos	3
2 Technical data for brakes	4
2.1 Brake master cylinder and brake servo	4
2.2 Front brakes	4
2.3 Rear brakes (disc brakes)	6
3 Brake test	9
3.1 General	9
3.2 Test for vehicles with front-wheel drive	9
3.3 Test for vehicles with four-wheel drive via a Haldex coupling	9
45 - Anti-lock brake system	11
1 General notes on anti-lock brake system	11
2 Notes for repair work on anti-lock brake system	12
3 Connecting VAS 5051 and selecting functions	13
4 Electrical/electronic components and locations	15
4.1 ABS Mark 70 (ABS/TCS)	15
4.2 ABS Mark 60 (ABS/EDL/TCS/ESP) up to week 22/2008	17
4.3 ABS Mark 60 (ABS/EDL/TCS/ESP) from week 22/2008	19
5 Fault display via warning lamps	22
6 Assembly overview - hydraulic unit, brake servo/brake master cylinder	24
6.1 ABS Mark 70 (ABS/TCS)	24
6.2 ABS Mark 60 (ABS/EDL/TCS/ESP) up to week 22/2008	30
6.3 ABS Mark 60 (ABS/EDL/TCS/ESP) from week 22/2008	38
7 Removing and installing parts of ABS system on front and rear axle	46
7.1 Removing and installing parts of ABS system on front axle	46
7.2 Removing and installing parts of anti-lock brake system on rear axle (front-wheel drive) ..	47
7.3 Removing and installing parts of anti-lock brake system on rear axle (four-wheel drive) ..	48
8 Removing and installing parts of ESP system	50
8.1 Removing and installing ESP sensor unit G419	50
8.2 Removing and installing steering angle sender G85	51
8.3 Removing and installing brake servo vacuum sender G483	51
46 - Brakes - mechanism	53
1 Repairing front brakes	53
1.1 Repairing front brakes, FS III brake caliper	53
1.2 Removing and installing brake pads/linings	54
1.3 Removing and installing brake caliper	57
1.4 Repairing front brakes, FN 3 brake caliper	59
1.5 Removing and installing brake pads/linings	62
1.6 Removing and installing brake caliper	65
1.7 Repairing front brake, FNR-G brake caliper	67
1.8 Removing and installing brake pads/linings	68
1.9 Removing and installing brake caliper	71
2 Repairing rear brakes	74
2.1 Repairing rear brake CI 38	74



2.2	Removing and installing brake pads/linings	75
2.3	Removing and installing brake caliper	77
2.4	Repairing rear brake CII 38	79
2.5	Removing and installing brake pads/linings	81
2.6	Removing and installing brake caliper	83
2.7	Repairing rear brake CII 41	85
2.8	Removing and installing brake pads/linings	87
2.9	Removing and installing brake caliper	90
2.10	Assembly overview - Bosch rear wheel brake	91
2.11	Removing and installing brake pads, Bosch	93
2.12	Removing and installing brake caliper, Bosch	95
2.13	Adjusting handbrake	97
3	Assembly overview - handbrake lever	99
3.1	Removing and installing handbrake cable up to model year 2007	99
3.2	Removing and installing handbrake cable from model year 2008	102
4	Assembly overview - brake pedal	105
4.1	Separating brake pedal from brake servo	105
4.2	Removing and installing brake light switch F from week 45 of 2005	106
47 - Brakes - hydraulics		109
1	Repairing front brake caliper	109
1.1	Assembly overview - brake caliper FS III	109
1.2	Removing and installing piston for brake caliper FS III	109
1.3	Assembly overview - brake caliper FN 3	111
1.4	Removing and installing piston for brake caliper FN 3	112
1.5	Assembly overview - brake caliper FNR-G	115
1.6	Removing and installing piston for FNR-G brake caliper	116
2	Repairing rear brake caliper	119
2.1	Assembly overview - brake calipers CI 38 and CII 38	119
2.2	Assembly overview - brake caliper CII 41	120
2.3	Removing and installing brake caliper piston	121
2.4	Assembly overview - Bosch brake caliper	123
2.5	Removing and installing brake caliper piston, Bosch	124
2.6	Pre-bleeding brake caliper	126
3	Pressurised leak test	127
3.1	Test prerequisites:	127
4	Bleeding brake system	128
4.1	Bleeding brake system using brake filling and bleeding equipment VAS 5234 or V.A.G 1869	128
4.2	Changing brake fluid	130
5	Brake servo and brake master cylinder	131
5.1	Assembly overview: brake servo/brake master cylinder (left-hand drive vehicle)	131
5.2	Assembly overview: brake servo/brake master cylinder (right-hand drive vehicle)	132
5.3	Overview - vacuum pump for brake servo (diesel vehicles)	134
5.4	Checking brake servo vacuum system	135
5.5	Checking non-return valve	139
5.6	Removing and installing brake servo pressure sensor G294	139
5.7	Vacuum pump for brakes V192	139
5.8	Removing and installing brake light switch F as of week 45/05	140
6	Removing and installing brake master cylinder	141
6.1	Removing	141
6.2	Installing	142
7	Removing and installing brake servo	143
7.1	Removing	143
7.2	Installing	145



8	Brake lines	146
8.1	Separating point on underbody	146
8.2	Repairing brake lines	146