



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>27 - Starter, current supply, CCS</b>	<b>2</b>
<b>1 Battery</b>	<b>2</b>
1.1 Types of battery	2
1.2 Warning notices and safety regulations	2
1.3 Battery terminal connection	2
<b>2 Checking battery</b>	<b>3</b>
<b>3 Charging battery</b>	<b>4</b>
<b>4 Disconnecting and connecting battery</b>	<b>5</b>
4.1 Disconnecting and connecting battery; battery in engine compartment	5
4.2 Disconnecting and connecting battery, battery in luggage compartment	7
<b>5 Removing and installing battery</b>	<b>11</b>
5.1 Removing and installing battery; battery in engine compartment	11
5.2 Removing and installing battery, battery in luggage compartment	14
<b>6 Specified torques: battery</b>	<b>16</b>
<b>7 Battery isolation igniter N253</b>	<b>17</b>
7.1 Pin assignment and fitting locations	17
7.2 Safety precautions when working on battery isolation igniter N253	18
7.3 Disposal of battery isolation igniter N253	18
7.4 Removing and installing battery isolation igniter N253	18
<b>8 Jump start point with suppression filter C24</b>	<b>21</b>
8.1 Overview of fitting locations	21
8.2 Removing and installing jump start point with suppression filter C24	21
<b>9 Specified torques: jump start point</b>	<b>23</b>
<b>10 Starter motor</b>	<b>24</b>
10.1 Checking starter B	24
10.2 Removing and installing starter, automatic gearbox	24
10.3 Removing and installing starter, dual clutch gearbox (DSG)	37
10.4 Removing and installing starter, manual gearbox	55
<b>11 Specified torques: starter</b>	<b>89</b>
<b>12 Alternator</b>	<b>90</b>
12.1 Securing B+ (battery positive) wire to alternator	90
12.2 Checking poly V-belt	90
12.3 Checking alternator C	91
12.4 Alternator, 1.4 l injection engine	91
12.5 Alternator, 1.4 l FSI engine	96
12.6 Alternator 1.4 l TSI	100
12.7 Alternator, 1.6 l injection engine	105
12.8 Alternator, 1.6 l FSI engine	112
12.9 Alternator, 2.0 l FSI engine	116
12.10 Alternator, 2.0 l FSI turbocharged engine	125
12.11 Alternator, 2.5 l injection engine	134
12.12 Alternator, 3.2 l injection engine	140
12.13 Alternator, 2.0 l SDI engine	146
12.14 Alternator, 1.9 l TDI engine	151
12.15 Alternator, 1.9 l TDI engine with diesel particulate filter	158
12.16 Alternator, 2.0 l TDI engine	165
12.17 Removing and installing poly V-belt pulley on alternator	171
12.18 Voltage regulator for alternator	175
<b>13 Cruise control system (CCS)</b>	<b>178</b>



<b>90 - Gauges, instruments</b>	<b>179</b>
<b>1 Dash panel insert</b>	<b>179</b>
1.1 Renewing dash panel insert	179
1.2 Removing and installing dash panel insert	180
1.3 Description of back of dash panel insert	180
1.4 Pin assignment of connectors on dash panel insert	180
1.5 Warning lamp symbols in dash panel insert	181
<b>2 Service interval display</b>	<b>183</b>
2.1 Resetting service interval display	183
<b>92 - Windscreen wash/wipe system</b>	<b>184</b>
<b>1 windscreen wiper system.</b>	<b>184</b>
1.1 Deactivating APP function of wiper motor	184
1.2 Removing and installing windscreen wiper system	185
1.3 Removing and installing wiper arms	188
1.4 Adjusting wiper blade park position	189
1.5 Removing and installing joint-free wipers	190
1.6 Removing and installing rain and light sensor G397	192
<b>2 Windscreen washer system</b>	<b>196</b>
2.1 Assembly overview - windscreen washer system	196
2.2 Removing and installing washer fluid reservoir	197
2.3 Removing and installing windscreen and rear window washer pump V59	201
2.4 Removing and installing windscreen washer fluid level sender G33	202
2.5 Removing and installing windscreen washer system spray jets	203
2.6 Adjusting windscreen washer system spray jets	203
<b>3 Rear window wiper system</b>	<b>204</b>
3.1 Assembly overview - rear window wiper system	204
3.2 Removing rear window wiper	205
3.3 Adjusting rear window wiper park position	206
3.4 Removing and installing joint-free wiper	207
<b>4 Rear window washer system</b>	<b>208</b>
4.1 Assembly overview - rear window washer system	208
4.2 Renewing spray jet	209
4.3 Adjusting spray jet	209
<b>5 Headlight washer system</b>	<b>210</b>
5.1 Assembly overview - headlight washer system	210
5.2 Removing and installing headlight washer system pump V11	212
5.3 Removing and installing spray jet pop-up cylinders	212
5.4 Removing and installing spray jet retainer	213
5.5 Adjusting headlight washer system spray jets	214
5.6 Bleeding headlight washer system	214
<b>6 Washer fluid line hose couplings</b>	<b>215</b>
<b>7 Hose repair</b>	<b>216</b>
<b>8 Specified torques: windscreen wash/wipe system</b>	<b>217</b>
<b>94 - Lights, bulbs, switches - exterior</b>	<b>218</b>
<b>1 Headlights</b>	<b>218</b>
1.1 Assembly overview - headlight	218
1.2 Removing and installing headlight	220
1.3 Adjusting headlight installation position	222
1.4 Renewing headlight bulbs	223
1.5 Removing and installing headlight range control motor	228
1.6 Repairing headlight retaining tabs	234



1.7	Converting headlights for use when driving on the left or right	236
1.8	Adjusting headlights	238
<b>2</b>	<b>Headlights with gas discharge bulbs</b>	<b>239</b>
2.1	Assembly overview - gas discharge headlights	239
2.2	Removing and installing gas discharge headlights	241
2.3	Adjusting headlight installation position	241
2.4	Renewing headlight bulbs	242
2.5	Removing and installing headlight range control motor	247
2.6	Removing and installing gas discharge bulb control unit	250
2.7	Headlight range control unit J431	251
2.8	Vehicle level sender	254
2.9	Repairing headlight retaining tabs	256
2.10	Converting headlights for use when driving on the left or right	256
2.11	Adjusting headlights	257
<b>3</b>	<b>Headlights - Golf GT, GTI, R32</b>	<b>258</b>
3.1	Assembly overviews	258
3.2	Removing and installing headlight GT, GTI and R32	258
3.3	Adjusting headlight installation position	262
3.4	Renewing headlight bulbs	264
3.5	Removing and installing headlight range control motor	264
3.6	Removing and installing gas discharge bulb control unit	264
3.7	Headlight range control unit J431	264
3.8	Vehicle level sender	264
3.9	Repairing headlight retaining tabs	264
3.10	Converting headlights for use when driving on the left or right	264
3.11	Adjusting headlights	264
<b>4</b>	<b>Fog lights</b>	<b>265</b>
4.1	Assembly overview - fog lights	265
4.2	Removing and installing fog light	265
4.3	Removing and installing fog light bulb	266
4.4	Adjusting fog lights	267
<b>5</b>	<b>Bulb for mirror turn signal and entry light in exterior mirror</b>	<b>268</b>
5.1	Removing and installing turn signal repeater bulb	268
5.2	Removing and installing entry light in exterior mirror	269
<b>6</b>	<b>Side marker lights</b>	<b>271</b>
6.1	Bulb for front side marker light M11 , USA and Canada only	271
6.2	Rear side marker light, USA and Canada only	273
<b>7</b>	<b>Tail lights</b>	<b>274</b>
7.1	Assembly overview - tail light cluster in side panel, vehicles ► 11.05	274
7.2	Assembly overview - tail light cluster in side panel, vehicles 11.05 ►	275
7.3	Removing and installing tail light cluster in side panel	275
7.4	Renewing tail light cluster, vehicles ► 11.05	276
7.5	Renewing tail light cluster, vehicles 11.05 ►	277
7.6	Adjusting tail light cluster	278
7.7	Removing and installing tail light cluster adjuster element	279
7.8	Removing and installing tail light cluster bulb carrier in side panel	280
7.9	Assembly overview - tail light cluster in rear lid	280
7.10	Removing and installing tail light cluster in rear lid	281
7.11	Removing and installing tail light cluster bulb carrier in rear lid	282
<b>8</b>	<b>Number plate light</b>	<b>284</b>
8.1	Removing and installing number plate light X	284
<b>9</b>	<b>High-level brake light</b>	<b>286</b>
9.1	Removing and installing bulb for high-level brake light M25	286
9.2	Removing and installing high-level brake light bulb M25 , Golf GTI	288



<b>10</b>	<b>Steering column switch</b> .....	<b>290</b>
10.1	Assembly overview - steering column switch .....	290
10.2	Removing and installing steering column switch .....	292
10.3	Steering column electronics control unit J527 .....	298
10.4	Steering angle sender G85 .....	298
<b>11</b>	<b>Ignition/starter switch and lock cylinder.</b> .....	<b>299</b>
11.1	Removing and installing steering lock housing .....	299
11.2	Removing and installing lock cylinder .....	299
11.3	Removing and installing ignition/starter switch .....	301
11.4	Removing and installing ignition key withdrawal lock solenoid N376 .....	302
<b>12</b>	<b>Parking aid</b> .....	<b>304</b>
12.1	Assembly overview - parking aid .....	304
12.2	Removing and installing parking aid control unit J446 .....	306
12.3	Removing and installing rear parking aid senders .....	306
12.4	Removing and installing parking aid warning buzzer H15 .....	308
12.5	Final control diagnosis .....	309
<b>13</b>	<b>Specified torques: lights, bulbs, switches - exterior</b> .....	<b>310</b>
13.1	Specified torques: headlights .....	310
13.2	Specified torques: fog lights .....	310
13.3	Specified torques: tail light cluster in side panel .....	310
13.4	Specified torques: tail light cluster in rear lid .....	310
13.5	Specified torques: vehicle level sender .....	310
<b>96</b>	<b>- Lights, bulbs, switches - interior</b> .....	<b>311</b>
<b>1</b>	<b>Interior lights and switches</b> .....	<b>311</b>
1.1	Removing and installing interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360 .....	311
<b>2</b>	<b>Lights and switches in engine compartment</b> .....	<b>313</b>
2.1	Removing and installing bonnet contact switch F266 .....	313
<b>3</b>	<b>Lights and switches in dash panel</b> .....	<b>314</b>
3.1	Removing and installing light switch E1 .....	314
3.2	Removing and installing glove compartment light W6 .....	315
3.3	Removing and installing glove compartment light switch E26 .....	316
3.4	Removing and installing headlight range control regulator E102 and switch and instrument illumination regulator E20 .....	316
3.5	Removing and installing front passenger side airbag deactivated warning lamp K145 ..	317
3.6	Removing and installing hazard warning light switch E3 .....	318
3.7	Removing and installing left footwell light W9 and right footwell light W10 .....	318
3.8	Removing and installing key-operated switch to deactivate front passenger side airbag E224 .....	320
<b>4</b>	<b>Lights and switches in front doors</b> .....	<b>322</b>
4.1	Removing and installing window regulator switch in front passenger door E107 .....	322
4.2	Removing and installing mirror adjustment switch element, driver side .....	322
4.3	Removing and installing driver side interior locking button for central locking system E308 .....	323
4.4	Components - front door locks .....	324
4.5	Removing and installing driver side window regulator switch element .....	324
4.6	Removing and installing fuel tank flap release button E319 .....	326
<b>5</b>	<b>Lights and switches in rear doors</b> .....	<b>328</b>
5.1	Components - rear door locks .....	328
5.2	Installing and removing rear left window regulator switch E52 and rear right window regulator switch E54 .....	328
<b>6</b>	<b>Lights and switches in luggage compartment</b> .....	<b>330</b>
6.1	Removing and installing luggage compartment light W3 .....	330
6.2	Removing and installing rear lid locking unit F256 .....	331



<b>7</b>	<b>Lights and switches in roof trim</b>	<b>332</b>
7.1	Front interior light and reading light (vehicles with no sliding sunroof)	332
7.2	Front interior light and reading light (vehicles with sliding sunroof)	335
7.3	Rear interior light and reading light (vehicles with no anti-theft alarm)	339
7.4	Rear interior light and reading light (vehicles with anti-theft alarm system (ATA))	341
7.5	Removing and installing front passenger side illuminated vanity mirror W14 and driver side illuminated vanity mirror W20	343
7.6	Garage door opener	345
<b>8</b>	<b>Lights and switches in centre console</b>	<b>346</b>
8.1	Removing and installing TCS and ESP button E256	346
<b>9</b>	<b>Horn</b>	<b>348</b>
9.1	Removing and installing treble horn H2 and bass horn H7	348
9.2	Checking treble horn H2 and bass horn H7	348
<b>10</b>	<b>Immobiliser, vehicles up to 05/2007</b>	<b>349</b>
10.1	Immobiliser control unit J362	349
10.2	Immobiliser reader coil D2	349
10.3	Ignition key	349
<b>11</b>	<b>Immobiliser, vehicles as of 06/2007</b>	<b>351</b>
11.1	Immobiliser control unit J362	352
11.2	Ignition key	352
11.3	New identity on renewing all components	352
11.4	Fazit system test	352
<b>12</b>	<b>Anti-theft alarm (ATA) to 05/2006</b>	<b>354</b>
12.1	General description	354
12.2	Activating and deactivating anti-theft alarm	354
12.3	Removing and installing interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	355
12.4	Removing and installing interior monitoring sensor	355
12.5	Removing and installing vehicle inclination sender G384	355
12.6	Central locking and anti-theft alarm system aerial R47	356
12.7	Alarm horn H12	356
<b>13</b>	<b>Anti-theft alarm (ATA) from 06/2006</b>	<b>359</b>
13.1	General description	359
13.2	Activating and deactivating anti-theft alarm	359
13.3	Removing and installing interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	359
13.4	Removing and installing interior monitoring sensor and vehicle inclination sender	360
13.5	Central locking and anti-theft alarm system aerial R47	360
13.6	Alarm horn H12	361
<b>97 - Wiring</b>		<b>362</b>
<b>1</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>362</b>
<b>2</b>	<b>Main fuse holder, Golf R32 only</b>	<b>363</b>
2.1	Main fuse holder- assembly overview	363
2.2	Removing and installing main fuse holder	364
<b>3</b>	<b>Specified torques: main fuse box</b>	<b>366</b>
<b>4</b>	<b>Removing and installing fuse holder</b>	<b>367</b>
4.1	Removing and installing fuse holder on left of dash panel	367
<b>5</b>	<b>Removing and installing relay carrier</b>	<b>369</b>
5.1	Removing and installing relay carrier with automatic fuses on left beneath dash panel	369
5.2	Removing relay carrier from onboard supply control unit on left in dash panel and installing	370
<b>6</b>	<b>Electronics boxes</b>	<b>372</b>
6.1	Removing and installing electronics box on left side of engine compartment	372



<b>7</b>	<b>Select Control units</b> .....	<b>377</b>
7.1	On-board supply control unit J519 .....	377
7.2	Data bus diagnostic interface J533 .....	378
7.3	Convenience system central control unit J393 .....	380
7.4	Trailer detector control unit J345 .....	383
7.5	Garage door operation control unit J530 .....	385
<b>8</b>	<b>Specified torques: wiring</b> .....	<b>386</b>
8.1	Specified torques: electronics box on left side of engine compartment .....	386
8.2	Specified torques: trailer detector control unit J345 .....	386
<b>9</b>	<b>Wiring harness and connector repairs</b> .....	<b>387</b>