



Contents

91 - Communication	1
1 Communication systems	1
1.1 Fault finding	1
2 Radio units and radio navigation systems in general	2
2.1 Removing and installing radio units and radio navigation systems, Golf saloon	2
2.2 Removing and installing radio units and radio navigation systems, Golf Plus	5
2.3 Fault finding	6
2.4 Adapting radio components	7
2.5 Adapting navigation system components	8
3	9
3.1 General description	9
3.2 Overview of radio system "RCD 300"	10
3.3 Overview of radio system "RCD 300", Golf Plus	11
3.4 Overview of connectors on radio unit "RCD 300"	12
3.5 Anti-theft coding	13
4 Radio system RCD 310	15
4.1 General notes	15
4.2 Overview of radio system "RCD 310", Golf saloon	15
4.3 Overview of radio system "RCD 310", Golf Plus	17
4.4 Overview of connectors on radio "RCD 310"	19
4.5 Anti-theft coding	21
5	24
5.1 General description	24
5.2 Overview of radio system "RCD 500"	25
5.3 Overview of radio system "RCD 500", Golf Plus	27
5.4 Activating transport protection device of CD changer in "RCD 500"	28
5.5 Overview of connectors on radio unit "RCD 500"	28
5.6 Anti-theft coding	30
6 Radio system RCD 510	32
6.1 General notes	32
6.2 Overview of radio system "RCD 510", Golf saloon	33
6.3 Overview of radio system "RCD 510", Golf Plus	35
6.4 Activating/deactivating transport lock for CD changer in "RCD 510"	36
6.5 Overview of connectors on radio "RCD 510"	37
6.6 Anti-theft coding	40
7	44
7.1 General description	44
7.2 Overview of radio system "Premium Sound System"	45
7.3 Overview of connectors on radio unit "Premium Sound System"	46
7.4 Anti-theft coding	48
8	50
8.1 General description	50
8.2 Overview of radio navigation system "RNS 300" with monochrome display	51
8.3 Overview of connectors on radio navigation system "RNS 300"	53
9	56
9.1 General description	57
9.2 Overview of "radio navigation system 2" with multifunction display (MFD)	57
9.3 Overview of "radio and navigation system 2" with multifunction display (MFD), Golf Plus	59
9.4 Overview of connectors on "radio and navigation system 2" with multifunction display (MFD)	60
9.5 Anti-theft coding	64



10	65
10.1	General description	66
10.2	Overview of radio navigation system "RNS MFD 2 DVD"	66
10.3	Overview of connectors on radio navigation system "RNS MFD 2 DVD"	68
10.4	Anti-theft coding	72
11	74
11.1	General notes	74
11.2	Overview of radio navigation system "RNS 510", Golf saloon	74
11.3	Overview of radio navigation system "RNS 510", Golf Plus	76
11.4	Overview of connectors on radio navigation system "RNS 510"	78
11.5	Anti-theft coding	82
12	85
12.1	General notes	85
12.2	Removing and installing radio navigation system	86
12.3	Overview of connectors on radio navigation system	88
12.4	Anti-theft coding	90
12.5	Fault finding on radio navigation system	92
13	Multimedia system RSE (Rear Seat Entertainment), "Golf Plus"	96
13.1	General description	96
13.2	Overview of multimedia system with DVD player	97
13.3	Removing and installing DVD player	98
13.4	Removing and installing multimedia control unit	100
13.5	Removing and installing multimedia display unit (monitor)	103
13.6	Removing and installing multimedia operating unit	106
13.7	Changing remote control batteries	108
14	Sound system amplifier	109
14.1	General description	109
14.2	Removing and installing amplifier	109
14.3	Pin assignments on connectors of amplifier	111
15	CD changer	113
15.1	Removing and installing CD changer	113
16	Satellite digital radio tuner for vehicles for USA and Canada	115
16.1	General notes	115
16.2	Fault finding	115
16.3	Removing and installing satellite digital radio tuner	115
16.4	Overview of multi-pin connectors on satellite digital radio receiver	116
17	"Apple" "iPod player" holder	118
17.1	General notes	118
17.2	Fault finding	118
17.3	Overview of the "iPod player" holder	118
17.4	Removing and installing holder adapter	119
17.5	Removing and installing "iPod player" holder	120
17.6	Overview of connectors on "iPod player" holder	121
17.7	Fault finding procedure	122
18	123
18.1	General notes	123
18.2	Removing and installing storage compartment with USB connection	125
18.3	Overview of connectors on USB connection	127
18.4	Fault finding procedure	128
19	Multimedia system control unit	129
19.1	General notes	129
19.2	Overview of "multimedia system control unit"	129
19.3	Removing and installing multimedia control unit	130
20	Connection for external audio sources	132



20.1	Connection for external audio sources R199 from 06/2006	132
20.2	Connection for external audio sources R199 from 06/2007	133
21	Loudspeaker systems	135
21.1	Removing and installing front bass loudspeakers	135
21.2	Removing and installing rear bass loudspeakers (4-door)	136
21.3	Removing and installing rear bass loudspeakers (2-door)	137
21.4	Removing and installing front mid-range loudspeakers	138
21.5	Removing and installing front treble loudspeakers	139
21.6	Removing and installing rear treble loudspeakers (4-door)	140
21.7	Removing and installing rear treble loudspeakers (2-door)	142
21.8	Removing and installing rear treble loudspeakers, Golf Plus	143
22	Telephone systems	145
22.1	General notes	145
22.2	Fault finding	145
22.3	Overview of telephone system	145
22.4	Removing and installing telephone bracket, Golf saloon ▶ 06/2006	147
22.5	Removing and installing telephone bracket, Golf saloon 06/2006 ▶	148
22.6	Removing and installing telephone bracket, Golf Plus ▶ 06/2006	150
22.7	Removing and installing telephone bracket, Golf Plus 06/2006 ▶	153
22.8	Removing and installing telephone operating electronics control unit (interface box), Golf saloon ▶ 06/2006	154
22.9	Removing and installing telephone operating electronics control unit (interface box), Golf Plus ▶ 06/2006	156
22.10	Removing and installing telephone operating electronics control unit (interface box), Golf saloon, Golf Plus 06/2006 ▶	157
22.11	Removing and installing telephone system microphone	158
23	Aerial systems	160
23.1	General notes	160
23.2	Overview - aerial system ▶ 05.05	161
23.3	Overview - aerial system 06.05 ▶ for radio units without telephone/auxiliary heater telestart equipment	163
23.4	Overview - aerial system 06.05 ▶ for radio units or radio/navigation systems (with telephone/auxiliary heater telestart equipment)	164
23.5	Overview of aerial system with digital satellite tuner for vehicles for USA and Canada	166
23.6	Removing and installing aerial amplifier in rear lid, Golf saloon	167
23.7	Removing and installing aerial amplifier in rear lid, Golf Plus	168
23.8	Removing and installing amplitude modulation (AM) frequency filter	169
23.9	Removing and installing aerial selection control unit	170
23.10	Roof aerial	171
23.11	Renewal of aerial wiring	173
24	Multifunction steering wheel	174
24.1	General notes	174
24.2	Removing and installing steering wheel operating unit	174
24.3	Removing and installing multifunction steering wheel control unit	175
24.4	Adapting multifunction steering wheel components	176
25	Notes on operating mobile telephones and two-way radios	177
25.1	General notes	177
25.2	Notes on performing repair work	178
25.3	Overview of battery, transmitter and receiver unit, fuse and wiring harness	179
25.4	Transmitting power and aerial fitting locations	180
26	Suppression measures	182
26.1	Implementation of suppression measures	182