



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Tools	1
1.2 Assembly overview - lock carrier, service position	2
1.3 Service position	3
1.4 Removing and installing lock carrier with attachments	4
2 Wing	7
2.1 Tools	7
2.2 Assembly overview - front wing	7
2.3 Removing and installing wing	8
2.4 Removing and installing wing brace	10
3 Noise insulation	12
3.1 Tools	12
3.2 Assembly overview - noise insulation	12
4 Underbody cladding	14
4.1 Tools	14
4.2 Assembly overview - underbody cladding	14
5 Plenum chamber bulkhead	16
5.1 Tools	16
5.2 Assembly overview - plenum chamber bulkhead	16
55 - Bonnet, rear lid	17
1 Bonnet	17
1.1 Tools	17
1.2 Assembly overview - bonnet	17
1.3 Removing and installing bonnet	19
1.4 Removing gas strut	20
1.5 Releasing gas from gas strut	20
1.6 Removing and installing lid hinge	20
1.7 Removing and installing insulation	21
1.8 Assembly overview - bonnet latch and release components	24
1.9 Removing and installing bonnet lock	25
1.10 Separating Bowden cable	26
1.11 Adjusting bonnet	26
1.12 Removing and installing release lever	28
2 Rear lid	29
2.1 Tools	29
2.2 Assembly overview - rear lid	29
2.3 Removing and installing rear lid	30
2.4 Removing gas strut	31
2.5 Releasing gas from gas strut	31
2.6 Removing and installing rear lid hinges	31
2.7 Removing and installing striker pin	34
2.8 Adjusting rear lid	34
2.9 Assembly overview - rear lid latch and release components	36
2.10 Removing and installing release element	37
2.11 Removing and installing rear lid lock	39
2.12 Rear lid seal	39
2.13 Removing and installing rear lid seal	40
3 Tank flap unit	41
3.1 Tools	41
3.2 Assembly overview - tank flap unit	41



57 - Front doors, door components, central locking	45
1 Front door	45
1.1 Tools	45
1.2 Materials	46
1.3 Assembly overview - door assembly	46
1.4 Assembly overview - door hinges	49
1.5 Removing and installing door	50
1.6 Adjusting door	52
1.7 Removing and installing outer door panel	55
1.8 Installing new outer door panel	58
1.9 Removing and installing retaining rail on outer door panel	62
1.10 Installation instructions for bonding in new outer door panel	63
1.11 Minimum curing period	64
1.12 Cleaning off excess adhesive sealing material	64
1.13 Assembly overview - door inner part	65
1.14 Assembly overview - door handle and door lock	66
1.15 Removing and installing housing	67
1.16 Removing and installing door handle	68
1.17 Removing and installing mounting bracket	70
1.18 Removing and installing door lock	72
1.19 Assembly overview - side impact protection	74
1.20 Door inner seal	74
1.21 Removing and installing door inner seal	75
1.22 Removing and installing door outer seal	77
2 Central locking	80
2.1 Fitting location overview - central locking components	80
2.2 Adapting keys with remote control	81
2.3 Assembly overview - battery for folding key with remote control	82
2.4 Removing and installing battery for folding key with remote control	83
58 - Rear doors, door components	85
1 Rear door	85
1.1 Tools	85
1.2 Materials	86
1.3 Assembly overview - door assembly	86
1.4 Assembly overview - door hinges	89
1.5 Removing and installing door	90
1.6 Adjusting door	92
1.7 Removing and installing outer door panel	95
1.8 Installing new outer door panel	98
1.9 Removing and installing retaining rail on outer door panel	102
1.10 Installation instructions for bonding in new outer door panel	103
1.11 Minimum curing period	104
1.12 Cleaning off excess adhesive sealing material	104
1.13 Assembly overview - door inner part	105
1.14 Assembly overview - door handle and door lock	106
1.15 Removing and installing housing	107
1.16 Removing and installing door handle	107
1.17 Removing mounting bracket	109
1.18 Removing and installing door lock	111
1.19 Assembly overview - side impact protection	112
1.20 Door inner seals	113
1.21 Removing and installing door inner seal	114
1.22 Removing and installing door outer seal	115



60 - Sunroof	119
1 Sliding/tilting sunroof with glass panel (Meritor)	119
1.1 Tools	119
1.2 Function	120
1.3 Assembly overview - sliding/tilting sunroof with glass panel	120
1.4 Removing and installing boot	123
1.5 Removing sliding/tilting sunroof glass panel	124
1.6 Installing sliding/tilting sunroof glass panel	125
1.7 Adjusting height of sliding/tilting sunroof glass panel	125
1.8 Adjusting panel seal	126
1.9 Renewing panel seal	127
1.10 Removing and installing wind deflector	127
1.11 Removing and installing sliding headliner	128
1.12 Removing and installing sliding/tilting sunroof glass panel drive	129
1.13 Adjusting drive for sliding/tilting sunroof glass panel ("0" position)	130
1.14 Removing and installing sliding/tilting sunroof glass panel automatic preselection switch	131
1.15 Checking parallel running	131
1.16 Adjusting parallel running	131
1.17 Assembly overview - carrier unit	132
1.18 Removing and installing carrier unit	133
1.19 Operating without current	135
1.20 Removing and installing guide plate	135
1.21 Removing and installing guide plate	136
1.22 Cleaning water drain hoses	137
63 - Bumpers	140
1 Front bumper	140
1.1 Tools	140
1.2 Repairing bumper cover	140
1.3 Assembly overview - bumper cover	140
1.4 Removing and installing front bumper cover	141
1.5 Front bumper attachments	143
1.6 Front bumper substructure	144
1.7 Assembly overview - bumper carrier	145
1.8 Assembly overview - number plate carrier	146
2 Front bumper for GTI, GTI special models, GT, R32	147
2.1 Tools	147
2.2 Repairing bumper cover	147
2.3 Assembly overview - bumper cover for GTI, GT	147
2.4 Removing and installing front bumper cover for GT, GTI	148
2.5 Front bumper attachments for GT, GTI	150
2.6 Assembly overview - bumper cover for R32	152
2.7 Removing and installing front bumper cover for R32	152
2.8 Front bumper attachments for R32	154
2.9 Assembly overview - front bumper cover for GTI special models	155
2.10 Removing and installing front bumper cover for GTI special models	155
2.11 Front bumper attachments for GTI special models	157
2.12 Front bumper substructure	158
2.13 Assembly overview - bumper carrier	159
3 Rear bumper	160
3.1 Tools	160
3.2 Repairing bumper cover	160
3.3 Assembly overview - bumper cover	160
3.4 Removing and installing bumper cover	161



3.5	Rear bumper attachments	163
3.6	Rear bumper substructure	164
3.7	Assembly overview - bumper carrier	165
3.8	Assembly overview - towing bracket	165
4	Rear bumper for R32 and GTI special models	167
4.1	Tools	167
4.2	Repairing bumper cover	167
4.3	Assembly overview - bumper cover for R32	167
4.4	Removing and installing bumper cover for R32	168
4.5	Rear bumper attachments for R32	170
4.6	Assembly overview - rear bumper cover for GTI special models	171
4.7	Removing and installing rear bumper cover for GTI special models	171
4.8	Rear bumper attachments for GTI special models	173
4.9	Rear bumper substructure	174
4.10	Assembly overview - bumper carrier	175
64	- Glazing	176
1	Flush bonded windows	176
1.1	Tools	176
1.2	Materials	178
1.3	Repairing windscreen	178
1.4	Assembly overview - windscreen	178
1.5	Assembly overview - plenum chamber cover	180
1.6	Removing windscreen	183
1.7	Installing windscreen	183
1.8	Assembly overview - rear window	184
1.9	Removing undamaged rear window	184
1.10	Removing broken rear window	185
1.11	Installing rear window	186
1.12	Assembly overview - rear side window	186
1.13	Removing undamaged rear side window	187
1.14	Removing broken rear side window	188
1.15	Installing rear side window	188
1.16	Preparing old undamaged window for glazing	189
1.17	Preparing new window without precoating for glazing	189
1.18	Preparing new window with precoating for glazing	190
1.19	Preparing body flange for glazing	191
1.20	Installation instructions	192
1.21	Minimum curing period	192
1.22	Touching up paint damage	193
1.23	Cleaning off excess adhesive sealing material	193
2	Front door windows	194
2.1	Tools	194
2.2	Assembly overview- front door window	194
2.3	Removing and installing door window	195
2.4	Adjusting door window	197
2.5	Assembly overview - window regulator motor	199
2.6	Removing and installing window regulator motor	200
2.7	Assembly overview - window channel	202
2.8	Removing and installing window channel	202
2.9	Assembly overview - window regulator	204
2.10	Removing and installing window regulator	204
3	Rear door windows	206
3.1	Tools	206
3.2	Assembly overview - rear door windows	206



3.3	Removing and installing door window	207
3.4	Assembly overview - fixed door window with window channel	209
3.5	Removing and installing fixed door window with window channel	210
3.6	Assembly overview - window regulator motor	213
3.7	Removing and installing window regulator motor	213
3.8	Assembly overview - window regulator	216
3.9	Removing and installing window regulator	216
66	- Exterior equipment	218
1	Wheel housing liner	218
1.1	Tools	218
1.2	Assembly overview - front wheel housing liner	218
1.3	Removing and installing front wheel housing liner	219
1.4	Assembly overview - rear wheel housing liner	221
1.5	Removing and installing rear wheel housing liner	221
2	Exterior mirror	223
2.1	Tools	223
2.2	Assembly overview - rear view mirror	223
2.3	Removing and installing mirror glass	224
2.4	Removing and installing mirror housing	225
2.5	Removing and installing trim	227
2.6	Removing and installing side turn signal repeaters	227
2.7	Removing and installing rear view mirror	228
3	Radiator grille	230
3.1	Tools	230
3.2	Assembly overview - radiator grille	230
3.3	Removing and installing radiator grille	231
3.4	Assembly overview - radiator grille for GTI, GTI special models and GT	232
3.5	Removing and installing radiator grille for GT, GTI special models and GT	234
3.6	Radiator grille for GTI, GTI special models, GT and R32 - number plate carrier	236
3.7	Assembly overview - radiator grille for R32	237
3.8	Removing and installing radiator grille for R32	238
3.9	R32 radiator grille - company emblem	240
4	Mouldings and trims	241
4.1	Tools	241
4.2	Assembly overview - water deflector	241
4.3	Removing and installing water deflector	243
4.4	Assembly overview - protective side strip	245
4.5	Renewing protective side strips	246
4.6	Removing and installing stone-chip protection trim	247
4.7	Assembly overview - side member extension for GTI, GTI special models and R32	251
4.8	Removing and installing side member extension for GTI, GTI special models and R32	252
4.9	Retaining strip for side member extension	254
5	Roof spoiler	258
5.1	Tools	258
5.2	Materials	258
5.3	Assembly overview - roof spoiler for GTI, GTI special models and R32	259
5.4	Removing and installing roof spoiler for GTI, GTI special models and R32	260
5.5	Retaining strip	263
5.6	Preparing body kit component for bonding	264
5.7	Installation instructions	265
5.8	Minimum curing period	265
5.9	Touching up paint damage	265
5.10	Cleaning off excess adhesive sealing material	266
6	Protective backing	267



6.1	Attachment notes for protective foil	267
6.2	Renewing scuff protection film	267
7	Lettering	269
7.1	Tools	269
7.2	Installation instructions for lettering and emblems	269
7.3	Rear lettering dimensions	269
7.4	Rear lettering dimensions for GTI and R32	271
7.5	Rear lettering dimensions - USA	273
7.6	Dimensions for lettering on side - Volkswagen R GmbH	274
8	Vermin repellent system	277
8.1	Assembly overview - vermin repellent system	277