



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Vehicle identification data</b>	<b>1</b>
1.1 Vehicle identification number	1
1.2 Identification plate	2
1.3 Vehicle data sticker	3
<b>2 Safety instructions</b>	<b>4</b>
<b>3 Moulded foam elements</b>	<b>5</b>
<b>4 Galvanized body parts</b>	<b>6</b>
<b>5 High strength body parts</b>	<b>7</b>
<b>6 Laser welding</b>	<b>10</b>
<b>7 Body panel gaps/shut lines</b>	<b>11</b>
<b>8 Body dimensions</b>	<b>14</b>
8.1 Body - front	14
8.2 Body - centre	18
8.3 Body - rear	26
8.4 Floor group - front	28
8.5 Floor group - centre	30
8.6 Floor group - rear	31
<b>9 Alignment bracket set</b>	<b>32</b>
9.1 Overview	32
<b>10 Portal gauge</b>	<b>33</b>
10.1 2-door vehicle	33
10.2 4-door vehicle	34
<b>50 - Body - front</b>	<b>36</b>
<b>1 Renewing right bracket</b>	<b>36</b>
1.1 Tools	36
1.2 Removing	37
1.3 Installing	38
<b>2 Renewing left console</b>	<b>40</b>
2.1 Tools	40
2.2 Removing	41
2.3 Installing	42
<b>3 Renewing retaining bracket for subframe</b>	<b>44</b>
3.1 Removing	44
3.2 Installing	45
<b>4 Renewing front bumper bracket</b>	<b>47</b>
4.1 Removing	47
4.2 Installing	48
<b>5 Renewing upper wheel housing longitudinal member</b>	<b>50</b>
5.1 Tools	50
5.2 Removing	51
5.3 Installing	51
<b>6 Renewing upper longitudinal member for wheel housing - part section</b>	<b>53</b>
6.1 Tools	53
6.2 Removing	54
6.3 Installing	54
<b>7 Renewing front wheel housing</b>	<b>56</b>
7.1 Tools	56
7.2 Removing	57



7.3	Installing	57
<b>8</b>	<b>Repairing threads for securing subframe (suspension subframe)</b>	<b>59</b>
8.1	Contents of thread repair kit	61
8.2	Repairing thread	62
<b>9</b>	<b>Renewing front longitudinal member</b>	<b>65</b>
9.1	Tools	65
9.2	Removing	66
9.3	Installing	67
<b>10</b>	<b>Renewing front longitudinal member - part section</b>	<b>73</b>
10.1	Tools	73
10.2	Removing	74
10.3	Installing	76
<b>51 - Body - centre</b>		<b>78</b>
<b>1</b>	<b>Renewing roof</b>	<b>78</b>
1.1	Tools	78
1.2	Removing	80
1.3	Installing	81
<b>2</b>	<b>Renewing roof side member</b>	<b>91</b>
2.1	Tools	91
2.2	Removing	92
2.3	Installing	95
2.4	Foam treating roof side member	98
<b>3</b>	<b>Renewing front roof cross member</b>	<b>104</b>
3.1	Tools	104
3.2	Removing	105
3.3	Installing	106
<b>4</b>	<b>Renewing roof reinforcement, vehicles with no sliding/tilting sunroof</b>	<b>107</b>
4.1	Removing	107
4.2	Installing	108
<b>5</b>	<b>Renewing rear roof cross member</b>	<b>109</b>
5.1	Removing	109
5.2	Installing	110
<b>6</b>	<b>Renewing A-pillar - part section</b>	<b>112</b>
6.1	Tools	113
6.2	Removing	113
6.3	Installing	115
<b>7</b>	<b>Renewing A-pillar reinforcement</b>	<b>118</b>
7.1	Tools	119
7.2	Removing	120
7.3	Installing	121
<b>8</b>	<b>Renewing B-pillar</b>	<b>124</b>
8.1	Tools	125
8.2	Removing	126
8.3	Installing	127
<b>9</b>	<b>Renewing B-pillar reinforcement</b>	<b>132</b>
9.1	Tools	133
9.2	Removing	134
9.3	Installing	136
<b>10</b>	<b>Renewing B-pillar reinforcement</b>	<b>145</b>
10.1	Tools	146
10.2	Removing	147
10.3	Installing	151



<b>11</b>	<b>Renewing side member</b>	<b>161</b>
11.1	Tools	162
11.2	Removing	162
11.3	Installing	164
<b>12</b>	<b>Renewing seat cross member mounting plate</b>	<b>169</b>
12.1	Removing	170
12.2	Installing	171
<b>13</b>	<b>Renewing seat cross member mounting plate</b>	<b>172</b>
13.1	Removing	173
13.2	Installing	174
<b>14</b>	<b>Renewing front side member reinforcement</b>	<b>175</b>
14.1	Tools	176
14.2	Removing	177
14.3	Installing	178
<b>15</b>	<b>Renewing rear side member reinforcement</b>	<b>180</b>
15.1	Tools	181
15.2	Removing	182
15.3	Installing	183
<b>16</b>	<b>Renewing rear side member reinforcement</b>	<b>185</b>
16.1	Tools	186
16.2	Removing	187
16.3	Installing	187
<b>17</b>	<b>Renewing seat cross member</b>	<b>190</b>
17.1	Removing	191
17.2	Installing	191
<b>53 - Body - rear</b>		<b>192</b>
<b>1</b>	<b>Renewing cross panel</b>	<b>192</b>
1.1	Tools	192
1.2	Removing	193
1.3	Installing	194
<b>2</b>	<b>Renewing tail light mounting</b>	<b>196</b>
2.1	Tools	196
2.2	Removing	197
2.3	Installing	198
<b>3</b>	<b>Renewing reinforcing for tail light mounting plate</b>	<b>200</b>
3.1	Tools	200
3.2	Removing	201
3.3	Installing	202
<b>4</b>	<b>Renewing cross panel member</b>	<b>204</b>
4.1	Tools	204
4.2	Removing	204
4.3	Installing	204
<b>5</b>	<b>Renewing C-pillar reinforcement</b>	<b>206</b>
5.1	Tools	209
5.2	Removing	209
5.3	Installing	210
<b>6</b>	<b>Renewing rear longitudinal member - part section</b>	<b>212</b>
6.1	Tools	212
6.2	Removing	213
6.3	Installing	215
<b>7</b>	<b>Renewing side panel - part section</b>	<b>218</b>
7.1	Tools	220



7.2	Removing .....	221
7.3	Installing .....	222
<b>8</b>	<b>Renewing side panel - part section .....</b>	<b>228</b>
8.1	Tools .....	230
8.2	Removing .....	231
8.3	Installing .....	232
<b>9</b>	<b>Renewing inner side panel .....</b>	<b>235</b>
9.1	Tools .....	237
9.2	Removing .....	238
9.3	Installing .....	240
<b>10</b>	<b>Renewing outer wheel housing liner .....</b>	<b>244</b>
10.1	Tools .....	245
10.2	Removing .....	245
10.3	Installing .....	247
<b>11</b>	<b>Renewing spare wheel well .....</b>	<b>251</b>
11.1	Tools .....	251
11.2	Removing .....	252
11.3	Installing .....	253
<b>12</b>	<b>Renewing spare wheel well - part section .....</b>	<b>256</b>
12.1	Removing .....	256
12.2	Installing .....	257
<b>13</b>	<b>Renewing spare wheel well .....</b>	<b>260</b>
13.1	Tools .....	261
13.2	Removing .....	261
13.3	Installing .....	263