



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Gearbox identification	1
<b>2 Identification code, assembly allocation, capacities</b>	<b>2</b>
2.1 Identification codes, assembly allocation, gear ratios and capacities, Golf 2004 ▶	2
2.2 Identification codes, assembly allocation, gear ratios and capacities, Golf 2009 ▶	4
2.3 Identification codes, assembly allocation, ratios and capacities, Golf Plus 2005 ▶	6
2.4 Identification codes, assembly allocation, ratios and capacities, Golf Plus 2009 ▶	6
2.5 Identification codes, assembly allocation and capacities, Passat 2006 ▶	7
2.6 Calculating overall gear ratio "i"	8
<b>3 Overview - power transmission</b>	<b>9</b>
<b>4 General repair instructions</b>	<b>11</b>
<b>5 Safety precautions</b>	<b>14</b>
5.1 Safety precautions for vehicles with a start-stop system	14
<b>30 - Clutch</b>	<b>15</b>
<b>1 Clutch operation</b>	<b>15</b>
1.1 Overview - clutch actuation	15
1.2 Assembly overview - pedal cluster	17
1.3 Removing and installing over-centre spring	19
1.4 Removing and installing clutch pedal	38
1.5 Removing and installing mounting bracket	41
1.6 Removing and installing master cylinder	65
1.7 Removing and installing clutch position sender G476	67
1.8 Assembly overview - hydraulics (LHD)	70
1.9 Assembly overview - hydraulics (RHD)	73
1.10 Removing and installing slave cylinder	74
1.11 Bleeding clutch system	76
<b>2 Clutch release mechanism</b>	<b>79</b>
2.1 Assembly overview - clutch release mechanism	79
2.2 Repairing clutch release mechanism	80
<b>3 Clutch</b>	<b>81</b>
3.1 Clutch in connection with dual mass flywheel	81
3.2 Clutch in connection with simple flywheel	89
<b>34 - Controls, housing</b>	<b>93</b>
<b>1 Selector mechanism</b>	<b>93</b>
1.1 Installation position of selector mechanism	93
1.2 Overview - selector mechanism	94
1.3 Assembly overview - gear knob and cover	94
1.4 Removing and installing gear knob with gaiter and noise insulation	96
1.5 Assembly overview - Gear lever and selector housing	101
1.6 Dismantling and assembling selector mechanism (from 11.06)	104
1.7 Assembly overview - Selector cables	109
1.8 Removing and installing selector mechanism	116
1.9 Adjusting selector mechanism	121
<b>2 Removing and installing gearbox</b>	<b>125</b>
2.1 Removing and installing gearbox, Golf 2004 ▶	125
2.2 Removing and installing gearbox, Golf 2009 ▶ with turbo diesel engine	138
2.3 Removing and installing gearbox, Golf 2009 ▶ with petrol engine	153
2.4 Removing and installing gearbox, Golf Plus	170
2.5 Removing and installing gearbox, Passat	188



<b>3</b>	<b>Transporting gearbox</b>	<b>202</b>
<b>4</b>	<b>Assembly overview - assembly mountings</b>	<b>203</b>
<b>5</b>	<b>Gear oil</b>	<b>205</b>
5.1	Checking and topping up gear oil	205
<b>6</b>	<b>Dismantling and assembling gearbox</b>	<b>208</b>
6.1	Overview - gearbox	208
6.2	Assembly overview - dismantling and assembling gearbox	209
6.3	Assembly overview - removing and installing cover for gearbox housing and 5th gear	210
6.4	Assembly overview - removing and installing gearbox housing and selector mechanism	211
6.5	Assembly overview - removing and installing input shaft, output shaft, differential and selector forks	213
6.6	Assembly sequence - removing and installing cover for gearbox housing and 5th gear	214
6.7	Assembly sequence - Dismantling and assembling gearbox completely	220
<b>7</b>	<b>Gearbox housing and clutch housing</b>	<b>235</b>
7.1	Assembly overview - gearbox housing and clutch housing	235
7.2	Repairing gearbox housing and clutch housing	237
<b>8</b>	<b>Selector unit</b>	<b>242</b>
8.1	Assembly overview - selector unit	242
8.2	Repairing selector unit	244
<b>9</b>	<b>Selector forks</b>	<b>246</b>
9.1	Assembly overview - selector forks	246
9.2	Repairing selector forks	247
<b>35 - Gears, shafts</b>		<b>251</b>
<b>1</b>	<b>Input shaft</b>	<b>251</b>
1.1	Assembly overview - input shaft	251
1.2	Dismantling and assembling input shaft	253
1.3	Adjusting input shaft	258
1.4	Renewing input shaft seal	263
<b>2</b>	<b>Output shaft</b>	<b>265</b>
2.1	Assembly overview - output shaft	265
2.2	Dismantling and assembling output shaft	268
2.3	Adjusting output shaft	278
<b>3</b>	<b>Reverse shaft</b>	<b>281</b>
3.1	Assembly overview - reverse shaft	281
3.2	Dismantling and assembling reverse shaft	282
<b>39 - Final drive - differential</b>		<b>285</b>
<b>1</b>	<b>Oil seals</b>	<b>285</b>
1.1	Renewing left flange shaft oil seal with gearbox installed	285
1.2	Distinguishing seals for right flange shaft	287
1.3	Renewing right seal with manual gearbox installed (two-part seal for flange shaft and sleeve)	287
1.4	Renewing right seal and sleeve together with manual gearbox installed (one-piece seal and sleeve for flange shaft)	290
<b>2</b>	<b>Adjustment overview</b>	<b>294</b>
<b>3</b>	<b>Differential</b>	<b>295</b>
3.1	Assembly overview - differential	295
3.2	Dismantling and assembling differential	297
3.3	Adjusting differential	302