



Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Location on gearbox	1
1.2 Code letters, assembly allocation and capacities - Golf 2004 ▶	2
1.3 Identification codes, assembly allocation, capacities, Golf 2009 ▶	3
1.4 Identification codes, assembly allocation, capacities, Golf Plus 2005 ▶	4
1.5 Identification codes, assembly allocation, capacities, Golf Plus 2009 ▶	5
2 Overview - power transmission	7
3 Calculating overall gear ratio "i"	9
4 General repair instructions	10
4.1 Gearbox	10
4.2 Gaskets and seals	10
4.3 Sealant	10
4.4 Locking devices	11
4.5 Nuts and bolts	11
4.6 Mountings	11
4.7 Shims	11
4.8 Synchro-rings	12
4.9 Gear wheels	12
4.10 Synchroneshed gears	12
4.11 Clutch	12
5 Safety measures for vehicles with start/stop system	13
30 - Clutch	14
1 Repairing clutch mechanism	14
1.1 Overview	14
1.2 Assembly overview - pedal cluster	15
1.3 Removing and installing over-centre spring - Golf 2004 ▶	16
1.4 Removing and installing over-centre spring, Golf 2009 ▶, LHD vehicles	21
1.5 Removing and installing over-centre spring - Golf 2009 ▶ right-hand drive	26
1.6 Removing and installing over-centre spring, Golf Plus	31
1.7 Removing and installing clutch pedal - Golf 2004 ▶	36
1.8 Removing and installing clutch pedal, Golf 2009 ▶, LHD vehicles	41
1.9 Removing and installing clutch pedal - Golf 2009 ▶ right-hand drive	46
1.10 Removing and installing clutch pedal, Golf Plus	51
1.11 Removing and installing mounting bracket, Golf 2004 ▶	57
1.12 Removing and installing mounting bracket, Golf 2009 ▶, LHD vehicles	62
1.13 Removing and installing mounting bracket, Golf 2009 ▶ RHD and Golf Plus RHD	68
1.14 Removing and installing mounting bracket, Golf Plus, LHD vehicles	73
1.15 Removing and installing master cylinder	79
1.16 Removing and installing clutch position sender G476	81
1.17 Assembly overview - hydraulics (LHD)	83
1.18 Assembly overview - hydraulics (RHD)	86
1.19 Removing and installing slave cylinder	87
1.20 Bleeding clutch system	89
2 Repairing clutch release mechanism	91
3 Repairing clutch	93
34 - Controls, housing	97
1 Repairing selector mechanism	97
1.1 Installation position of selector mechanism	97
1.2 Removing and installing gear knob and cover	99



1.3	Removing and installing gaiter with gear knob and noise insulation, Golf	100
1.4	Removing and installing gaiter with gear knob and noise insulation, Golf Plus	101
1.5	Repairing gear lever and selector housing (through 10.06)	103
1.6	Repairing gear lever and selector housing (from 11.06)	105
1.7	Assembly overview - removing and installing selector cables	111
1.8	Plastic relay lever	114
1.9	Removing and installing selector mechanism	116
1.10	Adjusting selector mechanism	120
2	Removing and installing gearbox, Golf 2004 ►	124
2.1	Removing gearbox	126
2.2	Install gearbox	132
3	Removing and installing gearbox, Golf 2009 ►	140
3.1	Removing gearbox	142
3.2	Install gearbox	148
4	Removing and installing gearbox, Golf Plus	155
4.1	Removing gearbox	158
4.2	Install gearbox	164
5	Transporting gearbox	173
6	Checking gear oil	174
7	Dismantling and assembling gearbox	176
7.1	Overview - gearbox	176
7.2	Assembly overview	177
7.3	Assembly overview - removing and installing cover for gearbox housing and 5th gear	178
7.4	Assembly overview - removing and installing clutch housing	179
7.5	Assembly overview - removing and installing input shaft, output shaft, differential, selector mechanism and selector forks	180
7.6	Assembly sequence	181
8	Repairing gearbox housing and clutch housing	191
9	Repairing selector unit	196
10	Dismantling and assembling selector forks	199
35	Gears, shafts	204
1	Input shaft	204
1.1	Dismantling and assembling input shaft	204
2	Output shaft	215
2.1	Dismantling and assembling output shaft	215
39	Final drive - differential	223
1	Renewing flange shaft oil seals with gearbox installed	223
1.1	Renewing oil seal for left flange shaft	223
1.2	Renewing seal for right flange shaft	225
2	Differential	228
2.1	Dismantling and assembling differential	228
2.2	Adjusting differential	236