



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Location on gearbox .....	1
1.2 Identification codes, assembly allocation, capacities, Golf 4 MOTION 2005 ▶ .....	1
1.3 Identification codes, assembly allocation, capacities, Passat 4 MOTION 2006 ▶ .....	3
<b>2 Overview - power transmission</b> .....	<b>5</b>
<b>3 Calculating overall gear ratio "i"</b> .....	<b>7</b>
3.1 Notes on performance test .....	7
<b>4 General repair notes</b> .....	<b>8</b>
4.1 Components .....	8
<b>30 - Clutch</b> .....	<b>11</b>
<b>1 Repairing clutch mechanism, Golf</b> .....	<b>11</b>
1.1 Overview .....	11
1.2 Assembly overview - pedal cluster .....	12
1.3 Removing and installing over-centre spring, Golf .....	13
1.4 Removing and installing clutch pedal, Golf .....	17
1.5 Removing and installing mounting bracket, Golf .....	22
1.6 Removing and installing master cylinder .....	27
1.7 Removing and installing clutch position sender G476 .....	29
1.8 Assembly overview - hydraulics (LHD) .....	31
1.9 Assembly overview - hydraulics (RHD) .....	34
1.10 Removing and installing slave cylinder .....	35
1.11 Bleeding clutch system .....	37
<b>2 Repairing clutch mechanism, Passat</b> .....	<b>39</b>
2.1 Overview .....	39
2.2 Assembly overview - pedal cluster .....	40
2.3 Removing and installing mounting bracket .....	41
2.4 Removing and installing over-centre spring .....	45
2.5 Removing and installing clutch pedal .....	46
2.6 Removing and installing master cylinder .....	48
2.7 Removing and installing clutch position sender G476 .....	50
2.8 Assembly overview - hydraulics (LHD) .....	52
2.9 Assembly overview - hydraulics (RHD) .....	55
2.10 Removing and installing slave cylinder .....	56
2.11 Bleeding clutch system .....	58
<b>3 Repairing clutch release mechanism</b> .....	<b>60</b>
<b>4 Repairing clutch</b> .....	<b>62</b>
4.1 Removing and installing Sachs clutch .....	62
4.2 Repairing Sachs clutch .....	64
4.3 Removing and installing LuK clutch .....	65
4.4 Repairing LuK clutch .....	67
<b>34 - Controls, housing</b> .....	<b>69</b>
<b>1 Repairing selector mechanism</b> .....	<b>69</b>
1.1 Installation position of selector mechanism .....	69
1.2 Removing and installing gear knob and cover .....	71
1.3 Removing and installing gaiter with gear knob and noise insulation, Golf .....	71
1.4 Removing and installing gaiter with selector lever knob and noise insulation, Passat .....	73
1.5 Repairing gear lever and selector housing (through 10.06) .....	74
1.6 Repairing gear lever and selector housing (from 11.06) .....	77
1.7 Assembly overview - removing and installing selector cables .....	81



1.8	Plastic relay lever	86
1.9	Removing and installing selector mechanism	87
1.10	Adjusting selector mechanism	90
<b>2</b>	<b>Removing and installing gearbox, Golf</b>	<b>94</b>
2.1	Removing gearbox	95
2.2	Installing gearbox	102
<b>3</b>	<b>Removing and installing gearbox, Passat</b>	<b>111</b>
3.1	Removing gearbox	112
3.2	Installing gearbox	120
<b>4</b>	<b>Checking and topping up gear oil</b>	<b>129</b>
4.1	Preparation	129
4.2	Draining gear oil	130
4.3	Fill with gear oil	131
<b>5</b>	<b>Removing and installing bevel box</b>	<b>132</b>
5.1	Removing bevel box	132
5.2	Installing bevel box	136
<b>6</b>	<b>Checking or topping up gear oil in bevel box</b>	<b>140</b>
6.1	Checking gear oil in bevel box	140
6.2	Topping up gear oil in bevel box	141
<b>7</b>	<b>Dismantling and assembling gearbox</b>	<b>144</b>
7.1	Overview - gearbox	144
7.2	Assembly overview	145
7.3	Removing and installing cover for gearbox housing and 5th and 6th gears	146
7.4	Removing and installing gearbox housing and shift mechanism	149
7.5	Removing and installing input shaft, output shaft, differential, selector forks and bevel box	150
7.6	Assembly sequence - Removing and installing cover for gearbox housing and 5th and 6th gear	151
7.7	Assembly sequence - Dismantling and assembling gearbox completely	157
<b>8</b>	<b>Repairing gearbox housing and clutch housing</b>	<b>175</b>
<b>9</b>	<b>Repairing gearbox housing cover</b>	<b>180</b>
<b>10</b>	<b>Repairing selector unit</b>	<b>184</b>
<b>11</b>	<b>Dismantling and assembling selector forks</b>	<b>187</b>
<b>35 - Gears, shafts</b>		<b>192</b>
<b>1</b>	<b>Input shaft</b>	<b>192</b>
1.1	Dismantling and assembling input shaft	192
1.2	Adjusting input shaft	200
<b>2</b>	<b>Output shaft</b>	<b>205</b>
2.1	Dismantling and assembling output shaft	205
2.2	Adjusting output shaft	218
<b>3</b>	<b>Reverse shaft</b>	<b>223</b>
3.1	Dismantling and assembling reverse shaft	223
<b>39 - Final drive - front differential</b>		<b>226</b>
<b>1</b>	<b>Renewing flange shaft oil seals with gearbox and bevel box installed</b>	<b>226</b>
1.1	Renewing oil seal for left flange shaft	226
1.2	Renewing seal for right flange shaft	227
<b>2</b>	<b>Renewing seal between gearbox and bevel box with gearbox installed</b>	<b>231</b>
<b>3</b>	<b>Renewing seal between gearbox and bevel box with gearbox removed</b>	<b>233</b>
<b>4</b>	<b>Renewing bevel box output flange oil seal (bevel box removed)</b>	<b>235</b>
<b>5</b>	<b>Renewing polygon needle bearing and seal on right flange shaft</b>	<b>240</b>
5.1	Removing	241



5.2	Installing .....	243
<b>6</b>	<b>Adjustment overview .....</b>	<b>245</b>
<b>7</b>	<b>Differential .....</b>	<b>246</b>
7.1	Dismantling and assembling differential .....	246
7.2	Adjusting differential .....	254