



Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Location on gearbox	1
1.2 Identification codes, assembly allocation, Golf	2
1.3 Identification codes, assembly allocation, Passat	6
2 Capacities	8
2.1 Capacity, manual gearbox	8
2.2 Capacity, bevel box	8
3 Overview - power transmission	9
4 Calculating overall gear ratio "i"	11
4.1 Notes on performance test	11
5 General repair instructions	12
5.1 Contact corrosion	12
5.2 Repair instructions	12
30 - Clutch	15
1 Repairing clutch mechanism, Golf	15
1.1 Overview - clutch actuation	15
1.2 Assembly overview - pedal cluster	16
1.3 Removing and installing over-centre spring	17
1.4 Removing and installing clutch pedal	21
1.5 Removing and installing mounting bracket, Golf	26
1.6 Removing and installing master cylinder	32
1.7 Removing and installing clutch position sender G476	33
1.8 Assembly overview - hydraulics (LHD vehicles)	35
1.9 Assembly overview - hydraulics (RHD vehicles)	38
1.10 Bleeding clutch system	39
2 Repairing clutch mechanism, Passat	41
2.1 Overview - clutch actuation	41
2.2 Assembly overview - pedal cluster	42
2.3 Removing and installing mounting bracket, Passat	43
2.4 Removing and installing over-centre spring	46
2.5 Removing and installing clutch pedal	48
2.6 Removing and installing master cylinder	50
2.7 Removing and installing clutch position sender G476	52
2.8 Assembly overview - hydraulics (LHD vehicles)	54
2.9 Assembly overview - hydraulics (RHD vehicles)	57
2.10 Bleeding clutch system	58
3 Repairing clutch release mechanism	60
3.1 Assembly overview	60
3.2 Removing pipe/hose line or plastic line and bleeder from and installing on slave cylinder	61
3.3 Removing and installing slave cylinder with release bearing	62
3.4 Removing and installing pipe/hose line or plastic line	63
3.5 Renewing input shaft seal	65
4 Clutch - vehicles with turbo diesel engine	67
4.1 Identifying make of clutch, vehicles with 2.0 l - 100 kW turbo diesel engine and vehicles with 2.0 l - 103 kW turbo diesel engine	67
4.2 Removing and installing "Sachs" clutch	68
4.3 Repairing "Sachs" clutch	70
4.4 Removing and installing "LuK" clutch	71
4.5 Repairing "LuK" clutch	73



5	Clutch - vehicles with petrol engine	75
5.1	Removing and installing clutch	75
5.2	Repairing clutch	77
34	Controls, housing	79
1	Fault finding, power transmission	79
2	Repairing selector mechanism	80
2.1	Installation position of selector mechanism	80
2.2	Removing and installing gear knob and cover	82
2.3	Removing and installing gaiter with gear knob and noise insulation, Golf	82
2.4	Removing and installing gaiter with gear knob and noise insulation, Passat	84
2.5	Repairing gear lever and selector housing (through 10.06)	85
2.6	Repairing gear lever and selector housing (from 11.06)	88
2.7	Assembly overview - removing and installing selector cables	92
2.8	Removing and installing selector mechanism	96
2.9	Adjusting selector mechanism	100
2.10	Checking selector mechanism	102
3		104
4	Removing and installing gearbox, Golf	107
4.1	Removing and installing gearbox, vehicles with turbo diesel engine	107
4.2	Removing and installing gearbox, vehicles with 6-cylinder petrol engines	127
4.3	Transporting gearbox	146
5	Removing and installing gearbox, Passat	148
5.1	Removing and installing gearbox	148
5.2	Transporting gearbox	167
6	Gear oil	169
6.1	Distinguishing between different manual gearbox types when filling oil	169
6.2	Checking oil level in gearbox	169
7	Removing and installing bevel box, vehicles with 6-cylinder petrol engine and vehicles with turbo diesel engine without particulate filter	174
7.1	Removing bevel box	174
7.2	Installing bevel box	179
8	Removing and installing bevel box, vehicles with turbo diesel engine and particulate filter	183
8.1	Removing bevel box	183
8.2	Installing bevel box	188
9	Checking or topping up gear oil in bevel box	192
9.1	Checking gear oil in bevel box	192
9.2	Topping up gear oil in bevel box	193
10	Dismantling and assembling gearbox	196
10.1	Overview - gearbox	196
10.2	Assembly overview	197
10.3	Removing and installing gearbox housing and selector mechanism	198
10.4	Removing and installing input shaft, output shafts, differential, bevel box and selector rods	200
10.5	Assembly order, gearbox »without« retaining ring A for input shaft sealing cover	201
10.6	Assembly order, gearbox »with« retaining ring A for input shaft sealing cover	214
11	Repairing gearbox housing	226
12	Repairing clutch housing	236
13	Repairing selector mechanism, gearbox side	240
13.1	Renewing selector shaft seal	241
14	Repairing selector forks	243
35	Gears, shafts	246



1	Input shaft	246
1.1	Dismantling and assembling input shaft	246
2	Output shaft for 1st to 4th gears	253
2.1	Dismantling and assembling output shaft for 1st to 4th gears	253
2.2	Adjusting output shaft for 1st to 4th gears	266
3	Output shaft for 5th and 6th gears and reverse gear	272
3.1	Dismantling and assembling output shaft for 5th, 6th and reverse gears	272
3.2	Adjusting output shaft for 5th, 6th and reverse gears	282
39	- Final drive - front differential	288
1	Renewing flange shaft oil seals with gearbox and bevel box installed	288
1.1	Renewing oil seal for left flange shaft	288
1.2	Renewing seal for right flange shaft	289
2	Renewing seal between gearbox and bevel box, in gearbox	293
3	Renewing seal between gearbox and bevel box with bevel box removed	295
4	Renewing bevel box output flange oil seal (bevel box removed)	297
5	Renewing polygon needle bearing and seal on right flange shaft	302
5.1	Removing	303
5.2	Installing	305
6	Adjustment overview	306
7	Differential	307
7.1	Dismantling and assembling differential	307
7.2	Adjusting differential	313