



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing	4
1.2 Installing	8
1.3 Specified torques	10
1.4 Additional information and assembly work for vehicles with air conditioner	11
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Part I: assembly overview - toothed belt drive	13
1.2 Assembly overview - part II, cylinder block	16
1.3 Removing and installing poly V-belt	16
2 Cylinder block, sealing flange	18
2.1 Assembly overview - aluminium cylinder block	18
2.2 Renewing crankshaft oil seal - pulley end	20
2.3 Poly V-belt pulley securing bolt tightening procedure	21
2.4 Renewing crankshaft sealing flange - flywheel end	22
2.5 Crankshaft dimensions	29
3 Pistons and conrods	31
3.1 Assembly overview	31
15 - Cylinder head, valve gear	35
1 Cylinder head	35
1.1 Assembly overview	35
1.2 Checking valve timing	37
1.3 Removing, installing and tensioning toothed belt	38
1.4 Checking semi-automatic toothed belt tensioning roller	45
1.5 Removing and installing camshaft housing	47
1.6 Removing and installing cylinder head	51
1.7 Checking compression	57
2 Valve gear	59
2.1 Assembly overview	59
2.2 Reworking valve seats	62
2.3 Renewing camshaft oil seals	63
2.4 Checking valve guides	66
2.5 Renewing valve stem seals	67
17 - Lubrication	69
1 Parts of lubrication system	69
1.1 Engine oil	69
1.2 Assembly overview	69
1.3 Assembly overview - oil filler neck, engine code BCA	72
1.4 Removing and installing oil filler neck, engine code BCA	72
1.5 Removing and installing oil sump	73
1.6 Removing and installing oil pump	75
1.7 Checking oil pressure and oil pressure switch	77
19 - Cooling	80



1	Parts of cooling system	80
1.1	Assembly overview - parts of cooling system (radiator with two fans), body side	80
1.2	Assembly overview - parts of cooling system (radiator with one fan), body side	83
1.3	Assembly overview - parts of cooling system - thermostat side	84
1.4	Assembly overview - parts of cooling system - coolant pump side	85
1.5	Coolant hose schematic diagram	86
1.6	Draining and filling coolant	87
1.7	Removing and installing radiator fan V7 and radiator fan 2 V177	91
1.8	Removing and installing radiator	91
1.9	Removing and installing coolant pump	93
1.10	Checking cooling system for leaks	95
20	- Fuel supply system	98
1	Parts of fuel supply system	98
1.1	Assembly overview - dismantling and assembling fuel tank with add-on parts and fuel filter	98
1.2	Safety precautions when working on fuel supply system	101
1.3	Rules for cleanliness	101
1.4	Emptying fuel tank	101
1.5	Removing and installing fuel delivery unit	104
1.6	Removing and installing fuel gauge sender G	106
1.7	Removing and installing fuel tank	106
1.8	Assembly overview - fuel filter with add-on parts (engine code BCA)	108
1.9	Removing and installing fuel filter	109
1.10	Crash fuel shut-off	109
1.11	Checking fuel pump (vehicles ► model year 2006)	110
1.12	Checking fuel pump (vehicles model year 2006 ►)	117
1.13	Bleeding fuel system	124
2	Electronic power control (EPC)	128
2.1	Assembly overview	128
2.2	Removing and installing accelerator module	128
3	Activated charcoal filter system	130
3.1	Assembly overview - activated charcoal filter system	130
3.2	Checking fuel tank breather	130
24	- Mixture preparation - injection	132
1	Injection system	132
1.1	General notes on injection	132
1.2	Safety precautions	133
1.3	Rules for cleanliness	134
1.4	Assembly overview - intake manifold (engine code BCA)	134
1.5	Assembly overview - intake manifold (engine codes BUD and CGGA)	136
1.6	Assembly overview - fuel rail with injectors	137
1.7	Assembly overview - air filter housing (engine code BCA)	137
1.8	Assembly overview - air filter housing (engine codes BUD and CGGA)	139
1.9	Removing and installing air filter housing (engine codes BUD and CGGA)	140
1.10	Cleaning throttle valve module J338	141
1.11	Removing and installing injectors	142
2	Checking components	144
2.1	Checking intake air preheater (only engine codes BCA)	144
2.2	Checking injectors for leaks and quantity injected (vehicles ► model year 2006)	144
2.3	Checking injectors for leaks and quantity injected (vehicles model year 2006 ►)	147
2.4	Checking fuel pressure regulator and holding pressure	150
3	Engine control unit J623	153
3.1	Removing and installing engine control unit J623 (Golf model year 2004 ► 2008)	153



3.2	Removing and installing anti-theft engine control unit J623 (Golf model year 2004 ► 2008)	154
3.3	Removing and installing engine control unit J623 (Golf 2009 ►)	157
3.4	Removing and installing anti-theft engine control unit J623 (Golf 2009 ►)	158
3.5	Removing and installing engine control unit J623 (Golf Plus)	160
3.6	Removing and installing anti-theft engine control unit J623 (Golf Plus)	162
26 - Exhaust system		165
1	Parts of the exhaust system	165
1.1	Assembly overview - catalytic converters and add-on parts (engine code BCA)	165
1.2	Assembly overview - catalytic converters and add-on parts (engine codes BUD and CGGA)	167
1.3	Assembly overview - silencers with mountings	168
1.4	Separating front and rear silencers	169
2	Exhaust gas recirculation system	171
2.1	Assembly overview - exhaust gas recirculation system	171
28 - Ignition system		172
1	Ignition system	172
1.1	General notes on ignition system	172
1.2	Assembly overview - ignition system	172
1.3	Removing and installing ignition coils with output stage	173
1.4	Safety precautions	175
1.5	Test data, spark plugs	175