



Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Technical data | 1 |
| 1.1 Engine number | 1 |
| 1.2 Engine data | 1 |
| 10 - Removing and installing engine | 3 |
| 1 Removing and installing engine (Golf, Golf Plus, Eos, Scirocco) | 3 |
| 1.1 Removing engine | 3 |
| 1.2 Securing engine to assembly stand | 11 |
| 1.3 Installing engine | 11 |
| 1.4 Torque settings | 14 |
| 1.5 Assembly mountings | 14 |
| 1.6 Additional information and assembly work for vehicles with air conditioner | 15 |
| 2 Removing and installing engine (Tiguan) | 16 |
| 2.1 Removing engine | 16 |
| 2.2 Securing engine to assembly stand | 25 |
| 2.3 Installing engine | 25 |
| 2.4 Torque settings | 27 |
| 2.5 Assembly mountings | 28 |
| 2.6 Additional information and assembly work for vehicles with air conditioner | 29 |
| 3 Removing and installing engine (Passat) | 30 |
| 3.1 Removing engine | 30 |
| 3.2 Securing engine to assembly stand | 41 |
| 3.3 Installing engine | 41 |
| 3.4 Torque settings | 44 |
| 3.5 Assembly mountings | 44 |
| 3.6 Additional information and assembly work for vehicles with air conditioner | 45 |
| 13 - Crankshaft group | 46 |
| 1 Dismantling and assembling engine | 46 |
| 1.1 Assembly overview - parts I and II | 46 |
| 1.2 Assembly overview - part I, belt drive | 48 |
| 1.3 Assembly overview - part II, cylinder block | 49 |
| 1.4 Removing and installing poly-V belt | 51 |
| 1.5 Removing and installing valve timing housing (Golf, Golf Plus, Eos, Scirocco) | 52 |
| 1.6 Removing and installing valve timing housing (Tiguan) | 57 |
| 1.7 Removing and installing valve timing housing (Passat) | 61 |
| 1.8 Removing and installing bracket for ancillaries | 66 |
| 2 Removing and installing sealing flanges and flywheel or drive plate | 68 |
| 2.1 Assembly overview | 68 |
| 2.2 Removing and installing engine speed sender G28 | 69 |
| 2.3 Renewing crankshaft oil seal - belt pulley end | 70 |
| 2.4 Removing and installing crankshaft pulley | 72 |
| 2.5 Renewing crankshaft sealing flange - flywheel end | 75 |
| 3 Crankshaft | 84 |
| 3.1 Assembly overview | 84 |
| 3.2 Pulling needle bearing out of and driving into crankshaft | 85 |
| 3.3 Crankshaft dimensions | 87 |
| 4 Dismantling and assembling pistons and conrods | 88 |
| 4.1 Assembly overview | 88 |
| 4.2 Checking piston | 90 |
| 4.3 Separating new conrod | 91 |



| | | |
|-----------|--|------------|
| 4.4 | Piston and cylinder dimensions | 91 |
| 4.5 | Removing and installing pistons | 92 |
| 4.6 | Removing and installing oil spray jets | 93 |
| 15 | - Cylinder head, valve gear | 94 |
| 1 | Cylinder head | 94 |
| 1.1 | Assembly overview | 94 |
| 1.2 | Checking valve timing | 97 |
| 1.3 | Adjusting valve timing | 99 |
| 1.4 | Checking timing chain | 108 |
| 1.5 | Removing and installing timing chain and chain drive for oil pump | 114 |
| 1.6 | Removing and installing camshaft housing | 122 |
| 1.7 | Removing and installing cylinder head | 128 |
| 1.8 | Checking compression | 131 |
| 2 | Repairing valve gear | 134 |
| 2.1 | Assembly overview | 134 |
| 2.2 | Checking camshaft axial clearance | 136 |
| 2.3 | Removing and installing camshaft | 136 |
| 2.4 | Reworking valve seats | 137 |
| 2.5 | Checking valve guides | 138 |
| 2.6 | Renewing valve stem seals | 139 |
| 17 | - Lubrication | 141 |
| 1 | Removing and installing parts of lubrication system | 141 |
| 1.1 | Engine oil, oil capacities, engine oil specification | 141 |
| 1.2 | Assembly overview (▶ model year 2008) | 141 |
| 1.3 | Assembly overview (model year 2009 ▶) | 144 |
| 1.4 | Removing and installing oil sump | 146 |
| 1.5 | Removing and installing oil pump | 149 |
| 1.6 | Checking oil pressure and oil pressure switch | 151 |
| 19 | - Cooling | 154 |
| 1 | Removing and installing parts of cooling system | 154 |
| 1.1 | Assembly overview - parts of cooling system, body side | 155 |
| 1.2 | Assembly overview - parts of cooling system, engine side | 157 |
| 1.3 | Coolant hose connection diagram | 158 |
| 1.4 | Draining and adding coolant | 159 |
| 1.5 | Removing and installing radiator fan V7 and radiator fan 2 V177 (Golf, Golf Plus, Eos, Scirocco) | 162 |
| 1.6 | Removing and installing radiator fan V7 and radiator fan 2 V177 (Tiguan, Passat) | 163 |
| 1.7 | Checking cooling system for leaks | 164 |
| 1.8 | Removing and installing radiator (Golf, Golf Plus, Scirocco, Eos) | 165 |
| 1.9 | Removing and installing radiator (Tiguan, Passat) | 167 |
| 1.10 | Removing and installing auxiliary radiator for charge air system (Tiguan, Passat) | 169 |
| 1.11 | Removing and installing coolant pump | 173 |
| 1.12 | Removing and installing coolant circulation pump V50 | 175 |
| 20 | - Fuel supply system | 178 |
| 1 | Safety precautions | 178 |
| 1.1 | Safety regulations for working on fuel supply | 178 |
| 1.2 | Releasing pressure in high-pressure area | 179 |
| 2 | Separating plug-in connectors | 180 |
| 3 | Fuel tank (Golf, Golf Plus, Scirocco) | 183 |
| 3.1 | Assembly overview - fuel tank | 183 |
| 3.2 | Emptying fuel tank | 184 |
| 3.3 | Removing and installing fuel tank | 187 |



| | | |
|-----------|---|------------|
| 4 | Fuel tank (Passat) | 189 |
| 4.1 | Assembly overview - fuel tank | 189 |
| 4.2 | Emptying fuel tank | 190 |
| 4.3 | Removing and installing fuel tank | 193 |
| 5 | Fuel tank (Eos) | 197 |
| 5.1 | Assembly overview - fuel tank | 197 |
| 5.2 | Emptying fuel tank | 199 |
| 5.3 | Removing and installing fuel tank | 201 |
| 6 | Fuel tank (Tiguan) | 204 |
| 6.1 | Assembly overview - fuel tank (Tiguan) | 204 |
| 6.2 | Draining fuel tank (Tiguan) | 206 |
| 6.3 | Removing and installing fuel tank (Tiguan) | 208 |
| 7 | Repairing fuel supply system (Golf, Golf Plus, Scirocco, Eos) | 213 |
| 7.1 | Rules for cleanliness | 213 |
| 7.2 | Crash fuel shut-off | 213 |
| 7.3 | Removing and installing fuel delivery unit (Golf Plus, Golf, Scirocco, Eos) | 214 |
| 7.4 | Removing and installing fuel gauge sender G | 216 |
| 7.5 | Checking fuel pump | 217 |
| 8 | Repairing fuel supply (Passat) | 229 |
| 8.1 | Rules for cleanliness | 229 |
| 8.2 | Crash fuel shut-off | 229 |
| 8.3 | Removing and installing fuel delivery unit | 230 |
| 8.4 | Removing and installing fuel gauge sender G | 233 |
| 8.5 | Checking fuel pump | 235 |
| 9 | Repairing fuel supply (Tiguan) | 244 |
| 9.1 | Rules for cleanliness | 244 |
| 9.2 | Crash fuel shut-off | 244 |
| 9.3 | Removing and installing fuel delivery unit (Tiguan) | 245 |
| 9.4 | Removing and installing fuel gauge sender G (Tiguan) | 247 |
| 9.5 | Removing and installing suction-jet pump (Tiguan) | 248 |
| 9.6 | Removing and installing fuel gauge sender 2 G169 (Tiguan) | 251 |
| 9.7 | Removing and installing fuel pump control unit J538 (Tiguan) | 251 |
| 9.8 | Checking fuel pump (Tiguan) | 253 |
| 10 | Repairing electronic power control (EPC) | 262 |
| 10.1 | Assembly overview | 262 |
| 10.2 | Removing and installing accelerator pedal module | 262 |
| 11 | Activated charcoal filter system (Golf, Golf Plus, Eos, Scirocco) | 264 |
| 11.1 | Assembly overview (Golf, Golf Plus, Eos, Scirocco) | 264 |
| 11.2 | Checking fuel tank breather (Golf, Golf Plus, Eos, Scirocco) | 265 |
| 11.3 | Rules for cleanliness | 265 |
| 12 | Activated charcoal filter system (Passat) | 267 |
| 12.1 | Assembly overview | 267 |
| 12.2 | Checking fuel tank breather | 268 |
| 12.3 | Rules for cleanliness | 269 |
| 13 | Activated charcoal filter system (Tiguan) | 270 |
| 13.1 | Assembly overview (Tiguan) | 270 |
| 13.2 | Checking fuel tank breather (Tiguan) | 271 |
| 13.3 | Rules for cleanliness | 272 |
| 21 | Turbocharging/supercharging | 273 |
| 1 | Exhaust turbocharger | 273 |
| 1.1 | Assembly overview - turbocharger | 273 |
| 1.2 | Part I | 275 |
| 1.3 | Part II | 276 |



| | | |
|-----------|---|------------|
| 1.4 | Removing and installing turbocharger | 277 |
| 1.5 | Removing and installing compressor housing and turbine housing | 282 |
| 1.6 | Checking vacuum unit for turbocharger | 286 |
| 1.7 | Removing and installing vacuum unit for turbocharger | 288 |
| 1.8 | Adjusting vacuum unit for turbocharger | 290 |
| 2 | Charge air system | 297 |
| 2.1 | Assembly overview - charge air system | 297 |
| 2.2 | Removing and installing intake manifold charge air cooler | 298 |
| 24 | Mixture preparation - injection | 300 |
| 1 | Injection system | 300 |
| 1.1 | Assembly overview - parts I and II, intake manifold | 300 |
| 1.2 | Assembly overview - part I, intake manifold | 302 |
| 1.3 | Assembly overview - part II, intake manifold | 303 |
| 1.4 | Assembly overview - fuel rail with injectors | 304 |
| 1.5 | Assembly overview - air filter | 304 |
| 1.6 | Removing and installing air filter | 305 |
| 1.7 | Removing and installing throttle valve module J338 | 306 |
| 1.8 | Cleaning throttle valve module J338 | 309 |
| 1.9 | Removing and installing intake manifold | 310 |
| 1.10 | Assembly overview - high-pressure pump | 311 |
| 1.11 | Checking fuel pressure sender G247 | 312 |
| 1.12 | Removing and installing high-pressure pump | 315 |
| 1.13 | Removing and installing injectors | 319 |
| 1.14 | Renewing Teflon seal and support washer on injector | 322 |
| 1.15 | Safety precautions | 325 |
| 1.16 | Rules for cleanliness | 327 |
| 1.17 | Technical data | 327 |
| 2 | Engine control unit J623 | 328 |
| 2.1 | Removing and installing engine control unit J623 (Golf ▶ 2008, Eos) | 328 |
| 2.2 | Removing and installing anti-theft engine control unit J623 (Golf ▶ 2008, Eos ▶ 10.2008) | 329 |
| 2.3 | Removing and installing engine control unit J623 (Golf 2009 ▶) | 331 |
| 2.4 | Removing and installing anti-theft engine control unit J623 (Golf 2009 ▶, Eos 11.2008 ▶, Scirocco 10.2008▶, Passat 2011▶) | 333 |
| 2.5 | Removing and installing engine control unit J623 (Golf Plus) | 335 |
| 2.6 | Removing and installing anti-theft engine control unit J623 (Golf Plus) | 336 |
| 2.7 | Removing and installing engine control unit J623 (Passat 2006 ▶) | 339 |
| 2.8 | Removing and installing anti-theft engine control unit J623 (Passat 2006 ▶) | 340 |
| 2.9 | Removing and installing engine control unit J623 (Scirocco) | 341 |
| 2.10 | Removing and installing anti-theft engine control unit J623 (Scirocco ▶ 09.2008) | 342 |
| 2.11 | Removing and installing engine control unit J623 (Tiguan) | 344 |
| 2.12 | Removing and installing anti-theft engine control unit J623 (Tiguan) | 345 |
| 26 | Exhaust system | 348 |
| 1 | Removing and installing parts of exhaust system | 348 |
| 1.1 | Assembly overview - catalytic converter and attachments | 348 |
| 1.2 | Assembly overview - silencer with mountings (Golf, Golf Plus, Scirocco) | 351 |
| 1.3 | Assembly overview - silencer with mountings (Passat 2006 ▶) | 352 |
| 1.4 | Assembly overview - silencer with mountings (Passat 2011 ▶) | 353 |
| 1.5 | Assembly overview - silencer with mountings (Eos) | 354 |
| 1.6 | Assembly overview - silencer with mountings (Tiguan) | 355 |
| 1.7 | Removing and installing centre and rear silencers (Golf, Golf Plus, Scirocco, Eos) | 355 |
| 1.8 | Detaching centre and rear silencers (Passat) | 357 |
| 1.9 | Detaching centre and rear silencers (Tiguan) | 359 |
| 1.10 | Installation position and specified torque of clamp | 360 |



| | |
|--|------------|
| 28 - Ignition system | 362 |
| 1 Repairing ignition system | 362 |
| 1.1 Assembly overview - ignition system | 362 |
| 1.2 Removing and installing ignition coils with output stage | 363 |
| 1.3 Safety precautions | 364 |
| 1.4 Test data, spark plugs | 365 |