



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>10 - Removing and installing engine</b>	<b>2</b>
<b>1 Removing and installing engine (Golf, Golf Plus)</b>	<b>2</b>
1.1 Removing engine	3
1.2 Securing engine to assembly stand	8
1.3 Installing engine	8
1.4 Specified torques	9
1.5 Assembly mountings	10
1.6 Additional information and assembly work for vehicles with air conditioner	11
<b>2 Removing and installing engine (Touran)</b>	<b>12</b>
2.1 Removing engine	13
2.2 Securing engine to assembly stand	16
2.3 Installing engine	16
2.4 Specified torques	18
2.5 Assembly mountings	19
2.6 Additional information and assembly work for vehicles with air conditioner	20
<b>3 Removing and installing engine (Passat)</b>	<b>21</b>
3.1 Removing engine	22
3.2 Securing engine to assembly stand	26
3.3 Installing engine	26
3.4 Specified torques	27
3.5 Assembly mountings	28
3.6 Notes on repairs to air conditioning system	28
<b>4 Removing and installing engine (Eos)</b>	<b>30</b>
4.1 Removing engine	31
4.2 Securing engine to assembly stand	35
4.3 Installing engine	35
4.4 Assembly mountings	38
<b>13 - Crankshaft group</b>	<b>40</b>
<b>1 Dismantling and assembling engine</b>	<b>40</b>
1.1 Assembly overview - parts I and II	40
1.2 Assembly overview - part I, belt drive	42
1.3 Assembly overview - part II, cylinder block	43
1.4 Removing and installing poly-V belt	45
1.5 Removing and installing valve timing housing (timing case)	46
1.6 Removing and installing valve timing housing (Touran)	50
<b>2 Sealing flange and flywheel or drive plate</b>	<b>55</b>
2.1 Assembly overview	56
2.2 Removing and installing engine speed sender G28	57
2.3 Renewing crankshaft oil seal - belt pulley end	58
2.4 Poly V-belt pulley securing bolt tightening procedure	61
2.5 Characteristics of the sealing flange and the assembly device T10017 and T10134	63
2.6 Renewing crankshaft sealing flange - flywheel end ( assembly tool T10134 )	64
2.7 Renewing crankshaft sealing flange - flywheel end ( assembly tool T10017 )	72
2.8 Renewing crankshaft sealing flange at flywheel end (Eos)	80
2.9 Crankshaft dimensions	88
<b>3 Dismantling and assembling pistons and conrods</b>	<b>89</b>



3.1	Assembly overview	89
3.2	Checking piston	91
3.3	Piston and cylinder dimensions	92
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>93</b>
<b>1</b>	<b>Cylinder head</b>	<b>93</b>
1.1	Assembly overview	93
1.2	Checking valve timing	96
1.3	Adjusting valve timing	97
1.4	Removing and installing timing chain and chain drive for oil pump (engine codes BAG, BLP, BLF)	102
1.5	Removing and installing timing chain and chain drive for oil pump (engine codes BKG, BLN)	109
1.6	Removing and installing camshaft housing	116
1.7	Removing and installing cylinder head	121
1.8	Checking compression	124
<b>2</b>	<b>Repairing valve gear</b>	<b>127</b>
2.1	Assembly overview	127
2.2	Checking camshaft axial clearance	129
2.3	Reworking valve seats	129
2.4	Checking valve guides	131
2.5	Renewing valve stem seals	131
<b>17</b>	<b>Lubrication</b>	<b>134</b>
<b>1</b>	<b>Removing and installing parts of lubrication system</b>	<b>134</b>
1.1	Engine oil:	134
1.2	Assembly overview	134
1.3	Removing and installing sump	137
1.4	Removing and installing oil pump	138
1.5	Checking oil pressure and oil pressure switch	140
<b>19</b>	<b>Cooling</b>	<b>143</b>
<b>1</b>	<b>Removing and installing parts of cooling system</b>	<b>143</b>
1.1	Assembly overview - parts of cooling system, body side, radiator with two fans (Golf, Golf Plus)	144
1.2	Assembly overview - parts of cooling system, body side, radiator with one fan (Golf, Golf Plus)	145
1.3	Assembly overview - part of cooling system, body side, radiator with two fans (Touran)	147
1.4	Assembly overview - parts of cooling system, body side, radiator with two fans (Touran)	148
1.5	Assembly overview - parts of cooling system, body side, radiator with two fans (Passat, Eos)	150
1.6	Assembly overview - parts of cooling system, body side, radiator with one fan (Passat, Eos)	151
1.7	Assembly overview - parts of cooling system, engine side	152
1.8	Coolant hose connection diagram	155
1.9	Draining and adding coolant	155
1.10	Removing and installing radiator fan V7 and radiator fan 2 V177	159
1.11	Removing and installing radiator	160
1.12	Removing and installing coolant pump	162
1.13	Checking cooling system for leaks	163
<b>20</b>	<b>Fuel supply system</b>	<b>166</b>
<b>1</b>	<b>Safety precautions</b>	<b>166</b>
1.1	Safety regulations for working on fuel supply	166
1.2	Releasing pressure in high-pressure area	166
<b>2</b>	<b>Rules for cleanliness</b>	<b>168</b>



<b>3</b>	<b>Fuel tank (Golf, Golf Plus)</b> .....	<b>169</b>
3.1	Fuel tank - assembly overview (Golf, Golf Plus) .....	169
3.2	Emptying fuel tank .....	170
3.3	Removing and installing fuel tank .....	173
<b>4</b>	<b>Fuel tank (Touran)</b> .....	<b>176</b>
4.1	Assembly overview - fuel tank .....	176
4.2	Emptying fuel tank .....	178
4.3	Removing and installing fuel tank .....	180
<b>5</b>	<b>Fuel tank (Passat)</b> .....	<b>183</b>
5.1	Assembly overview - fuel tank .....	183
5.2	Emptying fuel tank .....	184
5.3	Removing and installing fuel tank .....	186
<b>6</b>	<b>Fuel tank (Eos)</b> .....	<b>190</b>
6.1	Assembly overview - fuel tank .....	190
6.2	Emptying fuel tank .....	192
6.3	Removing and installing fuel tank .....	194
<b>7</b>	<b>Repairing fuel supply system (Golf, Golf Plus, Eos)</b> .....	<b>197</b>
7.1	Removing and installing fuel delivery unit .....	197
7.2	Removing and installing fuel gauge sender G .....	200
7.3	Crash fuel shut-off .....	202
7.4	Checking fuel pump .....	202
<b>8</b>	<b>Repairing fuel supply (Touran)</b> .....	<b>214</b>
8.1	Removing and installing fuel delivery unit .....	214
8.2	Removing and installing fuel gauge sender G .....	216
8.3	Crash fuel shut-off .....	218
8.4	Checking fuel pump .....	218
<b>9</b>	<b>Repairing fuel supply (Passat)</b> .....	<b>230</b>
9.1	Removing and installing fuel delivery unit .....	230
9.2	Removing and installing fuel gauge sender G .....	233
9.3	Checking fuel pump .....	234
<b>10</b>	<b>Electronic power control; EPC (Golf, Golf Plus, Passat, Eos)</b> .....	<b>244</b>
10.1	Assembly overview - accelerator module .....	244
10.2	Removing and installing accelerator pedal module .....	244
<b>11</b>	<b>Electronic power control; EPC (Touran)</b> .....	<b>247</b>
11.1	Assembly overview - accelerator module .....	247
11.2	Removing and installing accelerator pedal module .....	247
<b>12</b>	<b>Activated charcoal filter system (Golf, Golf Plus, Eos)</b> .....	<b>249</b>
12.1	Assembly overview - activated charcoal filter system .....	249
12.2	Checking fuel tank breather .....	249
<b>13</b>	<b>Activated charcoal filter system (Touran)</b> .....	<b>252</b>
13.1	Checking fuel tank breather .....	252
<b>14</b>	<b>Activated charcoal filter system (Passat)</b> .....	<b>254</b>
14.1	Assembly overview - activated charcoal filter system .....	254
14.2	Checking fuel tank breather .....	254
<b>24</b>	<b>Mixture preparation - injection</b> .....	<b>256</b>
<b>1</b>	<b>Injection system</b> .....	<b>256</b>
1.1	General notes on injection .....	256
1.2	Technical data .....	257
1.3	Assembly overview - air filter .....	257
1.4	Removing and installing air filter .....	258
1.5	Assembly overview - intake manifold (engine codes BAG, BKG) .....	259
1.6	Assembly overview - intake manifold (engine codes BLF, BLN, BLP) .....	262
1.7	Assembly overview - fuel rail with injectors .....	264



1.8	Cleaning throttle valve module J338	265
1.9	Removing and installing high-pressure pump (engine codes BAG, BKG)	265
1.10	Removing and installing high-pressure pump (engine codes BLF, BLN, BLP)	267
1.11	Removing and installing injectors	271
<b>2</b>	<b>Checking components</b>	<b>276</b>
2.1	Checking function of intake manifold flap	276
2.2	Checking vacuum reservoir in intake manifold for leaks	276
2.3	Checking intake air preheating	277
<b>3</b>	<b>Engine control unit J623 (Golf, Eos)</b>	<b>278</b>
3.1	Removing and installing engine (motor) control unit J623	278
3.2	Removing and installing engine (motor) control unit J623 with protective housing	279
<b>4</b>	<b>Engine control unit J623 (Golf Plus, Touran)</b>	<b>282</b>
4.1	Removing and installing engine (motor) control unit J623	282
4.2	Removing and installing engine (motor) control unit J623 with protective housing	283
<b>5</b>	<b>Engine control unit J623 (Passat)</b>	<b>286</b>
5.1	Removing and installing engine (motor) control unit J623	286
5.2	Removing and installing engine control unit J623 with locking plate	287
5.3	Removing and installing engine control unit J623 with locking clip	290
<b>26</b>	<b>- Exhaust system</b>	<b>292</b>
<b>1</b>	<b>Parts of exhaust system (Golf, Golf Plus, Touran)</b>	<b>292</b>
1.1	Assembly overview - catalytic converters and attachments, engine codes BAG, BKG	292
1.2	Assembly overview - catalytic converters and attachments, engine codes BLN, BLP, BLF	294
1.3	Assembly overview - silencers with mountings	296
<b>2</b>	<b>Parts of exhaust system (Passat)</b>	<b>297</b>
2.1	Assembly overview - catalytic converters and attachments	297
2.2	Assembly overview - silencers with mountings	298
<b>3</b>	<b>Parts of exhaust system (Eos)</b>	<b>300</b>
3.1	Assembly overview - catalytic converters and attachments	300
3.2	Assembly overview - silencers with mountings	302
3.3	Separating centre and rear silencers	302
<b>4</b>	<b>Exhaust gas recirculation system</b>	<b>304</b>
4.1	Assembly overview - exhaust gas recirculation system	304
4.2	Removing and installing exhaust gas recirculation valve N18	305
<b>28</b>	<b>- Ignition system</b>	<b>307</b>
<b>1</b>	<b>Repairing ignition system</b>	<b>307</b>
1.1	General notes on ignition system	307
1.2	Safety precautions	307
1.3	Assembly overview - ignition system	307
1.4	Removing and installing ignition coils with output stage	308
1.5	Test data, spark plugs	310