



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
1.2 Securing engine to assembly stand	9
1.3 Installing engine	11
1.4 Assembly mountings	13
13 - Crankshaft group	15
1 Dismantling and assembling engine	15
1.1 Assembly overview	15
1.2 Removing and installing poly-V belt	20
1.3 Removing and installing tensioner for poly V-belt	22
2 Sealing flange and flywheel or drive plate	23
2.1 Assembly overview - sealing flange	23
2.2 Renewing crankshaft oil seal (belt pulley end)	24
2.3 Removing and installing sealing flange (belt pulley end)	26
2.4 Removing and installing sealing flange on gearbox side	29
2.5 Removing and installing flywheel	32
2.6 Removing and installing drive plate	33
3 Crankshaft	36
3.1 Assembly overview - crankshaft	36
3.2 Pulling needle bearing out of and driving into crankshaft	38
3.3 Crankshaft dimensions	39
3.4 Identification of crankshaft upper bearing	40
4 Pistons and conrods	41
4.1 Assembly overview - pistons and conrods	41
4.2 Checking pistons, piston rings and cylinder bores	43
4.3 Piston and cylinder dimensions	45
15 - Cylinder head, valve gear	46
1 Cylinder head	46
1.1 Assembly overview - cylinder head	46
1.2 Removing and installing cylinder head cover	48
1.3 Removing and installing cylinder head	50
1.4 Removing and installing toothed belt	55
1.5 Checking compression	73
2 Valve gear	75
2.1 Assembly overview - valve gear	75
2.2 Valve dimensions	77
2.3 Checking valve guides	77
2.4 Renewing valve stem seals	78
2.5 Renewing exhaust camshaft seal	83
2.6 Removing and installing camshaft adjuster	85
2.7 Removing and installing camshaft control valve 1 N205	89
2.8 Removing and installing camshafts	91
17 - Lubrication	94
1 Parts of lubrication system	94



1.1	Engine oil:	94
1.2	Assembly overview - parts of lubrication system	94
1.3	Drain oiling filter housing	99
1.4	Removing and installing sump	100
1.5	Removing and installing oil pump with balance shaft gear assembly	103
1.6	Removing and installing oil filter bracket	108
1.7	Removing and installing oil pressure switch F1	109
1.8	Checking oil pressure and oil pressure switch (single pin oil pressure switch)	110
1.9	Checking oil pressure and oil pressure switch (2-pin oil pressure switch)	112
19	- Cooling	115
1	Parts of cooling system	115
1.1	Assembly overview - parts of cooling system, engine side	115
1.2	Assembly overview - coolant circulation pump V50 (engine code BYD with bypass thermostat)	117
1.3	Assembly overview - coolant circulation pump V50 (engine code CDLA, CDLC, CDLF, CRZA)	118
1.4	Assembly overview - parts of cooling system, body side	118
1.5	Coolant hose connection diagram	120
1.6	Bypass thermostat (engine code BYD)	121
1.7	Draining and adding coolant	122
1.8	Assembly overview - coolant pump, thermostat	126
1.9	Removing and installing coolant pump	127
1.10	Removing and installing coolant temperature sender	129
1.11	Removing and installing coolant pipes	131
1.12	Removing and installing coolant thermostat housing with thermostat	133
1.13	Removing and installing fan support with radiator fan V7 and radiator fan 2 V177	134
1.14	Removing and installing radiator (Golf 2004 ▶)	136
1.15	Removing and installing radiator (Golf 2009 ▶, Golf Cabriolet 2012 ▶, Scirocco)	137
1.16	Removing and installing auxiliary radiator (Golf 2009 ▶, Golf Cabriolet 2012 ▶, Scirocco)	138
1.17	Checking cooling system for leaks	139
20	- Fuel supply system	141
1	Safety precautions	141
1.1	Safety regulations for working on fuel supply	141
1.2	Releasing fuel pressure in high-pressure section	142
2	Rules for cleanliness	144
3	Fuel tank (front-wheel drive)	145
3.1	Assembly overview - fuel tank	145
3.2	Emptying fuel tank	147
3.3	Removing and installing fuel tank	151
4	Fuel tank (four-wheel drive)	154
4.1	Assembly overview - fuel tank	154
4.2	Emptying fuel tank	156
4.3	Removing and installing fuel tank	161
4.4	Removing and installing fuel gauge sender 2 G169	165
4.5	Removing and installing suction-jet pump	167
5	Repairing fuel supply	169
5.1	Removing and installing fuel delivery unit	169
5.2	Removing and installing fuel gauge sender G	173
5.3	Checking fuel pump G6	174
6	Electronic power control (EPC)	186
6.1	Assembly overview - accelerator module	186
6.2	Removing and installing accelerator pedal module	186



7	Activated charcoal filter system	189
7.1	Assembly overview - activated charcoal filter system	189
7.2	Checking fuel tank breather	189
7.3	Checking fuel system for leaks	191
8	Activated charcoal filter system	199
8.1	Overview of activated charcoal filter system	199
8.2	Assembly overview - activated charcoal filter system	201
8.3	Removing and installing activated charcoal filter	202
8.4	Removing and installing fuel system diagnostic pump V144	203
8.5	Checking fuel system for leaks	203
21	Turbocharging/supercharging	212
1	Exhaust turbocharger	212
1.1	Fitting hose connections with plug-in connectors	212
1.2	Rules for cleanliness	213
1.3	Assembly overview - turbocharger	213
1.4	Removing and installing turbocharger	218
1.5	Checking vacuum unit for turbocharger	226
1.6	Removing and installing turbocharger vacuum unit (engine code BYD)	227
1.7	Adjusting turbocharger vacuum unit (engine code BYD)	227
2	Charge air system	232
2.1	Assembly overview - charge air cooling (engine code BYD)	232
2.2	Assembly overview - charge air cooling (engine codes CDLA, CDLC, CDLF, CRZA)	233
2.3	Assembly overview - noise booster (engine code BYD)	236
2.4	Actuator for structure-borne sound R214 and control unit for structure-borne sound J869 (engine codes CDLA, CDLC, CDLF, CRZA)	236
2.5	Schematic diagram of turbocharging system	239
2.6	Removing and installing charge air cooler (Golf and Golf Cabriolet)	240
2.7	Removing and installing charge air cooler (Scirocco)	241
2.8	Checking charge air system for leaks	242
24	Mixture preparation - injection	245
1	Safety precautions and rules for cleanliness	245
1.1	General information on self-diagnosis	245
2	Injection system	246
2.1	Technical data	246
2.2	Assembly overview - engine cover panel/air filter	246
2.3	Removing and installing engine cover panel/air filter	248
2.4	Removing and installing air filter element	250
2.5	Removing and installing air mass meter G70	251
2.6	Assembly overview - intake manifold	252
2.7	Removing and installing intake manifold	254
2.8	Removing and installing intake manifold flap motor V157 and intake manifold flap potentiometer G336	256
2.9	Assembly overview - fuel rail (vehicles up to 05.2007)	259
2.10	Assembly overview - fuel rail (vehicles from 05.2007)	260
2.11	Removing and installing fuel rail	262
2.12	Removing and installing throttle valve module J338	263
2.13	Cleaning throttle valve module J338	263
2.14	Assembly overview - high-pressure pump	264
2.15	Removing and installing high-pressure pump	266
2.16	Removing and installing fuel pressure sender G247	268
2.17	Checking fuel pressure sender G247	269
2.18	Removing and installing injectors	271
2.19	Renewing Teflon seal on injector	274



3	Checking components	277
3.1	Checking double non-return valve	277
4	Engine control unit J623 (Golf 2004 ▶)	278
4.1	Removing and installing engine (motor) control unit J623	278
4.2	Removing and installing anti-theft engine control unit J623	278
5	Engine control unit J623 (Golf 2009 ▶ and Golf Cabriolet)	282
5.1	Removing and installing engine control unit	282
5.2	Removing and installing anti-theft engine control unit	283
6	Engine control unit J623 (Scirocco)	287
6.1	Removing and installing engine (motor) control unit J623	287
6.2	Removing and installing anti-theft engine control unit J623	288
26 - Exhaust system		290
1	Exhaust system	290
1.1	Assembly overview - exhaust system (Golf 2004 ▶)	290
1.2	Assembly overview - exhaust system (Golf 2009 ▶)	293
1.3	Assembly overview - exhaust system (Golf Cabriolet 2012 ▶)	295
1.4	Assembly overview - exhaust system (Scirocco)	297
1.5	Separating centre and rear silencers (front-wheel drive)	299
1.6	Removing and installing front exhaust pipe with catalytic converters	300
1.7	Aligning exhaust system free of stress	301
1.8	Checking exhaust gas flap (Golf 2009 ▶, Golf Cabriolet 2012 ▶, Scirocco)	302
28 - Ignition system		305
1	Repairing ignition system	305
1.1	General notes on ignition system	305
1.2	Safety precautions	305
1.3	Assembly overview - ignition system	305
1.4	Removing and installing ignition coils with output stage	306
1.5	Test data, spark plugs	308