



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	3
1.2 Installing engine	11
13 - Crankshaft group	15
1 Cylinder block attachments, engine code AXW	15
1.1 Assembly overview - cylinder block attachments	15
1.2 Removing and installing poly V-belt	21
2 Cylinder block attachments, engine codes BLX, BLY, BLR, BVX, BVY, BVZ	23
2.1 Assembly overview - cylinder block attachments	23
2.2 Removing and installing poly V-belt	30
3 Sealing flange and flywheel or drive plate	31
3.1 Assembly overview - sealing flange	31
3.2 Renewing crankshaft oil seal - pulley end	32
3.3 Removing and installing sealing flange - pulley end	34
3.4 Removing and installing crankshaft sealing flange - flywheel end	37
3.5 Removing and installing flywheel	41
3.6 Removing and installing drive plate	42
4 Crankshaft	44
4.1 Assembly overview - crankshaft	44
4.2 Removing and installing sender wheel	45
4.3 Crankshaft dimensions	45
5 Pistons and conrods	47
5.1 Assembly overview - pistons and conrods	47
5.2 Separating new conrod	48
5.3 Bearing shells - installation position	49
5.4 Checking pistons, piston rings and cylinder bores	49
5.5 Piston and cylinder dimensions	51
15 - Cylinder head, valve gear	52
1 Cylinder head	52
1.1 Assembly overview - cylinder head	52
1.2 Removing and installing cylinder head cover	54
1.3 Removing and installing cylinder head	55
1.4 Removing and installing toothed belt, engine code AXW	64
1.5 Removing and installing toothed belt, Golf without split toothed belt guard (BLR, BLX, BLY, BVX, BVY, BVZ)	73
1.6 Removing and installing toothed belt, Touran without split toothed belt guard (BLR, BLX, BLY, BVX, BVY, BVZ)	82
1.7 Removing and installing toothed belt, Golf with split toothed belt guard (BVX, BVY, BVZ)	90
1.8 Removing and installing toothed belt, Touran with split toothed belt guard (BVX, BVY, BVZ)	100
1.9 Checking compression	108
2 Valve gear	111
2.1 Assembly overview - valve gear	111
2.2 Valve dimensions	113
2.3 Checking valve guides	113



2.4	Renewing valve stem seals	114
2.5	Renewing exhaust camshaft seal	118
2.6	Removing and installing camshaft adjuster	121
2.7	Removing and installing inlet camshaft control valve 1 N205	125
2.8	Removing and installing camshafts	127
17	- Lubrication	132
1	Parts of lubrication system	132
1.1	Engine oil	132
1.2	Assembly overview - parts of lubrication system	133
1.3	Draining oil filter housing	139
1.4	Removing and installing sump, engine codes AXW, BLX, BLY, BLR	140
1.5	Removing and installing sump, engine codes BVX, BVY, BVZ	142
1.6	Removing and installing oil pump with balancer shaft gear assembly	145
1.7	Removing and installing oil filter bracket	149
1.8	Checking oil pressure and oil pressure switch	150
19	- Cooling	153
1	Parts of cooling system	153
1.1	Assembly overview - cooling system parts, engine side - engine codes AXW, BLX, BLY, BLR	153
1.2	Assembly overview - cooling system parts, engine side - engine codes BVX, BVY, BVZ	155
1.3	Assembly overview - parts of cooling system, body side	156
1.4	Coolant hose schematic diagram, engine codes AXW, BLX, BLY, BLR	157
1.5	Coolant hose schematic diagram, engine codes BVX, BVY, BVZ	158
1.6	Draining and filling coolant	159
1.7	Removing and installing coolant pump	163
1.8	Removing and installing coolant pipe	165
1.9	Map-controlled cooling system, engine codes AXW, BLX, BLY, BLR	166
1.10	Removing and installing coolant distributor housing, engine codes BVX, BVY, BVZ	171
1.11	Removing and installing radiator fan V7 and radiator fan 2 V177	171
1.12	Removing and installing radiator	172
1.13	Checking cooling system for leaks	174
20	- Fuel supply system	176
1	Safety precautions	176
1.1	Safety precautions when working on fuel supply system	176
1.2	Releasing pressure in high-pressure area	177
2	Fuel tank (Golf with front-wheel drive)	179
2.1	Rules for cleanliness	179
2.2	Assembly overview - fuel tank	179
2.3	Emptying fuel tank	181
2.4	Removing and installing fuel tank	185
3	Fuel tank (Golf with all-wheel drive)	189
3.1	Rules for cleanliness	189
3.2	Assembly overview - fuel tank	189
3.3	Emptying fuel tank	191
3.4	Removing and installing fuel tank	196
3.5	Removing and installing fuel gauge sender 2 G169	199
3.6	Removing and installing suction-jet pump	201
4	Fuel tank (Touran)	202
4.1	Rules for cleanliness	202
4.2	Assembly overview - fuel tank	202
4.3	Emptying fuel tank	204
4.4	Removing and installing fuel tank	209



5	Repairing fuel supply system (Golf)	212
5.1	Rules for cleanliness	212
5.2	Removing and installing fuel delivery unit	212
5.3	Removing and installing fuel gauge sender G	214
5.4	Checking fuel pump G6	216
6	Repairing fuel supply system (Touran)	229
6.1	Rules for cleanliness	229
6.2	Removing and installing fuel delivery unit	229
6.3	Removing and installing fuel gauge sender G	231
6.4	Checking fuel pump	232
7	Electronic power control (EPC)	244
7.1	Function of EPC system	244
7.2	Assembly overview - accelerator module	244
7.3	Removing and installing accelerator module	245
7.4	Removing and installing accelerator module (Touran)	247
8	Activated charcoal filter system (Golf)	250
8.1	Function	250
8.2	Assembly overview - activated charcoal filter system	250
8.3	Checking fuel tank breather	251
9	Activated charcoal filter system (Touran)	254
9.1	Function	254
9.2	Assembly overview - activated charcoal filter system	254
9.3	Checking fuel tank breather	255
24	Mixture preparation - injection	257
1	Injection system	257
1.1	General notes on injection	257
1.2	Rules for cleanliness	258
1.3	Technical data	258
1.4	Assembly overview - intake manifold	258
1.5	Assembly overview - fuel rail with intake manifold flap motor V157 , engine code AXW ..	261
1.6	Assembly overview - fuel rail with intake manifold flap motor V157 , engine codes BLR, BLX, BLY	264
1.7	Assembly overview - fuel rail with intake manifold flap motor V157 , engine codes BVX, BVY, BVZ	265
1.8	Assembly overview - air filter	266
1.9	Removing and installing intake manifold	267
1.10	Removing and installing fuel rail with intake manifold flaps	268
1.11	Assembly overview - high-pressure pump, engine code AXW	271
1.12	Assembly overview - high-pressure pump, engine codes BLR, BLX, BLY, BVX, BVY, BVZ	272
1.13	Removing and installing high-pressure pump	273
1.14	Removing and installing fuel pressure sender G247	276
1.15	Checking fuel pressure sender G247	277
1.16	Removing and installing injectors	281
1.17	Renewing Teflon seal on injector	283
1.18	Cleaning throttle valve module J338	285
2	Checking components	287
3	Engine control unit J623 (Golf)	289
3.1	Removing and installing engine control unit J623	289
3.2	Removing and installing anti-theft engine control unit J623	289
4	Engine control unit J623 (Golf Plus, Touran)	293
4.1	Removing and installing engine control unit J623	293
4.2	Removing and installing anti-theft engine control unit J623	294



26 - Exhaust system	297
1 Parts of exhaust system	297
1.1 Assembly overview - exhaust manifold with catalytic converter, engine codes AXW, BLX, BLR, BVX	297
1.2 Assembly overview - exhaust manifold with catalytic converter, engine code BVY	299
1.3 Assembly overview - exhaust manifold, engine codes BLY, BVZ	300
1.4 Removing and installing exhaust manifold	300
1.5 Assembly overview - exhaust system, engine codes BLR, BVY	304
1.6 Assembly overview - exhaust system, engine codes AXW, BLX	307
1.7 Assembly overview - exhaust system, engine codes BLY, BVZ	309
1.8 Assembly overview - exhaust system, Golf with all-wheel drive	311
1.9 Removing and installing front exhaust pipe with catalytic converter	312
1.10 Separating centre and rear silencers	314
1.11 Aligning exhaust system free of stress	315
1.12 Installation position and specified torque of clamp	317
2 Exhaust gas recirculation system, engine codes AXW, BLX, BLR, BVX, BVY	319
2.1 Assembly overview - exhaust gas recirculation system	319
28 - Ignition system	321
1 Repairing ignition system	321
1.1 General notes on ignition system	321
1.2 Safety precautions	321
1.3 Assembly overview - ignition system	321
1.4 Removing and installing ignition coils with output stage	322
1.5 Test data, spark plugs	323