



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
1.2 Securing engine on engine and gearbox support VAS 6095	10
1.3 Installing engine	11
1.4 Specified torques for assembly mounting	13
13 - Crankshaft group	15
1 Dismantling and assembling engine	15
1.1 Part I: Assembly overview - chain drive	17
1.2 Part II: Assembly overview - crankshaft drive	19
1.3 Removing and installing vibration damper	20
1.4 Removing and installing poly V-belt	22
2 Sealing flanges and flywheel	24
2.1 Assembly overview - sealing flange	24
2.2 Removing and installing crankshaft seal on gearbox side	25
2.3 Renewing crankshaft sealing flange -vibration damper side-	26
2.4 Removing and installing flywheel	28
2.5 Removing and installing drive plate	29
3 Crankshaft	31
3.1 Assembly overview - crankshaft	31
3.2 Allocation of main bearing shells	32
3.3 Fitting sender wheel to crankshaft	36
3.4 Pulling needle bearing out of and driving into crankshaft	37
4 Pistons and conrods	40
4.1 Assembly overview - pistons and conrods	40
4.2 Checking pistons, piston rings and cylinder bores	42
4.3 Installing piston	43
4.4 Piston and cylinder dimensions	44
15 - Cylinder head, valve gear	45
1 Cylinder head	45
1.1 Assembly overview - cylinder head	45
1.2 Removing and installing cylinder head	48
1.3 Assembly overview - cover	56
1.4 Checking valve timing	58
1.5 Removing and installing camshaft adjuster	61
1.6 Removing and installing camshaft timing chain and intermediate shaft drive chain	68
1.7 Removing and installing cylinder head cover	79
1.8 Checking compression	80
2 Valve gear	83
2.1 Assembly overview	83
2.2 Removing and installing camshafts	85
2.3 Removing and installing camshaft control valves	91
2.4 Valve stem seals	95
2.5 Checking valve guides	98
2.6 Reworking valve seats	99



17 - Lubrication	101
1 Parts of lubrication system	101
1.1 Engine oil	101
1.2 Assembly overview - sump	101
1.3 Removing and installing oil sump	104
1.4 Assembly overview - oil filter bracket	106
1.5 Removing and installing oil filter bracket	108
1.6 Assembly overview - oil pump	109
1.7 Checking oil pressure and oil pressure switch	111
19 - Cooling	115
1 Removing and installing parts of cooling system	115
1.1 Assembly overview - parts of cooling system, body side	116
1.2 Assembly overview - cooling system, engine side (vehicles with manual gearbox)	118
1.3 Assembly overview - cooling system, engine side (vehicles with DSG®)	119
1.4 Assembly overview - thermostat housing	121
1.5 Coolant hose schematic diagram	123
1.6 Draining and filling coolant	124
1.7 Removing and installing fan support with fans	127
1.8 Removing and installing radiator	128
1.9 Checking continued coolant circulation pump	130
1.10 Removing and installing coolant pump	131
1.11 Removing and installing thermostat housing	134
1.12 Removing and installing thermostat	137
1.13 Removing and installing coolant pipe	138
1.14 Checking cooling system for leaks	140
20 - Fuel supply system	142
1 Safety precautions when working on fuel supply system	142
2 Rules for cleanliness	143
3 Fuel tank	144
3.1 Assembly overview - fuel tank	144
3.2 Emptying fuel tank	146
3.3 Removing and installing fuel tank	151
4 Repairing fuel supply	155
4.1 Removing and installing fuel delivery unit	155
4.2 Removing and installing fuel gauge sender 2 G169	158
4.3 Removing and installing suction-jet pump	160
4.4 Removing and installing fuel gauge sender G	160
4.5 Assembly overview - fuel filter with attachments	162
4.6 Removing and installing fuel filter	163
4.7 Checking fuel pump	164
4.8 Bleeding fuel system	171
5 Electronic power control (EPC)	174
5.1 Assembly overview - accelerator module	174
5.2 Removing and installing accelerator module	174
6 Activated charcoal filter system	177
6.1 Assembly overview - activated charcoal filter system	177
6.2 Checking fuel tank breather	177
24 - Mixture preparation - injection	180
1 Repairing injection system	180
1.1 General notes on the injection system	180
1.2 Technical data	180



1.3	Assembly overview - intake manifold	181
1.4	Removing and installing throttle valve module J338	183
1.5	Removing and installing intake manifold	184
1.6	Assembly overview - fuel rail	186
1.7	Assembly overview - air filter	188
1.8	Assembly overview - resonator with resonance air pipe	189
1.9	Checking intake air preheating	189
2	Checking components	191
2.1	Checking vacuum unit for intake manifold flaps	191
2.2	Checking injectors for leaks and quantity injected	192
2.3	Checking fuel pressure regulator and holding pressure	195
3	Engine control unit	199
3.1	Removing and installing engine control unit	199
3.2	Removing and installing anti-theft engine control unit	199
26	Exhaust system	203
1	Exhaust manifold, front exhaust pipe with catalytic converters and Lambda probes	203
1.1	Assembly overview - exhaust manifold, front exhaust pipe with catalytic converters	205
1.2	Removing and installing Lambda probe G39 and Lambda probe 2 G108	206
1.3	Removing and installing exhaust manifold	208
1.4	Removing and installing front exhaust pipe with catalytic converters	209
2	Silencer with mountings	212
2.1	Assembly overview - silencers with mountings	212
2.2	Checking exhaust flap	213
2.3	Aligning exhaust system free of stress	214
3	Secondary air system	216
3.1	Function	216
3.2	Assembly overview - secondary air system	216
3.3	Removing and installing secondary air pump motor V101	217
3.4	Checking combi-valve for secondary air system	218
3.5	Removing and installing left combi-valve for secondary air	218
28	Ignition system	219
1	Ignition system	219
1.1	General notes on ignition system	219
1.2	Safety precautions	219
1.3	Assembly overview - parts of ignition system	220
1.4	Removing and installing ignition coils with output stage	221
1.5	Test data, spark plugs	223