



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
1.2 Securing engine on engine and gearbox support VAS 6095	10
1.3 Installing engine	11
1.4 Specified torques for assembly mounting	13
13 - Crankshaft group	14
1 Dismantling and assembling engine	14
1.1 Part I: Assembly overview - chain drive	16
1.2 Part II: Assembly overview - crankshaft drive	18
1.3 Removing and installing vibration damper	19
1.4 Assembly overview - poly V-belt drive	21
1.5 Removing and installing poly-V belt	23
1.6 Removing and installing tensioner for poly V-belt	24
2 Sealing flanges and flywheel	26
2.1 Assembly overview - sealing flange	26
2.2 Removing and installing crankshaft seal on gearbox side	27
2.3 Renewing crankshaft sealing flange, vibration damper side	28
2.4 Removing and installing flywheel	30
2.5 Removing and installing drive plate	31
3 Crankshaft	34
3.1 Assembly overview - crankshaft	34
3.2 Allocation of crankshaft bearing shells (classification)	35
3.3 Fitting sender wheel to crankshaft	37
3.4 Pulling needle bearing out of and driving into crankshaft	37
4 Pistons and conrods	41
4.1 Assembly overview - pistons and conrods	41
4.2 Checking pistons, piston rings and cylinder bores	43
4.3 Installing piston	44
4.4 Piston and cylinder dimensions	45
15 - Cylinder head, valve gear	46
1 Cylinder head	46
1.1 Assembly overview - cylinder head	46
1.2 Removing and installing cylinder head	49
1.3 Assembly overview - cover	57
1.4 Checking valve timing	59
1.5 Installing camshaft adjuster with timing chain for camshaft drive	62
1.6 Installing timing chains for intermediate shaft drive and camshaft drive	67
1.7 Removing and installing cylinder head cover	74
1.8 Checking compression	75
2 Valve gear	78
2.1 Assembly overview	78
2.2 Removing and installing camshafts	80
2.3 Removing and installing camshaft control valves	86
2.4 Valve stem seals	90
2.5 Checking valve guides	94



2.6	Reworking valve seats	95
17	- Lubrication	97
1	Parts of lubrication system	97
1.1	Engine oil:	97
1.2	Assembly overview - sump	97
1.3	Removing and installing sump	100
1.4	Assembly overview - oil filter bracket	102
1.5	Removing and installing oil filter bracket	104
1.6	Assembly overview - oil pump	105
1.7	Checking oil pressure and oil pressure switch	107
19	- Cooling	111
1	Removing and installing parts of cooling system	111
1.1	Assembly overview - parts of cooling system, body side	112
1.2	Assembly overview - cooling system, engine side	114
1.3	Assembly overview - thermostat housing	115
1.4	Coolant hose connection diagram	117
1.5	Draining and adding coolant	118
1.6	Removing and installing fan mounting with fans	121
1.7	Removing and installing radiator	122
1.8	Checking continued coolant circulation pump	124
1.9	Removing and installing coolant pump	125
1.10	Removing and installing thermostat housing	128
1.11	Removing and installing thermostat	131
1.12	Removing and installing coolant pipe	132
1.13	Checking cooling system for leaks	134
20	- Fuel supply system	136
1	Safety regulations for working on fuel supply	136
2	Rules for cleanliness	137
3	Fuel	138
3.1	Assembly overview - fuel tank	138
3.2	Emptying fuel tank	140
3.3	Removing and installing fuel tank	145
4	Repairing fuel supply	149
4.1	Removing and installing fuel delivery unit	149
4.2	Removing and installing fuel gauge sender 2 G169	152
4.3	Removing and installing suction-jet pump	154
4.4	Removing and installing fuel gauge sender G	154
4.5	Assembly overview - fuel filter with attachments	156
4.6	Removing and installing fuel filter	157
4.7	Checking fuel pump	157
4.8	Bleeding fuel system	165
5	Electronic power control (EPC)	168
5.1	Assembly overview - accelerator module	168
5.2	Removing and installing accelerator pedal module	168
6	Activated charcoal filter system	171
6.1	Assembly overview - activated charcoal filter system	171
6.2	Checking fuel tank breather	172
24	- Mixture preparation - injection	174
1	Repairing injection system	174
1.1	General notes on the injection system	174
1.2	Technical data	174



1.3	Assembly overview - intake manifold	175
1.4	Removing and installing throttle valve module J338	178
1.5	Removing and installing intake manifold	178
1.6	Assembly overview - fuel rail	180
1.7	Assembly overview - air filter	182
1.8	Assembly overview - damping chamber with resonance air pipe	183
1.9	Checking intake air preheating	183
2	Checking components	185
2.1	Checking vacuum unit for intake manifold flaps	185
2.2	Checking injectors for leaks and quantity injected	186
2.3	Checking fuel pressure regulator and holding pressure	189
3	Engine (motor) control unit	193
3.1	Removing and installing engine control unit	193
3.2	Removing and installing anti-theft engine control unit	193
26	Exhaust system	197
1	Exhaust manifold, front exhaust pipe with catalytic converters and Lambda probes	197
1.1	Assembly overview - exhaust manifold, front exhaust pipe with catalytic converters	199
1.2	Removing and installing Lambda probe G39 and Lambda probe 2 G108	200
1.3	Removing and installing exhaust manifold	202
1.4	Removing and installing front exhaust pipe with catalytic converters	203
2	Silencer with mountings	206
2.1	Assembly overview - silencers with mountings	206
2.2	Checking exhaust flap	207
2.3	Aligning exhaust system free of stress	208
3	Secondary air system	210
3.1	Function	210
3.2	Assembly overview - secondary air system	210
3.3	Removing and installing secondary air pump motor V101	212
3.4	Checking combination valve for secondary air system	213
3.5	Removing and installing combination valve for secondary air system	213
28	Ignition system	214
1	Ignition system	214
1.1	General notes on ignition system	214
1.2	Safety precautions	214
1.3	Assembly overview - parts of ignition system	215
1.4	Removing and installing ignition coils with output stage	216
1.5	Test data, spark plugs	218