



## Contents

|   |           |
|---|-----------|
| <b>00 - Technical data</b>  | <b>1</b>  |
| <b>1 Technical data</b>   | <b>1</b>  |
| 1.1 Engine number   | 1         |
| 1.2 Engine data   | 1         |
| <b>2 Safety instructions</b>  | <b>3</b>  |
| 2.1 Safety precautions when working on fuel supply system                             | 3         |
| 2.2 Safety precautions for when using test and measuring equipment during a road test | 4         |
| 2.3 Safety precautions when working on cooling system                                 | 4         |
| <b>3 General repair notes</b>   | <b>5</b>  |
| 3.1 Rules for cleanliness   | 5         |
| 3.2 Foreign objects in engine   | 5         |
| <b>10 - Removing and installing engine</b>  | <b>6</b>  |
| <b>1 Removing and installing engine</b>   | <b>6</b>  |
| 1.1 Removing engine (Golf, Golf Plus)   | 6         |
| 1.2 Removing engine (Touran)  | 11        |
| 1.3 Removing engine (Passat)  | 17        |
| 1.4 Securing engine to assembly stand   | 24        |
| 1.5 Notes on installing   | 25        |
| 1.6 Assembly mountings  | 27        |
| <b>13 - Crankshaft group</b>  | <b>29</b> |
| <b>1 Dismantling and assembling engine</b>  | <b>29</b> |
| 1.1 Assembly overview - poly V-belt drive   | 29        |
| 1.2 Assembly overview - toothed belt drive  | 32        |
| 1.3 Removing and installing engine support  | 34        |
| 1.4 Assembly overview - crankcase   | 36        |
| <b>2 Removing and installing sealing flange and flywheel</b>                          | <b>38</b> |
| 2.1 Assembly overview - sealing flanges and flywheel                                  | 38        |
| 2.2 Removing and installing dual-mass flywheel  | 39        |
| 2.3 Renewing crankshaft oil seal - pulley end   | 40        |
| 2.4 Removing and installing sealing flange - pulley end                               | 42        |
| 2.5 Renewing crankshaft sealing flange - flywheel end                                 | 45        |
| <b>3 Crankshaft</b>   | <b>52</b> |
| 3.1 Assembly overview - crankshaft  | 52        |
| <b>4 Pistons and conrods</b>  | <b>58</b> |
| 4.1 Assembly overview - pistons and conrods   | 58        |
| 4.2 Separating new conrod   | 59        |
| 4.3 Checking piston projection at TDC   | 60        |
| 4.4 Piston and cylinder dimensions  | 61        |
| 4.5 Piston rings, cylinder bore and piston installation position                      | 61        |
| <b>15 - Cylinder head, valve gear</b>   | <b>64</b> |
| <b>1 Cylinder head</b>  | <b>64</b> |
| 1.1 Assembly overview - cylinder head   | 64        |
| 1.2 Removing and installing cylinder head cover                                       | 67        |
| 1.3 Removing, installing and tensioning toothed belt                                  | 70        |
| 1.4 Removing and installing cylinder head   | 88        |
| 1.5 Checking compression  | 93        |
| <b>2 Valve gear</b>   | <b>96</b> |
| 2.1 Assembly overview - valve gear  | 96        |
| 2.2 Checking valve guides   | 98        |



|           |  |            |
|-----------|--|------------|
| 2.3       | Renewing valve stem seals  | 99         |
| 2.4       | Removing and installing camshaft   | 101        |
| 2.5       | Removing and installing camshaft oil seal                                      | 105        |
| <b>17</b> | <b>- Lubrication</b>   | <b>108</b> |
| <b>1</b>  | <b>Engine oil</b>  | <b>108</b> |
| 1.1       | Oil capacities   | 108        |
| 1.2       | Checking engine oil level, observing differences in dip sticks                 | 108        |
| <b>2</b>  | <b>Parts of lubrication system</b>   | <b>110</b> |
| 2.1       | Assembly overview - oil pump, sump   | 110        |
| 2.2       | Removing and installing oil sump   | 111        |
| <b>3</b>  | <b>Oil filter bracket, oil pressure, engine oil cooler and oil supply line</b> | <b>115</b> |
| 3.1       | Assembly overview - oil filter bracket and engine oil cooler                   | 115        |
| 3.2       | Checking oil pressure and oil pressure switch                                  | 116        |
| 3.3       | Assembly overview - oil supply line to turbocharger                            | 117        |
| 3.4       | Removing and installing oil supply line to turbocharger                        | 118        |
| <b>19</b> | <b>- Cooling</b>   | <b>121</b> |
| <b>1</b>  | <b>Parts of cooling system</b>   | <b>121</b> |
| 1.1       | Coolant hoses  | 122        |
| 1.2       | Draining and filling coolant   | 125        |
| 1.3       | Coolant pump, regulation of cooling system                                     | 129        |
| 1.4       | Parts of cooling system, body side (radiator with two fans)                    | 133        |
| 1.5       | Assembly overview - parts of cooling system, body side (radiator with one fan) | 135        |
| 1.6       | Removing and installing fan support with fans (Golf, Golf Plus, Touran)        | 135        |
| 1.7       | Removing and installing fan support with fans (Passat)                         | 137        |
| 1.8       | Parts of cooling system - engine side  | 137        |
| 1.9       | Removing and installing radiator (Golf, Golf Plus, Touran)                     | 140        |
| 1.10      | Removing and installing radiator (Passat)                                      | 141        |
| 1.11      | Checking engine oil cooler for leaks   | 142        |
| <b>20</b> | <b>- Fuel supply system</b>  | <b>144</b> |
| <b>1</b>  | <b>Safety precautions</b>  | <b>144</b> |
| 1.1       | Safety precautions when working on fuel supply system                          | 144        |
| <b>2</b>  | <b>Rules for cleanliness</b>   | <b>145</b> |
| 2.1       | Rules for cleanliness when working on fuel supply system                       | 145        |
| <b>3</b>  | <b>Parts of fuel supply system (Golf, Golf Plus)</b>                           | <b>146</b> |
| 3.1       | Fuel tank, vehicles with front-wheel drive                                     | 146        |
| 3.2       | Fuel tank, vehicles with four-wheel drive                                      | 149        |
| 3.3       | Emptying fuel tank   | 156        |
| 3.4       | Removing and installing fuel delivery unit                                     | 158        |
| 3.5       | Removing and installing fuel gauge sender                                      | 159        |
| 3.6       | Checking fuel pump   | 160        |
| 3.7       | Assembly overview - fuel filter  | 164        |
| 3.8       | Removing and installing fuel cooler  | 166        |
| <b>4</b>  | <b>Parts of fuel supply system (Touran)</b>                                    | <b>168</b> |
| 4.1       | Assembly overview - fuel tank with attachments                                 | 168        |
| 4.2       | Emptying fuel tank   | 170        |
| 4.3       | Removing and installing fuel tank  | 173        |
| 4.4       | Assembly overview - fuel filter  | 174        |
| 4.5       | Removing and installing fuel cooler  | 176        |
| 4.6       | Removing and installing fuel delivery unit                                     | 176        |
| 4.7       | Removing and installing fuel gauge sender                                      | 178        |
| 4.8       | Checking fuel pump   | 179        |
| <b>5</b>  | <b>Parts of fuel supply system (Passat)</b>                                    | <b>184</b> |



|           |  |            |
|-----------|--|------------|
| 5.1       | Fuel tank, vehicles with front-wheel drive   | 184        |
| 5.2       | Emptying fuel tank, vehicles with front-wheel drive                                | 191        |
| 5.3       | Checking fuel pump   | 193        |
| 5.4       | Assembly overview - fuel filter  | 198        |
| 5.5       | Removing and installing fuel cooler  | 200        |
| <b>6</b>  | <b>Accelerator mechanism</b>   | <b>202</b> |
| 6.1       | Assembly overview - accelerator mechanism  | 202        |
| <b>7</b>  | <b>Tandem pump</b>   | <b>204</b> |
| 7.1       | Checking tandem pump   | 204        |
| 7.2       | Removing and installing tandem pump  | 207        |
| <b>21</b> | <b>Turbocharging/supercharging</b>   | <b>210</b> |
| <b>1</b>  | <b>Turbocharger</b>  | <b>210</b> |
| 1.1       | Safety precautions   | 210        |
| 1.2       | Rules for cleanliness  | 210        |
| 1.3       | Assembly overview - turbocharger   | 211        |
| 1.4       | Removing and installing turbocharger   | 224        |
| 1.5       | Vacuum hose schematic diagram  | 226        |
| <b>2</b>  | <b>Charge air system</b>   | <b>229</b> |
| 2.1       | Assembly overview - parts of charge air cooling                                    | 229        |
| 2.2       | Hose connections   | 232        |
| 2.3       | Checking charge air system for leaks   | 233        |
| <b>23</b> | <b>Mixture preparation - injection</b>   | <b>236</b> |
| <b>1</b>  | <b>Injection system</b>  | <b>236</b> |
| 1.1       | Safety precautions   | 236        |
| 1.2       | Rules for cleanliness  | 237        |
| 1.3       | Removing and installing pre-wired wiring harness for unit injectors and glow plugs | 237        |
| 1.4       | Assembly overview - unit injector  | 240        |
| 1.5       | Removing and installing unit injector  | 241        |
| 1.6       | Adjusting non-contact gap of unit injectors  | 243        |
| 1.7       | Removing and installing O-rings for unit injector                                  | 244        |
| <b>2</b>  | <b>Air filter</b>  | <b>246</b> |
| 2.1       | Assembly overview - air filter   | 246        |
| <b>3</b>  | <b>Intake manifold</b>   | <b>247</b> |
| 3.1       | Assembly overview - intake manifold  | 247        |
| <b>4</b>  | <b>Engine control unit</b>   | <b>251</b> |
| 4.1       | Reading and deleting engine control unit event memory                              | 251        |
| 4.2       | Adapting functions and components  | 252        |
| 4.3       | Removing and installing engine control unit (Golf)                                 | 253        |
| 4.4       | Removing and installing anti-theft engine control unit (Golf)                      | 253        |
| 4.5       | Removing and installing engine control unit (Golf Plus)                            | 256        |
| 4.6       | Removing and installing anti-theft engine control unit (Golf Plus)                 | 256        |
| 4.7       | Removing and installing engine control unit (Touran)                               | 258        |
| 4.8       | Removing and installing anti-theft engine control unit (Touran)                    | 259        |
| 4.9       | Engine control unit (Passat)   | 261        |
| <b>26</b> | <b>Exhaust system</b>  | <b>267</b> |
| <b>1</b>  | <b>Exhaust system</b>  | <b>267</b> |
| 1.1       | Assembly overview - front exhaust pipe with catalytic converter                    | 267        |
| 1.2       | Assembly overview - silencer with mountings (vehicles with front wheel drive)      | 268        |
| 1.3       | Assembly overview - silencers (Passat)   | 270        |
| 1.4       | Assembly overview - silencer with mountings (vehicles with four-wheel drive)       | 271        |
| 1.5       | Aligning exhaust system free of stress   | 272        |
| <b>2</b>  | <b>Emission control</b>  | <b>273</b> |



|           |  |            |
|-----------|--|------------|
| 2.1       | Assembly overview - front exhaust pipe with particulate filter | 273        |
| <b>3</b>  | <b>Exhaust gas recirculation</b>                               | <b>276</b> |
| 3.1       | Assembly overview - parts of exhaust gas recirculation         | 276        |
| 3.2       | Checking mechanical exhaust gas recirculation valve            | 280        |
| <b>28</b> | <b>Glow plug system</b>  | <b>281</b> |
| <b>1</b>  | <b>Glow plug system</b>  | <b>281</b> |
| 1.1       | Removing, installing and checking glow plugs                   | 281        |
| 1.2       | Characteristics of ceramic glow plugs                          | 282        |
| 1.3       | Removing, installing and checking ceramic glow plugs           | 282        |
| 1.4       | Removing and installing engine speed sender G28                | 284        |