



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>10 - Removing and installing engine</b>	<b>2</b>
<b>1 Removing and installing engine</b>	<b>2</b>
1.1 Removing engine	2
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	7
1.4 Assembly mountings	10
<b>13 - Crankshaft group</b>	<b>12</b>
<b>1 Dismantling and assembling engine</b>	<b>12</b>
1.1 Assembly overview - poly V-belt drive	12
1.2 Removing and installing poly V-belt	13
1.3 Assembly overview - toothed belt drive	15
1.4 Assembly overview - crankcase	19
<b>2 Removing and installing sealing flange and flywheel</b>	<b>20</b>
2.1 Assembly overview - sealing flanges and flywheel	20
2.2 Renewing crankshaft oil seal - pulley end	21
2.3 Removing and installing sealing flange - pulley end	23
2.4 Renewing crankshaft sealing flange - flywheel end	25
2.5 Removing and installing engine speed sender G28	31
<b>3 Crankshaft</b>	<b>33</b>
3.1 Assembly overview - crankshaft	33
3.2 Crankshaft dimensions	38
<b>4 Pistons and conrods</b>	<b>39</b>
4.1 Assembly overview - pistons and conrods	39
4.2 Separating new conrod	40
4.3 Checking piston projection at TDC	41
4.4 Piston and cylinder dimensions	42
4.5 Piston rings, cylinder bore and piston installation position	42
<b>15 - Cylinder head, valve gear</b>	<b>44</b>
<b>1 Cylinder head</b>	<b>44</b>
1.1 Assembly overview - cylinder head	45
1.2 Removing and installing cylinder head cover	48
1.3 Removing, installing and tensioning toothed belts	50
1.4 Removing and installing cylinder head	67
1.5 Checking compression	71
<b>2 Valve gear</b>	<b>74</b>
2.1 Assembly overview - valve gear	74
2.2 Checking valve guides	76
2.3 Renewing valve stem seals	78
2.4 Removing and installing camshaft	80
2.5 Removing and installing camshaft oil seal	84
<b>17 - Lubrication</b>	<b>86</b>
<b>1 Engine oil</b>	<b>86</b>
1.1 Oil capacities	86
1.2 Checking engine oil level	86



<b>2</b>	<b>Parts of lubrication system</b>	<b>87</b>
2.1	Assembly overview - oil pump, sump	87
2.2	Removing and installing sump	88
<b>3</b>	<b>Oil filter bracket, oil pressure, engine oil cooler and oil supply line</b>	<b>92</b>
3.1	Assembly overview - oil filter bracket and engine oil cooler	92
3.2	Checking oil pressure and oil pressure switch	93
3.3	Assembly overview - oil supply line to turbocharger	94
3.4	Removing and installing oil supply line to turbocharger	95
<b>19 - Cooling</b>		<b>97</b>
<b>1</b>	<b>Parts of cooling system</b>	<b>97</b>
1.1	Parts of cooling system, body side	98
1.2	Parts of cooling system, engine side	99
1.3	Coolant hose schematic diagram	101
1.4	Draining and filling with coolant	102
1.5	Removing and installing radiator	105
1.6	Removing and installing coolant pump	106
1.7	Removing and installing thermostat	108
1.8	Checking cooling system for leaks	110
1.9	Checking engine oil cooler for leaks	112
<b>20 - Fuel supply system</b>		<b>114</b>
<b>1</b>	<b>Safety precautions when working on fuel supply system</b>	<b>114</b>
<b>2</b>	<b>Rules for cleanliness</b>	<b>115</b>
<b>3</b>	<b>Fuel tank, vehicles with front-wheel drive</b>	<b>116</b>
3.1	Assembly overview - fuel tank	116
3.2	Emptying fuel tank	117
3.3	Removing and installing fuel tank	121
3.4	Removing and installing fuel delivery unit	123
3.5	Removing and installing fuel gauge sender	124
3.6	Checking fuel pump	125
<b>4</b>	<b>Fuel tank, vehicles with four-wheel drive</b>	<b>127</b>
4.1	Assembly overview - fuel tank	127
4.2	Emptying fuel tank	128
4.3	Removing and installing fuel tank	132
4.4	Removing and installing fuel gauge sender 2 G169	135
4.5	Removing and installing suction-jet pump	137
4.6	Checking fuel pump	138
<b>5</b>	<b>Repairing fuel supply system</b>	<b>140</b>
5.1	Assembly overview - fuel filter	140
5.2	Removing and installing fuel cooler	141
5.3	Assembly overview - accelerator mechanism	142
5.4	Checking tandem pump	143
5.5	Removing and installing tandem pump	147
<b>21 - Turbocharging/supercharging</b>		<b>151</b>
<b>1</b>	<b>Charge air system with turbocharger</b>	<b>151</b>
1.1	Safety precautions	151
1.2	Rules for cleanliness	151
1.3	Assembly overview - turbocharger	152
1.4	Removing and installing turbocharger	156
1.5	Assembly overview - parts of charge air cooling	158
1.6	Hose connections	161
1.7	Checking charge air system for leaks	162
1.8	Vacuum hose schematic diagram	164



<b>23 - Mixture preparation - injection</b> .....	<b>166</b>
<b>1 Diesel direct injection system</b> .....	<b>166</b>
1.1 Safety precautions .....	166
1.2 Rules for cleanliness .....	167
1.3 Assembly overview - unit injector .....	167
1.4 Removing and installing unit injector .....	169
1.5 Adjusting non-contact gap of unit injectors .....	171
1.6 Removing and installing O-rings for unit injector .....	172
1.7 Assembly overview - intake manifold .....	174
1.8 Cleaning the intake manifold flap support, Engine code BLS and BXJ .....	176
1.9 Assembly overview - air filter .....	177
<b>2 Engine control unit</b> .....	<b>178</b>
2.1 Reading and erasing engine control unit fault memory .....	178
2.2 Adapting functions and components .....	179
2.3 Removing and installing engine control unit, Golf .....	180
2.4 Removing and installing anti-theft engine control unit, Golf .....	180
2.5 Removing and installing engine control unit, Golf Plus .....	183
2.6 Removing and installing anti-theft engine control unit, Golf Plus .....	183
<b>26 - Exhaust system</b> .....	<b>186</b>
<b>1 Exhaust system</b> .....	<b>186</b>
1.1 Assembly overview - front exhaust pipe with catalytic converter .....	186
1.2 Assembly overview - front exhaust pipe with particulate filter .....	187
1.3 Assembly overview - silencer with mountings (vehicles with front wheel drive) .....	189
1.4 Assembly overview - silencer with mountings (vehicles with four-wheel drive) .....	191
1.5 Aligning exhaust system free of stress .....	192
<b>2 Exhaust gas recirculation system</b> .....	<b>193</b>
2.1 Assembly overview - parts of exhaust gas recirculation .....	193
<b>28 - Glow plug system</b> .....	<b>198</b>
<b>1 Checking glow plug system</b> .....	<b>198</b>
1.1 Removing, installing and checking glow plugs .....	198
1.2 Characteristics of ceramic glow plugs .....	199
1.3 Removing, installing and checking ceramic glow plugs .....	200