



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing engine	2
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	8
1.4 Assembly mountings	11
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Assembly overview - toothed belt drive	12
1.2 Assembly overview - poly V-belt drive	14
1.3 Removing and installing poly V-belt	14
1.4 Assembly overview - crankcase	16
2 Removing and installing sealing flange and flywheel	19
2.1 Assembly overview - sealing flange and flywheel	19
2.2 Renewing crankshaft oil seal - pulley end	20
2.3 Removing and installing sealing flange - pulley end	22
2.4 Renewing crankshaft sealing flange - flywheel end	24
3 Crankshaft	33
3.1 Assembly overview - crankshaft	33
3.2 Crankshaft dimensions	34
3.3 Pulling needle bearing out of and driving into crankshaft	34
4 Pistons and conrods	36
4.1 Assembly overview - pistons and conrods	36
4.2 Separating new conrods	37
4.3 Checking piston projection at TDC	38
4.4 Piston and cylinder dimensions	39
4.5 Piston rings, cylinder bore and piston installation position	39
15 - Cylinder head, valve gear	42
1 Cylinder head	42
1.1 Assembly overview - cylinder head	42
1.2 Removing and installing cylinder head cover	45
1.3 Removing, installing and tensioning toothed belt	47
1.4 Removing and installing cylinder head	61
1.5 Checking compression	65
2 Repairing valve gear	68
2.1 Assembly overview - valve gear	68
2.2 Checking valve guides	70
2.3 Renewing valve stem seals	71
2.4 Removing and installing camshaft	73
2.5 Removing and installing camshaft oil seal	77
17 - Lubrication	80
1 Engine oil	80
1.1 Oil capacities	80
1.2 Checking engine oil level	80



2	Parts of lubrication system	81
2.1	Assembly overview - oil pump, sump	81
2.2	Removing and installing oil sump	82
3	Oil filter bracket, oil pressure and oil cooler	85
3.1	Assembly overview - oil filter bracket and oil cooler	85
3.2	Checking oil pressure and oil pressure switch	86
19 - Cooling		88
1	Parts of cooling system	88
1.1	Parts of cooling system, body side	88
1.2	Parts of cooling system - engine side	90
1.3	Coolant hose schematic diagram	92
1.4	Draining and filling coolant	93
1.5	Removing and installing fan mounting with fans	95
1.6	Removing and installing radiator	96
1.7	Removing and installing coolant pump	98
1.8	Removing and installing thermostat	100
1.9	Checking cooling system for leaks	101
1.10	Checking oil cooler for leaks	103
20 - Fuel supply system		106
1	Safety precautions when working on fuel supply system	106
2	Rules for cleanliness	107
3	Fuel tank, vehicles with front-wheel drive	108
3.1	Assembly overview - fuel tank	108
3.2	Emptying fuel tank	110
3.3	Removing and installing fuel tank	112
3.4	Removing and installing fuel delivery unit	114
3.5	Removing and installing fuel gauge sender	116
4	Fuel tank, vehicles with four-wheel drive	117
4.1	Assembly overview - fuel tank	117
4.2	Emptying fuel tank	118
4.3	Removing and installing fuel tank	120
4.4	Removing and installing fuel gauge sender 2 G169	123
4.5	Removing and installing suction-jet pump	125
5	Repairing fuel supply system	126
5.1	Assembly overview - fuel filter	126
5.2	Checking fuel pump	128
5.3	Removing and installing fuel cooler	132
5.4	Checking tandem pump	133
5.5	Removing and installing tandem pump	137
5.6	Assembly overview - accelerator mechanism	140
21 - Turbocharging/supercharging		142
1	Charge air system with turbocharger	142
1.1	Safety precautions	142
1.2	Rules for cleanliness	142
1.3	Installing hose connections with plug-in connectors	143
1.4	Assembly overview - turbocharger	144
1.5	Removing and installing exhaust gas temperature sender 1 G235	145
1.6	Removing and installing turbocharger	146
1.7	Assembly overview - charge air cooling	147
1.8	Checking charge air system for leaks	148
23 - Mixture preparation - injection		151



1	Repairing diesel direct injection system	151
1.1	Safety precautions	151
1.2	Rules for cleanliness	152
1.3	Assembly overview - unit injector	152
1.4	Removing and installing O-rings for unit injector	153
1.5	Removing and installing unit injector	154
1.6	Assembly overview - intake manifold with intake manifold flap	157
1.7	Assembly overview - air filter	159
2	Engine control unit	160
2.1	Reading and erasing engine control unit fault memory	160
2.2	Adapting functions and components	161
2.3	Removing and installing anti-theft engine control unit	162
26	- Exhaust system	164
1	Parts of the exhaust system	164
1.1	Assembly overview - front exhaust pipe with particulate filter	164
1.2	Assembly overview - silencer with mountings (vehicles with front wheel drive)	166
1.3	Assembly overview - silencer with mountings (vehicles with four-wheel drive)	168
1.4	Aligning exhaust system free of stress	169
2	Exhaust gas recirculation system	170
2.1	Assembly overview - exhaust gas recirculation	170
2.2	Assembly overview - exhaust gas recirculation cooler	171
28	- Glow plug system	172
1	Checking glow plug system	172
1.1	Characteristics of ceramic glow plugs	172
1.2	Removing, installing and checking ceramic glow pin plugs	172