



Contents

1	Engine list	1
2	Service work	8
2.1	Information about flexible or fixed service	8
2.2	Service tables	13
3	General information	26
3.1	Raising vehicle with lifting platform or trolley jack	26
3.2	Stickers	28
3.3	Entries in service schedule	30
3.4	Vehicle diagnostic tester	30
3.5	Vehicle identification number	33
3.6	Vehicle data sticker	35
3.7	Severe operating conditions	36
3.8	Countries with hot climate	36
3.9	Country overview for diesel not compliant with EN 590	37
3.10	Country overview for petrol not compliant with EN 228	38
3.11	Engine code and engine number	39
3.12	Countries with high levels of dust	39
3.13	Identification plate	40
3.14	Shortened intervals for spark plug replacement	41
4	Descriptions of work	46
4.1	Removable towing bracket: checking and cleaning if necessary	48
4.2	Swivel joints and suspension link mountings: inspecting	50
4.3	Automatic headlight control and static cornering light: checking function	51
4.4	Automatic gearbox 09G: changing ATF	53
4.5	Front passenger front airbag: checking key switch and "ON/OFF function"	53
4.6	Battery: checking battery terminal clamps for secure seating	55
4.7	Battery: checking with battery tester (always refer to workshop manual)	57
4.8	Status of battery: reading, sending diagnosis protocol online	58
4.9	Tyres: checking condition, wear pattern, tyre pressure and tread depth	58
4.10	Brake and clutch system: change brake fluid	75
4.11	Brake system and shock absorbers: inspecting for leaks and damage	81
4.12	Brakes, front and rear: checking thickness of brake pads and condition of brake discs ..	82
4.13	Brake fluid level: Check	85
4.14	Dual clutch gearbox 02E: changing gear oil and filter	86
4.15	Diesel particulate filter: checking	86
4.16	Electric windows: checking positioning (open and close functions)	87
4.17	Bonnet catch hook: grease.	87
4.18	Boots: inspecting	88
4.19	All-wheel drive coupling: changing oil	89
4.20	Interior and exterior body: inspecting for corrosion with doors and flaps open	93
4.21	Poly V-belt: renewing	94
4.22	Poly V-belt: checking condition	94
4.23	Cooling system: checking frost protection and coolant level	96
4.24	Diesel fuel filter: renewing	98
4.25	Air filter: cleaning housing and renewing filter element	103
4.26	Multi-purpose additive for diesel fuel: adding	112
4.27	Multi-purpose additive for petrol fuel: adding	114
4.28	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	116
4.29	Engine cover panel "top": removing and installing	117
4.30	Motor compartment cover (noise insulation) "bottom": removing and installing	125
4.31	Engine oil level: checking	125
4.32	Draining or extracting engine oil, renewing oil filter and replenishing engine oil	127



4.33	Engine oil: capacities and specifications	139
4.34	Road test: performing (driving behaviour, noises, air conditioner etc.)	141
4.35	Wheel securing bolts: tightening to specified torque	142
4.36	Radio code: reading using vehicle diagnostic tester	143
4.37	Radio/navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	143
4.38	Tyre pressure monitoring: performing basic setting	144
4.39	Tyre repair set: Checking	146
4.40	Window wash/wipe system and headlight washer system: checking function	147
4.41	Headlight adjustment: checking halogen headlights	152
4.42	Headlight adjustment: checking gas discharge headlights	156
4.43	Headlight adjustment: checking fog lights	160
4.44	Sliding sunroof drains: checking for blockage, cleaning if necessary	162
4.45	Service interval display: Reset	165
4.46	Service interval display: recoding	169
4.47	Sliding sunroof: checking function, cleaning and greasing guide rails	170
4.48	Snow filter for fresh air blower: renewing	170
4.49	Track rod ends: checking clearance, firm seating and boots	170
4.50	Auxiliary heater: setting weekday in menu of dash panel insert	171
4.51	Dust and pollen filter: cleaning housing and renewing filter element	172
4.52	Transportation mode: switching off	173
4.53	Transportation devices: removing blocking pieces from springs on front axle	174
4.54	Door arrester: grease.	174
4.55	Clock and date: setting	175
4.56	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	177
4.57	Camshaft drive toothed belt (diesel engines): renewing	177
4.58	Camshaft drive toothed belt: checking (4-cylinder petrol engine with no change interval)	177
4.59	Spark plugs: Renew	178
4.60	Driving instructor pedals: greasing	192
4.61	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	196
4.62	Gas system test	197
4.63	Additional service measures on LPG system	203
4.64	LPG tank and lines: renewing	225
5	Exhaust emissions test	226
5.1	Exhaust emissions test for petrol engines	226
5.2	Exhaust emissions test for diesel engines	228
6	Glossary	231
7	---Change history---	234