



Contents

00 - Technical data	1
1 Brake allocation via PR No.	1
1.1 Front brakes	1
1.2 Rear brakes	2
2 Technical data for brakes	5
2.1 Brake master cylinder and brake servo	5
2.2 Front brakes	5
2.3 Rear brakes (disc brakes)	7
3 Brake test	10
3.1 General information	10
3.2 Test for vehicles with front-wheel drive	10
3.3 Test for vehicles with all-wheel drive via a Haldex coupling	10
45 - Anti-lock brake system	12
1 General notes on anti-lock brake system	12
2 Notes for repair work on anti-lock brake system	13
3 Connecting VAS 5051 and selecting functions	14
4 Electrical/electronic components and locations	16
4.1 ABS Mark 70 (ABS/TCS)	16
4.2 ABS Mark 60 EC (ABS/EDL/TCS/ESP)	17
5 Fault display via warning lamps	20
6 ABS Mark 70 (ABS/TCS), left-hand drive vehicles	22
6.1 Assembly overview	22
6.2 Connecting brake lines from brake master cylinder to hydraulic unit	23
6.3 Removing control unit and hydraulic unit	24
6.4 Unscrewing control unit from hydraulic unit	27
6.5 Installing new control unit	28
6.6 Installing control unit and hydraulic unit	28
7 ABS Mark 70 (ABS/TCS), right-hand drive vehicles	30
7.1 Assembly overview	30
7.2 Connecting brake lines from tandem brake master cylinder to hydraulic unit	31
7.3 Removing control unit and hydraulic unit	32
7.4 Unscrewing control unit from hydraulic unit	34
7.5 Installing new control unit	34
7.6 Installing control unit and hydraulic unit	35
8 ABS Mark 60 EC (ABS/EDL/TCS/ESP) (left-hand drive vehicle)	36
8.1 Assembly overview	36
8.2 Connecting brake lines from brake master cylinder to hydraulic unit	37
8.3 Removing control unit and hydraulic unit	38
8.4 Unscrewing control unit from hydraulic unit	41
8.5 Installing new control unit	41
8.6 Installing control unit and hydraulic unit	42
9 ABS Mark 60 EC (ABS/EDL/TCS/ESP) (RHD vehicle)	43
9.1 Assembly overview	43
9.2 Connecting brake lines from tandem brake master cylinder to hydraulic unit	44
9.3 Removing control unit and hydraulic unit	45
9.4 Unscrewing control unit from hydraulic unit	47
9.5 Installing new control unit	47
9.6 Installing control unit and hydraulic unit	48
10 Removing and installing parts of ABS system on front and rear axle	49
10.1 Removing and installing parts of ABS system on front axle	49



10.2	Removing and installing parts of anti-lock brake system on rear axle (front-wheel drive)	50
11	Removing and installing parts of ESP system	52
11.1	Removing and installing steering angle sender G85	52
46 - Brakes - mechanism		53
1	Repairing front brakes	53
1.1	Assembly overview - front brake FS III	53
1.2	Removing and installing brake pads/linings	54
1.3	Removing and installing brake caliper	57
1.4	Assembly overview - front brakes FN 3	59
1.5	Removing and installing brake pads/linings	62
1.6	Removing and installing brake caliper	65
1.7	Assembly overview - front brakes FNR-G	67
1.8	Removing and installing brake pads/linings	68
1.9	Removing and installing brake caliper	72
2	Repairing rear brakes	78
2.1	Assembly overview - rear brakes C 38	78
2.2	Removing and installing brake pads/linings	79
2.3	Removing and installing brake caliper	81
2.4	Assembly overview - rear brake CII 41	83
2.5	Removing and installing brake pads/linings	85
2.6	Removing and installing brake caliper	87
2.7	Assembly overview - Bosch rear wheel brake	90
2.8	Removing and installing brake pads, Bosch	92
2.9	Removing and installing brake caliper, Bosch	94
3	Handbrake	98
3.1	Assembly overview - handbrake lever	98
3.2	Removing and installing handbrake cable	98
3.3	Adjusting handbrake	100
4	Brake pedal (left-hand drive vehicle)	102
4.1	Assembly overview	102
4.2	Separating brake pedal from brake servo	102
4.3	Removing and installing mounting bracket	104
4.4	Removing and installing brake pedal	104
5	Brake pedal (right-hand drive vehicle)	105
5.1	Assembly overview	105
5.2	Detaching brake pedal from brake servo and clipping it back in	105
5.3	Removing and installing brake pedal	106
5.4	Removing and installing mounting bracket	108
47 - Brakes - hydraulics		109
1	Repairing front brake calipers	109
1.1	Assembly overview - front brake caliper FS III	109
1.2	Removing and installing brake caliper FS III	109
1.3	Assembly overview - front brake caliper FN 3	111
1.4	Removing and installing brake caliper piston FN 3	112
1.5	Assembly overview - brake caliper FNR-G	115
1.6	Removing and installing brake caliper piston FNR-G	116
2	Repairing rear brake calipers	120
2.1	Assembly overview - brake caliper C 38	120
2.2	Assembly overview - brake caliper CII 41	121
2.3	Removing and installing brake caliper piston	123
2.4	Assembly overview - Bosch brake caliper	125
2.5	Removing and installing protective cap (Bosch brake caliper)	127
2.6	Pre-bleeding brake caliper	128



3	Pressurised leak test	129
3.1	Prerequisites for testing:	129
4	Bleeding brake system	130
4.1	Bleeding brake system with the brake filling and bleeding equipment VAS 5234	130
4.2	Changing brake fluid	131
5	Brake servo/brake master cylinder (left-hand drive vehicle)	132
5.1	Assembly overview	132
5.2	Vacuum pump for brake servo (vehicles with diesel engine)	133
5.3	Vacuum pump for brake servo (vehicles with 2.0 l petrol engine)	134
5.4	Checking brake servo vacuum system	134
5.5	Checking non-return valve	138
5.6	Removing and installing vacuum sender G608	138
5.7	Removing and installing brake servo pressure sensor G294	138
5.8	Vacuum pump for brakes V192	139
5.9	Removing and installing brake light switch F	140
5.10	Removing and installing brake master cylinder	140
5.11	Removing and installing brake servo	142
6	Brake servo/brake master cylinder (right-hand drive vehicle)	145
6.1	Assembly overview	145
6.2	Vacuum pump for brake servo (vehicles with diesel engine)	146
6.3	Vacuum pump for brake servo (vehicles with 2.0 l petrol engine)	147
6.4	Checking brake servo vacuum system	147
6.5	Checking non-return valve	151
6.6	Removing and installing vacuum sender G608	151
6.7	Removing and installing brake servo pressure sensor G294	151
6.8	Vacuum pump for brakes V192	152
6.9	Removing and installing brake light switch F	153
6.10	Removing and installing brake master cylinder	153
6.11	Removing and installing brake servo	156
7	Brake lines	166
7.1	Separating point on underbody	166
7.2	Repairing brake lines	166