



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Checklist for evaluating running gear of accident vehicles</b>	<b>1</b>
<b>2 General information</b>	<b>3</b>
<b>40 - Front suspension</b>	<b>4</b>
<b>1 Appraisal of accident vehicles</b>	<b>4</b>
<b>2 Servicing front suspension</b>	<b>5</b>
2.1 Overview - front axle	5
2.2 Raising wheel suspension to unladen position	6
<b>3 Subframe, anti-roll bar, suspension links</b>	<b>9</b>
3.1 Assembly overview: subframe, anti-roll bar, suspension links	9
3.2 Assembly overview: front left vehicle level sender G78	13
3.3 Removing and installing front left vehicle level sender G78	13
3.4 Repairing thread in longitudinal member	14
3.5 Fixing position of subframe and brackets	15
3.6 Lowering subframe	16
3.7 Removing and installing subframe without steering rack	20
3.8 Removing and installing subframe with steering rack	24
3.9 Repairing subframe	30
3.10 Checking swivel joint	42
3.11 Removing and installing swivel joint	42
3.12 Removing and installing suspension link with mounting bracket	46
3.13 Removing and installing suspension link with mounting bracket (left side for vehicles with DSG or automatic gearboxes)	49
3.14 Renewing bonded rubber bush for suspension link	55
3.15 Renewing mounting bracket with suspension link bush	57
3.16 Removing and installing anti-roll bar	59
<b>4 Assembly overview: wheel bearing</b>	<b>65</b>
4.1 Removing and installing wheel bearing housing (3-point mounting)	67
4.2 Removing and installing wheel bearing housing (4-point mounting)	68
4.3 Removing and installing wheel bearing housing	71
<b>5 Assembly overview: suspension strut</b>	<b>77</b>
5.1 Removing and installing suspension strut	78
5.2 Repairing suspension strut	85
<b>6 Removing and installing drive shafts</b>	<b>88</b>
6.1 Loosening and tightening twelve-point head bolt, with ribbing, securing drive shaft	88
6.2 Loosening and tightening twelve-point head bolt, without ribbing, securing drive shaft	89
6.3 Removing and installing drive shaft with constant velocity joint	91
6.4 Removing and installing left drive shaft with (push-on) constant velocity slip joint	94
6.5 Removing and installing right drive shaft with (push-on) constant velocity slip joint	99
6.6 Removing and installing drive shafts with triple roller joint AAR3300i	105
<b>7 Repairing drive shaft - overview of drive shafts</b>	<b>110</b>
7.1 Heat shields for drive shafts	111
<b>8 Assembly overview: drive shaft with VL90 or VL100 constant velocity joint</b>	<b>112</b>
8.1 Dismantling and assembling drive shaft with VL90 or VL100 constant velocity joint	114
8.2 Checking outer constant velocity joint	118
8.3 Checking inner constant velocity joint	119
<b>9 Assembly overview: drive shaft with VL107 constant velocity joint (bolt-on)</b>	<b>122</b>
9.1 Dismantling and assembling drive shaft with VL107 constant velocity joint	124
<b>10 Assembly overview: drive shaft with VL107 constant velocity slip joint (push-on)</b>	<b>129</b>
10.1 Dismantling and assembling drive shaft with VL107 (push-on) constant velocity slip joint	130



11	<b>Assembly overview: drive shaft with triple roller joint AAR3300i</b>	134
11.1	Dismantling and assembling drive shaft with triple roller joint AAR3300i	136
<b>42</b>	<b>- Rear suspension</b>	<b>142</b>
1	<b>Appraisal of accident vehicles</b>	<b>142</b>
2	<b>Repairing rear suspension (front-wheel drive)</b>	<b>143</b>
2.1	Overview - rear axle	143
2.2	Rear axle in unladen position	144
3	<b>Assembly overview: subframe, transverse link, track rod (front-wheel drive)</b>	<b>147</b>
3.1	Fixing position of subframe	149
3.2	Lowering rear axle	150
3.3	Assembly overview: rear left vehicle level sender G76 , front-wheel drive	153
3.4	Removing and installing rear left vehicle level sender G76 (front-wheel drive)	153
3.5	Removing and installing rear axle	154
3.6	Removing and installing upper transverse link	158
3.7	Removing and installing lower transverse link	160
3.8	Removing and installing track rod	162
4	<b>Assembly overview: wheel bearing housing, trailing arm (front-wheel drive)</b>	<b>165</b>
4.1	Removing and installing wheel bearing housing	166
4.2	Renewing bonded rubber bush for wheel bearing housing	169
4.3	Removing and installing wheel bearing/wheel hub unit	172
4.4	Removing and installing wheel bearing pre-seal	175
4.5	Removing and installing trailing arm with mounting bracket	177
4.6	Repairing trailing arm	180
5	<b>Assembly overview: shock absorber, coil spring (front-wheel drive)</b>	<b>184</b>
5.1	Removing and installing coil spring	184
5.2	Removing and installing shock absorbers	186
5.3	Repairing shock absorber	188
6	<b>Assembly overview: anti-roll bar (front-wheel drive)</b>	<b>190</b>
6.1	Removing and installing anti-roll bar	190
7	<b>Repairing rear suspension (four-wheel drive)</b>	<b>193</b>
7.1	Overview - rear axle	193
7.2	Rear axle in unladen position	195
8	<b>Assembly overview: subframe, final drive (four-wheel drive)</b>	<b>198</b>
8.1	Fixing position of subframe	198
8.2	Lowering rear axle	199
8.3	Removing and installing rear axle	202
8.4	Repairing subframe, up to Week 21/2012	206
8.5	Repairing subframe, as of Week 22/2012	212
9	<b>Assembly overview: transverse link, track rod (four-wheel drive)</b>	<b>225</b>
9.1	Rear left vehicle level sender G76 (four-wheel drive)	228
9.2	Removing and installing rear left vehicle level sender G76 (four-wheel drive)	228
9.3	Removing and installing upper transverse link	229
9.4	Removing and installing lower transverse link	231
9.5	Removing and installing track rod	233
10	<b>Assembly overview: wheel bearing housing, trailing arm (four-wheel drive)</b>	<b>236</b>
10.1	Removing and installing wheel bearing housing	238
10.2	Renewing bonded rubber bush for wheel bearing housing	241
10.3	Removing and installing wheel bearing/wheel hub unit	244
10.4	Removing and installing trailing arm with mounting bracket	245
10.5	Repairing trailing arm	248
11	<b>Assembly overview: shock absorber, coil spring (four-wheel drive)</b>	<b>252</b>
11.1	Removing and installing coil spring	252
11.2	Removing and installing shock absorbers	254



11.3	Repairing shock absorber	256
<b>12</b>	<b>Assembly overview: anti-roll bar (four-wheel drive)</b>	<b>258</b>
12.1	Removing and installing anti-roll bar	258
<b>13</b>	<b>Assembly overview: drive shaft</b>	<b>261</b>
13.1	Loosening and tightening twelve-point head bolt, with ribbing, securing drive shaft	262
13.2	Loosening and tightening twelve-point head bolt, without ribbing, securing drive shaft	264
13.3	Removing and installing drive shaft	265
13.4	Dismantling and assembling drive shaft	269
13.5	Checking outer constant velocity joint	273
13.6	Checking inner constant velocity joint	274
<b>43</b>	<b>Self-levelling suspension</b>	<b>277</b>
<b>1</b>	<b>Appraisal of accident vehicles</b>	<b>277</b>
<b>2</b>	<b>Components of adaptive chassis control DCC and fitting locations</b>	<b>278</b>
2.1	Shock absorber damping adjustment button E387	279
2.2	Removing and installing front left and right body acceleration senders G341/G342	279
2.3	Renewing bracket for front left/right body acceleration sender G341/G342	280
2.4	Assembly overview: front left/right vehicle level sender G78/G289 for adaptive chassis control DCC	282
2.5	Removing and installing front left/right vehicle level sender G78/G289	283
2.6	Assembly overview: rear left vehicle level sender G76 for adaptive chassis control DCC, front-wheel drive	284
2.7	Removing and installing rear left vehicle level sender G76 for adaptive chassis control DCC, front-wheel drive	285
2.8	Assembly overview: rear left vehicle level sender G76 for adaptive chassis control DCC, four-wheel drive	286
2.9	Removing and installing rear left vehicle level sender G76 for adaptive chassis control DCC, four-wheel drive	287
2.10	Removing and installing electronically controlled damping control unit J250	288
2.11	Removing and installing retainer for electronically controlled damping control unit J250	289
2.12	Cable routing left front axle	289
2.13	Cable routing right front axle	291
2.14	Cable routing rear axle	292
<b>3</b>	<b>Assembly overview: suspension strut for adaptive chassis control DCC</b>	<b>293</b>
3.1	Removing and installing suspension strut for adaptive chassis control DCC	295
<b>4</b>	<b>Assembly overview: shock absorber for adaptive chassis control DCC (front-wheel drive)</b>	<b>304</b>
4.1	Removing and installing rear body acceleration sender G343 (front-wheel drive)	305
4.2	Removing and installing shock absorber for adaptive chassis control DCC (front-wheel drive)	306
4.3	Repairing shock absorber for adaptive chassis control DCC (front-wheel drive)	308
<b>5</b>	<b>Assembly overview: shock absorber for adaptive chassis control DCC (four-wheel drive)</b>	<b>311</b>
5.1	Removing and installing rear body acceleration sender G343 (four-wheel drive)	312
5.2	Removing and installing shock absorber for adaptive chassis control DCC (four-wheel drive)	313
5.3	Repairing shock absorber for adaptive chassis control DCC (four-wheel drive)	315
<b>44</b>	<b>Wheels, tyres, vehicle geometry</b>	<b>318</b>
<b>1</b>	<b>Appraisal of accident vehicles</b>	<b>318</b>
<b>2</b>	<b>Specified torques for wheel bolts</b>	<b>319</b>
<b>3</b>	<b>Position of anti-theft wheel bolts for steel wheels</b>	<b>320</b>
<b>4</b>	<b>Fitting wheel and tyre</b>	<b>321</b>
4.1	General information	321
4.2	Fittings instructions	321
<b>5</b>	<b>Removing and fitting tyres (wheels with tyre pressure monitoring)</b>	<b>323</b>



5.1	Notes on safety and conditions for removing and fitting tyres (wheels with tyre pressure monitoring system)	323
5.2	Wheel change	323
5.3	Pressing tyre off wheel rim	324
5.4	Removing tyre from wheel	325
5.5	Fitting tyre to wheel rim	325
<b>6</b>	<b>Removing and fitting tyres with run-flat properties to wheel rims</b>	<b>327</b>
6.1	Safety information	327
6.2	Pressing tyre off wheel rim	327
6.3	Removing tyre from wheel	328
6.4	Fitting tyre to wheel rim	329
<b>7</b>	<b>Tyre pressure monitor display</b>	<b>332</b>
7.1	General information	332
7.2	System fault in the ABS system	333
7.3	Perform basic settings	333
<b>8</b>	<b>Tyre pressure monitoring system (TPMS)</b>	<b>334</b>
8.1	Button behaviour	334
8.2	Assembly overview: tyre pressure sensor	335
8.3	Removing and installing tyre pressure sensor	336
<b>9</b>	<b>Vehicle alignment check</b>	<b>338</b>
9.1	General information	338
9.2	Conditions for testing	340
9.3	Test preparations	340
9.4	Wheel alignment specifications	341
9.5	Overview - wheel alignment procedure	343
9.6	Correcting front axle camber	344
9.7	Adjusting camber on rear axle	346
9.8	Adjusting toe at rear axle	348
9.9	Adjusting front axle toe	348
9.10	Basic setting of steering angle sensor G85	350
9.11	Vehicle data sticker	350
<b>10</b>	<b>Wheels, tyres</b>	<b>351</b>
10.1	Models with breakdown set	351
10.2	Tyre sealant	351
10.3	Removing a tyre	351
10.4	Fitting a new tyre	352
10.5	Tyre sealant disposal	352
<b>11</b>	<b>Instructions for changing or fitting wheels</b>	<b>353</b>
11.1	Fitting wheels	354
<b>12</b>	<b>Protecting wheel centring seat against corrosion</b>	<b>355</b>
<b>13</b>	<b>Vibration due to wheels/tyres - causes and rectification</b>	<b>356</b>
13.1	Causes of rough running	356
13.2	Balancing wheels	356
13.3	Conducting a road test before balancing wheels	356
13.4	Balancing wheels on stationary wheel balancing machine	357
13.5	Vibration control system VAS 6230 A	360
13.6	Finish balancer	360
13.7	Radial and lateral runout of wheels and tyres	361
13.8	Checking radial and lateral runout on wheels and tyres with tyre gauge V.A.G 1435	361
13.9	Checking radial and lateral run-out on wheel rim	362
13.10	Matching	363
13.11	Flat spots caused by storage or handling	364
<b>48 - Steering</b>		<b>366</b>
<b>1</b>	<b>Appraisal of accident vehicles</b>	<b>366</b>

---



<b>2</b>	<b>General repair instructions</b>	<b>367</b>
2.1	Steering rack	367
2.2	Gaskets and seals	367
2.3	Nuts and bolts	367
2.4	Electrical components	368
2.5	Guided fault-finding, vehicle self-diagnosis and test instruments	368
<b>3</b>	<b>Steering wheel, steering column</b>	<b>369</b>
3.1	Removing and installing steering wheel	369
3.2	Assembly overview: steering column, left-hand drive, vehicle with no knee airbag	372
3.3	Removing and installing steering column, left-hand drive, vehicle with no knee airbag	372
3.4	Assembly overview: steering column, left-hand drive, vehicle with knee airbag	380
3.5	Removing and installing steering column, left-hand drive, vehicle with knee airbag	381
3.6	Assembly overview: steering column, right-hand drive	390
3.7	Removing and installing steering column, right-hand drive vehicle	391
3.8	Handling and transporting steering column	397
3.9	Checking steering column for damage	398
<b>4</b>	<b>Electromechanical steering rack</b>	<b>399</b>
4.1	Assembly overview - electromechanical steering rack, left-hand drive	399
4.2	Assembly overview - electromechanical steering rack, right-hand drive	400
4.3	Removing and installing steering rack, left-hand drive vehicle	401
4.4	Removing and installing steering rack, right-hand drive vehicle	409
<b>5</b>	<b>Repairing electromechanical steering rack</b>	<b>419</b>
5.1	Assembly overview: electromechanical steering rack	419
5.2	Removing and installing boot	420
5.3	Removing and installing track rod	422