



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Fundamentals for batteries	1
1.2 Types of battery	1
1.3 Warning notices and safety regulations	1
1.4 Battery load test	1
2 Checking battery	2
3 Charging battery	3
4 Disconnecting and connecting battery	4
4.1 Models with battery installed in engine compartment	4
5 Removing and installing battery	8
5.1 Models with battery installed in engine compartment	8
5.2 Adapting battery monitor control unit J367	11
6 Starter, vehicles with manual gearbox	12
6.1 Checking starter B	12
6.2 Starter, vehicles with 1.2 l, 77 kW injection engine, manual gearbox MQ200-5F/MQ200-6F	12
6.3 Starter, vehicles with 1.4 l, 59 kW injection engine and manual gearbox MQ200-5F	16
6.4 Starter, vehicles with 1.4 l, 90 kW TSI engine and manual gearbox MQ200-6F	19
6.5 Starter, vehicles with 1.6 l, 75 kW injection engine and manual gearbox MQ200-5F	23
6.6 Starter, vehicles with 1.8 l, 118 kW TSI engine and manual gearbox MQ200-6F	28
6.7 Starter, vehicles with 2.5 l, 125 kW injection engine and manual gearbox MQ250-5F	31
6.8 Starter, vehicles with 2.0 l, 155 kW TSI engine and manual gearbox MQ350-6F	35
6.9 Starter, vehicles with 2.0 l, 199/188 kW TSI engine and manual gearbox MQ360-6A	40
6.10 Starter, vehicles with 1.6 l, 77 kW TDI engine and manual gearbox MQ250-5F	45
6.11 Starter, vehicles with 2.0 l 81 kW TDI engine and manual gearbox MQ250-5F	50
6.12 Starter, vehicles with 2.0 l 103 kW TDI engine and manual gearbox MQ350-6F	54
6.13 Starter, vehicles with 2.0 l 125 kW TDI engine and manual gearbox MQ350-6F	59
7 Starter, vehicles with dual clutch gearbox (DSG)	64
7.1 Starter, vehicles with 1.4 l, 90 kW TSI engine and dual clutch gearbox (DSG) DQ200-7F	64
7.2 Starter, vehicles with 1.4 l, 118 kW TSI engine and dual clutch gearbox (DSG) DQ200-7F	67
7.3 Starter, vehicles with 1.6 l, 75 kW injection engine and dual clutch gearbox (DSG) DQ200-7F	71
7.4 Starter, vehicles with 1.8 l, 118 kW TSI engine and dual clutch gearbox (DSG) DQ200-7F	74
7.5 Starter, vehicles with 2.0 l, 147 kW TSI engine and dual clutch gearbox (DSG) DQ250-6F	77
7.6 Starter, vehicles with 2.0 l, 155 kW TSI engine and dual clutch gearbox (DSG) DQ250-6F	81
7.7 Starter, vehicles with 2.0 l, 199/188 kW TSI engine and dual clutch gearbox 02E (DQ250-6F)	86
7.8 Starter, vehicles with 1.6 l, 66/77 kW TDI engine and dual clutch gearbox DQ250-7F	92
7.9 Starter, vehicles with 2.0 l, 103 kW TDI engine and dual clutch gearbox (DSG) DQ250-6F	95
7.10 Starter, vehicles with 2.0 l, 125 kW TDI engine and dual clutch gearbox (DSG) DQ250-6F	100
8 Starter, vehicles with automatic gearbox	106
8.1 Removing and installing starter, vehicles with 2.5 l injection engine, automatic gearbox AQ250-6F	106
9 Alternator	111
9.1 Securing B+ (battery positive) wire to alternator	111
9.2 Checking poly V-belt	112
9.3 Checking alternator C	112
9.4 Alternator, 1.2 l, 77 kW TSI engine	112
9.5 Alternator, 1.4 l, 59 kW injection engine	116
9.6 Alternator, 1.4 l, 90 kW TSI engine	121
9.7 Alternator, 1.4 l, 118 kW TSI engine	127



9.8	Alternator, 1.6 l, 75 KW injection engine	133
9.9	Alternator, 1.8 l, 118 KW TSI engine	139
9.10	Alternator, 2.5 l, 125 kW injection engine	142
9.11	Alternator, 1.6 l TDI engine	149
9.12	Alternator, 2.0 l, 81 kW or 103 kW TDI engine	155
9.13	Alternator, 2.0 l, 125 KW TDI engine	160
9.14	Alternator, 2.0 l, 155 KW TSI engine	165
9.15	Alternator, 2.0 l, 199/188/173/147 kW TSI engine	172
9.16	Removing and installing poly V-belt pulley on alternator	177
9.17	Voltage regulator for alternator	183
10	Cruise control system (CCS)	187
11	Start/stop system	188
11.1	General description	188
11.2	Start/stop operation switch E693	189
11.3	Voltage stabiliser J532	189
90	Gauges, instruments	192
1	Dash panel insert	192
1.1	General description	192
1.2	Renewing dash panel insert	192
1.3	Removing and installing dash panel insert	193
1.4	Description of back of dash panel insert	194
1.5	Pin assignment of connectors on dash panel insert	194
1.6	Warning lamp symbols in dash panel insert	194
1.7	Warning lamp symbols on the dash panel, for USA and Canada only	196
2	Service interval display	199
2.1	Resetting service interval display	199
92	Windscreen wash/wipe system	200
1	Windscreen wiper system	200
1.1	General description	200
1.2	Deactivating APP function of wiper motor	201
1.3	Assembly overview - windscreen wiper system	201
1.4	Removing and installing windscreen wiper system	202
1.5	Removing and installing wiper arms	207
1.6	Adjusting wiper blade park position	207
1.7	Removing and installing joint-free wipers	209
1.8	Rain and light sensor G397	209
2	Windscreen washer system	215
2.1	Assembly overview - windscreen washer system	215
2.2	Removing and installing washer fluid reservoir	217
2.3	Removing and installing windscreen and rear window washer pump V59	224
2.4	Removing and installing windscreen washer fluid level sender G33	226
2.5	Removing and installing windscreen washer system spray jets	227
2.6	Adjusting spray jets for windscreen washer system	227
3	Rear window wiper system	228
3.1	Assembly overview - rear window wiper system	228
3.2	Removing and installing wiper arm	229
3.3	Removing and installing rear window wiper motor V12	230
3.4	Adjusting rear window wiper park position	231
3.5	Removing and installing joint-free wiper	232
4	Rear window washer system	233
4.1	Assembly overview - rear window washer system	233
4.2	Renewing and setting spray jet	234
5	Headlight washer system	236



5.1	General description	236
5.2	Assembly overview - headlight washer system	236
5.3	Removing and installing headlight washer system pump V11	238
5.4	Removing and installing spray jet pop-up cylinders	239
5.5	Removing and installing spray jet pop-up cylinders »Golf R«	240
5.6	Removing and installing spray jet retainer	242
5.7	Adjusting headlight washer system spray jets	243
5.8	Bleeding headlight washer system	243
6	Washer fluid line hose couplings	244
7	Hose repair	245
94	Lights, bulbs, switches - exterior	246
1	Operation and safety notes for gas discharge lamps	246
2	Headlight with halogen bulbs	249
2.1	General description	249
2.2	Assembly overview - headlights with halogen bulbs	249
2.3	Removing and installing headlights with halogen bulbs	251
2.4	Adjusting headlight installation position	253
2.5	Renewing headlight bulbs	255
2.6	Removing and installing headlight range control motor	262
2.7	Repairing headlight retaining tabs	267
2.8	Converting headlights for use when driving on the left or right	271
2.9	Adjusting headlights	274
3	Headlight with gas discharge bulb and cornering light	275
3.1	General description	275
3.2	Assembly overview	276
3.3	Assembly overview »Golf R«	278
3.4	Removing and installing headlight	280
3.5	Adjusting headlight installation position	282
3.6	Renewing gas discharge bulbs and cornering light bulbs in headlights	282
3.7	Headlight starter for gas discharge bulb	287
3.8	Power output module for headlight	288
3.9	Cornering light and headlight range control unit J745	289
3.10	Headlight range control motor	292
3.11	Swivel module position sensor	292
3.12	Headlight screen adjustment solenoid	292
3.13	Vehicle level sender	292
3.14	LED module for daytime running light and side light	293
3.15	Converting headlights for use when driving on the left or right	293
3.16	Repairing headlight retaining tabs	295
3.17	Adjusting headlights	295
4	LED module for daytime running light and side light »Golf R«	296
4.1	Removing and installing LED module for daytime running light and side light L176	296
5	Fog lights	299
5.1	Fog lights Golf	299
5.2	Fog lights Golf GTI	301
5.3	Adjusting fog lights	305
6	Turn signal repeater bulb and entry light in exterior mirror	306
6.1	General description	306
6.2	Turn signal repeater bulb	306
6.3	Entry light in exterior mirror	307
7	Side marker lights	310
7.1	Front side marker light, USA and Canada only	310
7.2	Rear side marker light, USA and Canada only	312



8	Tail light cluster	313
8.1	Assembly overview - tail light cluster in side panel	313
8.2	Removing and installing tail light cluster in side panel	313
8.3	Removing and installing tail light bulb cluster carrier in side panel	315
8.4	Renewing brake and tail light cluster and turn signal bulbs in tail light cluster in side panel	315
8.5	Assembly overview - tail light cluster in rear lid	316
8.6	Removing and installing tail light cluster in rear lid	317
8.7	Removing and installing tail light cluster bulb carrier in rear lid	319
8.8	Renewing brake and tail light bulbs in rear lid	320
9	Tail light cluster with LED	322
9.1	General description	322
9.2	Tail light cluster with LEDs in side panel	322
9.3	Tail light cluster with LEDs in rear lid	326
10	Number plate light	331
10.1	Bolted number plate light X	331
10.2	Clipped number plate light X	333
11	High-level brake lights	336
11.1	High-level brake light bulb M25	336
12	Steering column switch, vehicles up to 05/2010	342
12.1	General description	342
12.2	Assembly overview - steering column switch	342
12.3	Removal and installation sequence of components of steering column switch	344
12.4	Steering column electronics control unit J527	345
12.5	Airbag coil connector and return ring with slip ring F138	347
12.6	Steering column combination switch E595	349
13	Steering column switch, vehicles from 06/2010	354
13.1	General description	354
13.2	Assembly overview - steering column switch	354
13.3	Removal and installation sequence of components of steering column switch	356
13.4	Steering column electronics control unit J527	356
13.5	Steering column combination switch E595	360
13.6	Steering column switch base	362
14	Steering column switch, vehicles from 06/2010 with KESSY	368
14.1	General description	368
14.2	Assembly overview - steering column switch	368
14.3	Removal and installation sequence of components of steering column switch	370
14.4	Steering column electronics control unit J527	370
14.5	Steering column combination switch E595	374
14.6	Steering column switch base	376
14.7	Control unit for electronic steering column lock J764	382
15	Ignition/starter switch and lock cylinder, vehicles up to 05/2010	384
15.1	Removing and installing steering lock housing	384
15.2	Removing and installing lock cylinder	384
15.3	Removing and installing ignition/starter switch	387
15.4	Removing and installing ignition key withdrawal lock solenoid N376	389
16	Ignition/starter switch and lock cylinder, vehicles from 06/2010	391
16.1	Removing and installing steering lock housing	391
16.2	Removing and installing lock cylinder	391
16.3	Removing and installing ignition/starter switch	394
16.4	Removing and installing ignition/starter switch, vehicles with KESSY	396
16.5	Removing and installing ignition key withdrawal lock solenoid N376	396
17	Entry and start authorisation (KESSY)	398
17.1	General description	398
17.2	Assembly overview - entry and start authorisation	399



17.3	Entry and start authorisation control unit J518	401
17.4	Entry and start authorisation aerials and sensors	403
17.5	Checking entry and start system aerials and sensors	407
17.6	Starter button E378	408
18	Parking aid (PDC)	410
18.1	General description	410
18.2	Assembly overview - parking aid	411
18.3	Assembly overview - parking aid »Golf R«	413
18.4	Parking aid control unit J446	415
18.5	Front parking aid senders	415
18.6	Front sender for parking aid »Golf R«	419
18.7	Rear parking aid senders	422
18.8	Renewing parking aid senders	425
18.9	Parking aid warning buzzer	426
18.10	Parking aid button E266	427
19	Park assist steering (PAS)	429
19.1	General description	429
19.2	Assembly overview of park assist steering	430
19.3	Park assist steering control unit J791	432
19.4	Park assist steering sender	434
19.5	Renewing park assist steering senders	437
19.6	Front parking aid warning buzzer H22	438
19.7	Rear parking aid warning buzzer H15	439
19.8	Park assist steering button E581	440
20	Reversing camera	441
20.1	General description	441
20.2	Assembly overview - reversing camera system	441
20.3	Removing and installing reversing camera	442
21	Main beam assist (MBA)	443
21.1	General description	443
21.2	Main beam assist control unit J844	444
21.3	Light sensor G399	444
96	Lights, bulbs, switches - interior	445
1	Interior lights and switches	445
1.1	Interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	445
2	Lights and switches in engine compartment	447
2.1	Removing and installing bonnet contact switch F266	447
3	Lights and switches in dash panel	449
3.1	Light switch E1	449
3.2	Glove compartment light W6	450
3.3	Glove compartment light switch E26	452
3.4	Headlight range control regulator E102 and switches and instruments illumination regulator E20	452
3.5	Front passenger side airbag deactivated warning lamp K145	453
3.6	Hazard warning light switch E3	454
3.7	Right footwell light W10	455
3.8	Left footwell light W9	458
3.9	Key operated switch to deactivate front passenger side airbag E224	460
3.10	Tyre pressure monitor display button E492	461
4	Lights and switches in front doors	463
4.1	Window regulator switch in front passenger door E107	463
4.2	Mirror adjustment switch element, passenger side	463
4.3	Driver side interior locking button for central locking system E308	464



4.4	Components - front door locks	465
4.5	Driver side window regulator switch element	465
4.6	Central locking SAFELOCK function warning lamp K133	467
5	Lights and switches in rear doors	469
5.1	Components - rear door locks	469
5.2	Rear left window regulator switch E52 and rear right window regulator switch E54	469
6	Lights and switches in luggage compartment	471
6.1	Luggage compartment light W3	471
6.2	Rear lid lock unit F256	473
7	Lights and switches in roof trim	474
7.1	Front interior light W1 (vehicles without anti-theft alarm)	474
7.2	Front interior light W1 (vehicles with anti-theft alarm)	476
7.3	Rear interior and reading lights	480
7.4	Removing and installing front passenger side illuminated vanity mirror W14 and driver side illuminated vanity mirror W20	482
8	Lights and switches in centre console	485
8.1	Buttons in centre console storage compartment	485
9	Horn	487
9.1	Treble horn H2 and bass horn H7	487
10	Immobiliser	489
10.1	General description	489
10.2	Immobiliser control unit J362	490
10.3	Ignition key	490
10.4	New identity on renewing all components	490
10.5	Fazit system test	490
11	Anti-theft alarm system	492
11.1	General description	492
11.2	Assembly overview - anti-theft alarm (ATA)	492
11.3	Activating and deactivating anti-theft alarm	494
11.4	Interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	494
11.5	Anti-theft alarm sensor G578	495
11.6	Vehicle inclination sender G384	496
11.7	Interior monitoring sensor G273	497
11.8	Central locking and anti-theft alarm system aerial R47	497
11.9	Alarm horn H12	497
11.10	Adaptations of anti-theft alarm	499
97 - Wiring		500
1	Vehicle diagnosis, testing and information systems	500
2	Fuse holder	501
2.1	Fuse holder in dash panel	501
2.2	Fuse holder in electronics box	502
3	Relay carriers	503
3.1	Relay carrier on left of dash panel	503
3.2	Relay carrier on onboard supply control unit J519	505
4	Electronics boxes	507
4.1	Electronics box on left side of engine compartment (engine compartment electronics box)	507
5	Select Control units	513
5.1	On-board supply control unit J519	513
5.2	Data bus diagnostic interface J533 (gateway)	518
5.3	Driver door control unit J386	521
5.4	Front passenger door control unit J387	522
5.5	Rear left door control unit J388	522



5.6	Rear right door control unit J389	523
5.7	Trailer detector control unit J345	524
6	Wiring harness and connector repairs	527