



## Contents

<b>68 - Interior equipment</b> .....	<b>1</b>
<b>1 Interior mirror</b> .....	<b>1</b>
1.1 Tools .....	1
1.2 Automatic anti-dazzle interior mirror .....	1
1.3 Removing and installing interior mirror with rain sensor .....	1
1.4 Bonding on retaining plate for interior mirror with rain sensor .....	2
1.5 Removing and installing interior mirror .....	3
1.6 Bonding on retaining plate for interior mirror without rain sensor .....	4
<b>2 Compartments, covers and trims</b> .....	<b>7</b>
2.1 Tools .....	7
2.2 Removing and installing basic centre console (Golf 2004 ▶) .....	7
2.3 Removing and installing basic centre console (Golf 2009 ▶) .....	11
2.4 Loosening and securing basic centre console (Golf 2009 ▶) .....	16
2.5 Removing and installing Highline centre console (Golf 2004 ▶) .....	19
2.6 Removing and installing Highline centre console (Golf 2009 ▶) .....	28
2.7 Loosening and securing Highline centre console (Golf 2009 ▶) .....	38
2.8 Removing and installing mounting bracket for centre console (Golf 2004 ▶) .....	41
2.9 Removing and installing mounting bracket for centre console and mounting bracket for footwell trim (Golf 2009 ▶) .....	45
2.10 Removing and installing cup holder in Highline centre console .....	50
2.11 Repairing drinks holder in Highline centre console .....	51
2.12 Removing and installing storage compartment / ashtray (Golf 2004 ▶) .....	54
2.13 Removing and installing storage compartment / ashtray (Golf 2009 ▶) .....	55
2.14 Removal and installation of dash panel centre vents (vehicles without Climatronic) (Golf 2004 ▶) .....	56
2.15 Removing and installing dash panel centre vents (vehicles with Climatronic, Golf 2004 ▶) ..	58
2.16 Removing and installing centre compartment in dash panel (Golf 2009 ▶) .....	61
2.17 Removing and installing spectacles holder in moulded headliner .....	62
2.18 Removing and installing frame in moulded headliner .....	63
2.19 Removing and installing dash panel centre vent (Golf 2009 ▶) .....	64
2.20 Removing and installing dash panel centre trim (Golf 2004 ▶) .....	66
2.21 Removing and installing dash panel centre trim (Golf 2009 ▶) .....	67
2.22 Removing and installing air conditioner control panel trim / heater control panel trim (Golf 2009 ▶) .....	68
2.23 Removing and installing dash panel end trims .....	69
2.24 Removing and installing steering column trim .....	70
2.25 Removing and installing left trim panel on driver side .....	72
2.26 Removing and installing right trim panel on driver side .....	74
2.27 Removing and installing centre cover (Golf 2004 ▶) .....	76
2.28 Removing and installing centre cover (Golf 2009 ▶) .....	77
2.29 Removing and installing glove compartment .....	78
2.30 Removing and installing glove compartment lock cylinder .....	82
2.31 Removing and installing footwell cover on driver side, Golf 2004▶ .....	83
2.32 Removing and installing decorative trim on dash panel (Golf 2004 ▶) .....	84
2.33 Removing and installing decorative trims on dash panel (Golf 2009 ▶) .....	85
2.34 Removing and installing sun visor .....	86
<b>3 Sill panel mouldings</b> .....	<b>90</b>
3.1 Removing and installing sill panel mouldings (2-door) .....	90
3.2 Removing and installing sill panel mouldings (4-door) .....	91
3.3 Removing and installing wheel housing trim (4-door) .....	93
3.4 Removing and installing wheel housing trim (4-door), without rear side airbag 06/2005▶ ..	94
<b>4 Grab handles</b> .....	<b>97</b>
4.1 Removing and installing roof grab handles .....	97



<b>69 - Passenger protection</b>	<b>99</b>
<b>1 Seat belts</b>	<b>99</b>
1.1 Safety measures when working with pyrotechnic components	99
1.2 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	100
1.3 Removing and installing front seat belt (2-door models)	100
1.4 Removing and installing front seat belt (4-door models)	103
1.5 Removing and installing front belt height adjuster	106
1.6 Removing and installing front seat belt buckle (2-door)	108
1.7 Removing and installing front seat belt buckle (4-door)	109
1.8 Removing and installing rear outer seat belts	110
1.9 Removing and installing rear middle three-point seat belt	113
1.10 Removing and installing middle rear seat lap belt	115
1.11 Removing and installing rear double belt buckle	116
<b>2 Inspecting seat belts</b>	<b>118</b>
2.1 Points to check	118
<b>3 Checking child seat anchors (ISOFIX) after an accident</b>	<b>122</b>
3.1 Points to check	122
<b>4 Airbag</b>	<b>123</b>
4.1 Fitting location overview - airbag systems (Golf 2004 ►)	123
4.2 Safety measures when working with pyrotechnic components	124
4.3 Additional safety regulations for side airbag	126
4.4 Additional safety instructions for curtain airbag	126
4.5 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	127
4.6 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	127
4.7 Checking airbag securing parts after an accident	128
4.8 Accident without airbag triggering	129
4.9 Removing and installing airbag control unit J234	129
4.10 Removing and installing driver airbag (Golf 2004 ►)	131
4.11 Removing and installing driver airbag (Golf 2009 ►)	134
4.12 Removing and installing airbag coil connector and return ring with slip ring F138	138
4.13 Removing and installing key-operated switch to deactivate front passenger side airbag E224	138
4.14 Removing and installing knee airbag (Golf 2009 ►)	139
4.15 Removing and installing knee airbag bracket (Golf 2009 ►) LHD models	141
4.16 Removing and installing knee airbag bracket (Golf 2009 ►) RHD models	143
4.17 Removing and installing front passenger airbag unit	145
4.18 Removing and installing side airbags on driver and front passenger sides	150
4.19 Removing and installing rear side airbag (4-door)	151
4.20 Removing and installing curtain airbag on driver/front passenger sides	154
4.21 Removing and installing driver/front passenger curtain airbag, 4-door, (Golf 2009 ►)	156
4.22 Removing and installing Seat occupied sensor, front passenger side G128	160
<b>5 Seat occupied recognition (USA)</b>	<b>164</b>
5.1 Safety precautions for when working on seat occupied recognition	164
5.2 Procedure after an accident when belt tensioner and/or airbag was triggered	164
5.3 Assembly overview - seat occupied recognition (USA)	165
5.4 Components of repair kit for seat occupied recognition	165
5.5 Removing components of seat occupied recognition (vehicles with manually operated seats)	166
5.6 Installing repair kit for seat occupied recognition (vehicles with manually adjusted seats)	169
5.7 Removing components of seat occupied recognition (vehicles with electrically operated seats)	170
5.8 Installing repair kit for seat occupied recognition (vehicles with electrically operated seats)	173



5.9	Removing and installing seat position sensor	174
<b>6</b>	<b>Crash sensors</b>	<b>177</b>
6.1	Removing and installing crash sensors for front airbag (Golf 2009 ▶)	177
6.2	Removing and installing front door crash sensors (Golf 2004 ▶)	178
6.3	Removing and installing side airbag crash sensor on driver side G179 (Golf 2009 ▶)	180
6.4	Removing and installing side airbag crash sensor on front passenger side G180 (Golf 2009 ▶)	182
6.5	Removing and installing rear wheel housing crash sensors, 2-door (Golf 2004 ▶)	182
6.6	Removing and installing rear wheel housing crash sensors, 4-door (Golf 2004 ▶)	184
6.7	Removing and installing rear side airbag crash sensor on driver side G256 (Golf 2009 ▶)	186
6.8	Removing and installing rear side airbag crash sensor on front passenger side G257 (Golf 2009 ▶)	187
<b>70</b>	<b>Trim, insulation</b>	<b>188</b>
<b>1</b>	<b>Dash panel</b>	<b>188</b>
1.1	Tools	188
1.2	Removing and installing dash panel	188
1.3	Removing and installing dash panel cross member (right-hand drive vehicles)	194
1.4	Removing and installing central tube for dash panel (left-hand drive vehicles)	200
1.5	Aligning dash panel in vehicle, Golf 2004 ▶	205
<b>2</b>	<b>Door trim (Golf 2004 ▶)</b>	<b>210</b>
2.1	Tools	210
2.2	Removing and installing front door trim on driver side	211
2.3	Removing and installing front door trim on passenger side	212
2.4	Removing and installing trim strip in door trim	214
2.5	Removing and installing rear door trim	215
2.6	Removing and installing window crank	217
<b>3</b>	<b>Door trim (Golf 2009 ▶)</b>	<b>219</b>
3.1	Tools	219
3.2	Removing and installing front door trim (2-door vehicles)	219
3.3	Removing and installing front door trim (4-door vehicles)	223
3.4	Removing and installing rear door trim	226
3.5	Removing and installing trim strip and door trim	230
3.6	Removing and installing front loudspeaker trim	230
<b>4</b>	<b>Pillar and side trims</b>	<b>232</b>
4.1	Removing and installing upper A-pillar trim	232
4.2	Removing and installing centre A-pillar trim	234
4.3	Removing and installing lower A-pillar trim on driver side	235
4.4	Removing and installing lower A-pillar trim on front passenger side	236
4.5	Removing and installing upper B-pillar trim	237
4.6	Removing and installing lower B-pillar trim	240
4.7	Removing and installing C-pillar trim	241
4.8	Removing and installing sill panel moulding (2-door model)	243
<b>5</b>	<b>Rear lid trim (Golf 2004 ▶)</b>	<b>246</b>
5.1	Tools	246
5.2	Removing and installing rear lid trim	246
5.3	Removing and installing window frame trim	247
<b>6</b>	<b>Rear lid trim (Golf 2009 ▶)</b>	<b>249</b>
6.1	Tools	249
6.2	Removing and installing rear lid trim	249
6.3	Removing and installing window frame trim	250
<b>7</b>	<b>Luggage compartment trim</b>	<b>252</b>
7.1	Removing and installing luggage compartment cover side support	252
7.2	Removing and installing luggage compartment side trim panel	253
7.3	Removing and installing rear lock carrier cover	255



<b>8</b>	<b>Roof trims</b>	<b>257</b>
8.1	Tools	257
8.2	Removing and installing roof end strip	257
8.3	Removing and installing moulded headlining	258
8.4	Removing and installing roof insulation/reinforcement	263
<b>9</b>	<b>Floor covering</b>	<b>266</b>
9.1	Tools	266
9.2	Removing and installing floor covering	266
<b>72</b>	<b>- Seat frames</b>	<b>269</b>
<b>1</b>	<b>Front seats</b>	<b>269</b>
1.1	Tools	269
1.2	Removing and installing front seat	271
1.3	Removing and installing left side trim on seat	274
1.4	Removal and installation of left bucket seat trim	275
1.5	Removing and installing backrest trim of front bucket seat	277
1.6	Removing and installing trims on left side of electrically adjustable seat	278
1.7	Removing and installing left trim (seat with through-load aperture)	279
1.8	Removing and installing right trim (seat with through-load aperture)	280
1.9	Removing and installing slider (2 door models)	281
1.10	Removing and installing seat drawer mounting	283
1.11	Removing and installing front seat bar and operating lever	284
1.12	Removal and installation of front bucket seat bar and operating lever	285
1.13	Removing and installing bar and operating lever on electrically adjustable seat	286
1.14	Removing and installing right side trim on seat	287
1.15	Removal and installation of right side trim on bucket seat	289
1.16	Removing and installing lumbar support adjusting lever (Golf 2009 ►)	290
1.17	Removing head restraint guides	291
1.18	Removing and installing front seat backrest	292
1.19	Removal and installation of front bucket seat backrest	294
1.20	Removing and installing front bucket seat pan	295
1.21	Removing and installing backrest release Bowden cable on bucket seat	297
1.22	Removing and installing backrest release (seat with through-load aperture)	299
1.23	Removing and installing backrest release Bowden cable (2-door)	300
1.24	Removing and installing manual lumbar support frame (Golf 2004►)	302
1.25	Removing and installing manual lumbar support frame (Golf 2009 ►)	304
1.26	Removing and installing Easy Entry unit Bowden cable	305
1.27	Removing and installing electric longitudinal seat adjustment	306
1.28	Removing and installing seat pan on electrically adjustable seat	308
1.29	Removing and installing rake adjustment on electrically adjustable seat	311
1.30	Removing and installing height adjustment on electrically adjustable seat	313
1.31	Removing and installing (electric) seat lumbar support	314
1.32	Removing and installing drive for (electric) backrest adjustment	317
<b>2</b>	<b>Rear seats</b>	<b>318</b>
2.1	Removing and installing bench seat	318
2.2	Removing and installing backrest	319
2.3	Removing and installing side padding with side airbag (4-door)	320
2.4	Removing and installing side padding (4-door)	321
<b>74</b>	<b>- Seat - padding, covers</b>	<b>323</b>
<b>1</b>	<b>Front seat covers and padding</b>	<b>323</b>
1.1	Tools	323
1.2	Removing and installing front seat cushion cover and padding	324
1.3	Removal and installation of front bucket seat cushion cover and padding	326
1.4	Removing and installing front seat backrest cover and padding	329



---

1.5	Removal and installation of front bucket seat backrest cover and padding .....	334
<b>2</b>	<b>Rear seat covers and padding .....</b>	<b>338</b>
2.1	Removing and installing bench seat cover and padding .....	338
2.2	Removing and installing backrest cover and padding .....	339
2.3	Removing and installing through loading unit with centre armrest .....	341