



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Vehicle identification number	1
1.2 Type plate	2
1.3 Vehicle data sticker	3
2 Safety information	4
3 Moulded foam inserts	5
4 Galvanized body parts, high/higher-strength and hot-formed body panels	6
4.1 Installing	6
4.2 2-door vehicle	7
4.3 4-door vehicle	10
5 Laser welding	13
6 Body panel gaps/shut lines	14
6.1 Body - front	14
6.2 Body, centre	15
6.3 Body - rear	16
7 Body dimensions	18
7.1 Body - front	18
7.2 Body, centre	22
7.3 Body - rear	30
7.4 Floor panel - front	33
7.5 Floor panel - centre	35
7.6 Floor panel - rear	36
8 Alignment bracket set	38
8.1 Overview	38
9 Portal gauge	40
9.1 2-door vehicle	40
9.2 4-door vehicle	41
50 - Body - front	43
1 Renewing right bracket	43
1.1 Tools	43
1.2 Removing	43
1.3 Installing	45
2 Renewing left console	47
2.1 Tools	47
2.2 Removing	48
2.3 Installing	50
3 Renewing mounting bracket for subframe	52
3.1 Tools	52
3.2 Removing	52
3.3 Installing	54
4 Renewing front bumper bracket	56
4.1 Tools	56
4.2 Removing	56
4.3 Installing	57
5 Renewing upper wheel housing longitudinal member	59
5.1 Tools	59
5.2 Removing	60
5.3 Installing	62
6 Renewing front wheel housing	67



6.1	Tools	67
6.2	Removing	68
6.3	Installing	70
7	Repairing threads for attachment of subframe	78
7.1	Contents of thread repair kit	80
7.2	Repairing thread	80
8	Renewing front longitudinal member	84
8.1	Tools	84
8.2	Removing	85
8.3	Installing	87
9	Renewing front longitudinal member - part section	92
9.1	Tools	93
9.2	Removing	93
9.3	Installing	96
51 - Body - centre		98
1	Renewing roof - vehicles with no sliding/tilting sunroof	98
1.1	Tools	98
1.2	Removing	100
1.3	Installing	103
2	Renewing roof - vehicles with sliding/tilting sunroof	114
2.1	Tools	114
2.2	Removing	116
2.3	Installing	120
3	Renewing roof side member	131
3.1	Tools	132
3.2	Removing	132
3.3	Installing	134
3.4	Foam treating roof side member	141
4	Renewing front cross member for roof	149
4.1	Tools	150
4.2	Removing	150
4.3	Installing	151
5	Renewing roof reinforcing - vehicles with no sliding/tilting sunroof	153
5.1	Tools	153
5.2	Removing	154
5.3	Installing	155
6	Renewing rear roof cross member	157
6.1	Tools	157
6.2	Removing	158
6.3	Installing	159
7	Renewing A-pillar	162
7.1	Tools	162
7.2	Removing	163
7.3	Installing	166
8	Renewing A-pillar reinforcement	173
8.1	Tools	174
8.2	Removing	174
8.3	Installing	176
9	Renewing B-pillar (4-door)	182
9.1	Tools	182
9.2	Type plate	183
9.3	Removing	184
9.4	Installing	186



10	Renewing B-pillar reinforcement (4-door)	193
10.1	Tools	194
10.2	Type plate	195
10.3	Removing	196
10.4	Installing	200
11	Renewing B-pillar reinforcement (2-door)	211
11.1	Tools	212
11.2	Type plate	213
11.3	Removing	214
11.4	Installing	216
12	Renewing outer side member (4-door)	226
12.1	Tools	226
12.2	Type plate	227
12.3	Removing	228
12.4	Installing	229
13	Renewing outer side member - 2-door	236
13.1	Tools	236
13.2	Type plate	237
13.3	Removing	238
13.4	Installing	239
14	Renewing outer mounting for seat outer cross member	244
14.1	Tools	245
14.2	Removing	246
14.3	Installing	247
15	Renewing inner mounting for seat inner cross member	250
15.1	Tools	251
15.2	Removing	252
15.3	Installing	253
16	Renewing front side member reinforcement (4-door)	256
16.1	Tools	256
16.2	Removing	257
16.3	Installing	258
17	Renewing front side member reinforcement (2-door)	261
17.1	Tools	261
17.2	Removing	262
17.3	Installing	263
18	Renewing rear side member reinforcement (4-door)	267
18.1	Tools	267
18.2	Removing	268
18.3	Installing	269
19	Renewing rear side member reinforcement (2-door)	272
19.1	Tools	272
19.2	Removing	273
19.3	Installing	274
20	Renewing seat middle cross member	277
20.1	Tools	277
20.2	Removing	278
20.3	Installing	279
53 - Body - rear		282
1	Renewing cross panel	282
1.1	Tools	282
1.2	Removing	283
1.3	Installing	284



2	Renewing tail light mounting	286
2.1	Tools	286
2.2	Removing	287
2.3	Installing	288
3	Renewing cross panel member	291
3.1	Tools	291
3.2	Removing	292
3.3	Installing	293
4	Renewing luggage compartment floor	296
4.1	Tools	296
4.2	Removing	297
4.3	Installing	298
5	Renewing rear longitudinal member - part section	302
5.1	Tools	303
5.2	Removing	303
5.3	Installing	305
6	Renewing side panel - 4-door	308
6.1	Tools	309
6.2	Removing	310
6.3	Installing	312
7	Renewing side panel - 2-door	318
7.1	Tools	319
7.2	Removing	321
7.3	Installing	323
8	Renewing outer wheel housing liner	330
8.1	Tools	331
8.2	Removing	331
8.3	Installing	332