



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on air conditioning systems	1
1.2 Safety precautions when handling refrigerants	1
1.3 Safety precautions when working on high-voltage system	2
1.4 Safety precautions when working in the vicinity of high-voltage components	3
1.5 Safety measures when working on vehicles with a start/stop system	3
1.6 Safety precautions when working on the cooling system	3
1.7 Safety precautions when working on vehicles with auxiliary/supplementary heater	3
<b>2 General information</b>	<b>5</b>
2.1 Notes concerning odours in air conditioned vehicles	5
2.2 Notes for vehicles with start-stop system	5
<b>3 Repair notes</b>	<b>6</b>
3.1 Working on refrigerant circuit	6
3.2 General repair instructions	6
3.3 Refrigerant circuit seals	6
3.4 Notes on control motors	7
<b>4 Technical data</b>	<b>13</b>
4.1 Refrigerant capacity	13
4.2 Refrigerant oil	13
4.3 Oil distribution	13
<b>80 - Heating</b>	<b>15</b>
<b>1 Heater</b>	<b>15</b>
1.1 Removing and installing fresh air blower V2	15
1.2 Removing and installing fresh air blower series resistor with overheating fuse N24	15
1.3 Removing and installing dust and pollen filter	15
1.4 Checking auxiliary air heater element Z35	15
1.5 Removing and installing auxiliary air heater element Z35	15
1.6 Removing and installing heat exchanger	15
<b>2 Air duct</b>	<b>16</b>
2.1 Removing and installing centre vent	16
2.2 Removing and installing vent on driver or front passenger side	16
2.3 Removing and installing driver side footwell vents	16
2.4 Removing and installing front passenger side footwell vents	16
2.5 Removing and installing rear footwell air duct	16
2.6 Removing and installing fresh air intake	16
2.7 Checking forced ventilation for passenger compartment	16
2.8 Removing and installing forced ventilation for passenger compartment	17
2.9 Removing and installing air intake housing	17
<b>3 Coolant circuit</b>	<b>18</b>
3.1 Removing and installing coolant pipes on heat exchanger	18
<b>87 - Air conditioning system</b>	<b>19</b>
<b>1 Overview of fitting locations - air conditioning system</b>	<b>19</b>
1.1 Overview of fitting locations - components located in front section of passenger compartment	19
<b>2 Refrigerant circuit</b>	<b>31</b>
2.1 System overview - refrigerant circuit	31
2.2 Removing and installing high-pressure sender G65	35
2.3 Removing and installing expansion valve	39
2.4 Removing and installing condenser	45



2.5	Removing and installing receiver	47
2.6	Removing and installing desiccant bag or cartridge	49
2.7	Removing and installing evacuating and charging valves on low and high-pressure side	52
2.8	Removing and installing heat exchanger for high-voltage battery VX63	55
2.9	Removing and installing refrigerant shut-off valve for heater and air conditioner unit N541	58
2.10	Removing and installing refrigerant shut-off valve for high-voltage battery heat exchanger N542	60
<b>3</b>	<b>Air conditioner compressor</b>	<b>63</b>
3.1	Assembly overview - drive unit of air conditioner compressor	63
3.2	Removing air conditioning compressor from and installing on bracket	64
3.3	Removing and installing air conditioner compressor	66
3.4	Checking high-pressure safety valve on air conditioner compressor	73
3.5	Removing and installing pulley	74
<b>4</b>	<b>Front heater and air conditioning unit</b>	<b>77</b>
4.1	Assembly overview - heater and air conditioning unit	77
4.2	Assembly overview - evaporator housing	90
4.3	Removing and installing heater and air conditioning unit	92
4.4	Removing and installing evaporator	102
4.5	Dismantling and assembling evaporator housing	103
4.6	Removing and installing fresh air blower series resistor with overheating fuse N24	104
4.7	Removing and installing fresh air blower control unit J126	105
4.8	Removing and installing dust and pollen filter	106
4.9	Removing and installing fresh air blower V2	108
4.10	Checking auxiliary air heater element Z35	110
4.11	Removing and installing auxiliary air heater element Z35	112
4.12	Removing and installing heat exchanger	116
4.13	Removing and installing evaporator temperature sensor G308 or evaporator output temperature sender G263	126
4.14	Checking condensation drain	127
<b>5</b>	<b>Air duct</b>	<b>129</b>
5.1	Removing and installing centre vent	129
5.2	Removing and installing vent on driver or front passenger side	130
5.3	Removing and installing rear footwell air duct	130
5.4	Removing and installing air distribution housing	131
5.5	Removing and installing air intake housing	134
5.6	Removing and installing fresh air intake	135
5.7	Removing and installing driver side footwell vents	137
5.8	Removing and installing front passenger side footwell vents	139
5.9	Removing and installing forced ventilation for passenger compartment	140
5.10	Checking forced ventilation for passenger compartment	141
5.11	Removing and installing glove box cooling	141
<b>6</b>	<b>Coolant circuit</b>	<b>142</b>
6.1	Assembly overview - coolant circuit, Golf blue-e-motion	142
6.2	Removing and installing coolant pipes on heat exchanger	145
6.3	Removing and installing control unit for heater and air conditioning system components	147
6.4	Removing and installing coolant circulation pump before power and control electronics for electric drive V508	147
6.5	Removing and installing coolant circulation pump before high-voltage PTC heater V509	149
6.6	Removing and installing temperature sender before high-voltage heater (PTC) G785	150
6.7	Removing and installing temperature sender after heat exchanger for high-voltage battery G786	152
6.8	Removing and installing temperature sender after heat exchanger G787	154
6.9	Removing and installing temperature sender after electric drive motor G788	156



6.10	Removing and installing temperature sender after power and control electronics for electric drive system G789	158
6.11	Removing and installing high-voltage heater (PTC) Z115	160
6.12	Removing and installing heater coolant shut-off valve N279	162
6.13	Removing and installing shut-off valve for high-voltage battery coolant N540	164
<b>7</b>	<b>Operating and display unit</b>	<b>167</b>
7.1	Overview of operating and display unit	167
7.2	Removing and installing operating and display unit	177
<b>8</b>	<b>Control motors</b>	<b>179</b>
8.1	Overview of fitting locations – front control motors	179
8.2	Removing and installing temperature flap control motor V68	184
8.3	Removing and installing defroster flap control motor V107	186
8.4	Removing and installing air recirculation flap control motor V113	188
8.5	Removing and installing left temperature flap control motor V158	190
8.6	Removing and installing right temperature flap control motor V159	194
8.7	Removing and installing fresh air/air recirculation, air flow flap control motor V425	196
8.8	Removing and installing front air distribution flap control motor V426 with potentiometer for front air distribution flap control motor G642	198
8.9	Removing and installing air distribution flap control motor V428	199
8.10	Removing and installing fresh air/air recirculation, air flow flap actuator	199
<b>9</b>	<b>Other controlling and regulating components</b>	<b>200</b>
9.1	Removing and installing sunlight penetration photosensor G107 or sunlight penetration photosensor 2 G134	200
9.2	Removing and installing air quality sensor G238	201
9.3	Principle of operation of air quality sensor G238	202
9.4	Removing and installing ambient temperature sensor G17	204
9.5	Removing vent temperature sender G150	205
9.6	Removing and installing right vent temperature sender G151	205
9.7	Removing and installing centre vent temperature sender G191	205
9.8	Removing and installing footwell vent temperature sender G192	206
9.9	Removing and installing footwell vent temperature sender G261	206
9.10	Removing and installing right footwell vent temperature sender G262	207