



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 General notes</b> .....	<b>1</b>
1.1 Starting conditions for auxiliary/supplementary heater .....	1
1.2 Rules for cleanliness for working on the auxiliary heater and the fuel system .....	2
1.3 Notes for vehicles with a Start/Stop system .....	2
1.4 Identification plates .....	3
<b>2 Notes on safety</b> .....	<b>6</b>
2.1 Safety precautions for working on vehicles with auxiliary heater .....	6
2.2 Safety measures for when working on vehicles with a Start/Stop system .....	6
2.3 Safety precautions when working on the fuel system .....	7
<b>3 Repair notes</b> .....	<b>8</b>
3.1 Notes on general repairs on vehicles with auxiliary heaters .....	8
<b>82 - Auxiliary heating</b> .....	<b>9</b>
<b>1 Fittings location overview - auxiliary/supplementary heater</b> .....	<b>9</b>
1.1 Overview of fittings locations - auxiliary/supplementary heater, Golf 2004 ►, Golf 2009 ► .....	9
1.2 Overview of fitting location - auxiliary/supplementary heater, Golf Cabriolet 2012 ► .....	11
<b>2 Auxiliary/supplementary heater</b> .....	<b>13</b>
2.1 Fittings location overview - auxiliary/supplementary heater .....	13
2.2 Removing and installing auxiliary/supplementary heater .....	14
2.3 Removing and installing air intake silencer .....	17
2.4 Removing and installing circulation pump V55 .....	18
2.5 Removing and installing exhaust system .....	19
2.6 Removing and installing exhaust pipe for auxiliary heater .....	19
2.7 Removing and installing silencer with bracket .....	21
2.8 Removing and installing bracket for auxiliary heater .....	21
2.9 Removing and installing cover .....	21
2.10 Dismantling and assembling auxiliary heater Thermo Top V/fleece .....	22
2.11 Removing and installing glow plug with flame monitoring Q8 .....	23
2.12 Components inside auxiliary heater .....	24
<b>3 Coolant circuit with auxiliary/supplementary heater</b> .....	<b>28</b>
3.1 Coolant hose schematic diagram .....	28
3.2 Removing and installing heater coolant shut-off valve N279 .....	50
3.3 Bleeding coolant circuit of auxiliary heater .....	52
<b>4 Fuel supply</b> .....	<b>54</b>
4.1 Fittings location overview - fuel supply .....	54
4.2 Rules for cleanliness .....	56
4.3 Removing and installing metering pump V54 .....	56
4.4 Testing quantity of fuel delivered .....	57
<b>5 Regulation of auxiliary/supplementary heater</b> .....	<b>60</b>
5.1 Functional description .....	60
5.2 Supplementary heating mode .....	61
5.3 Auxiliary heater mode .....	61
5.4 Switching off auxiliary/supplementary heater .....	62
<b>6 Other controlling and regulating components</b> .....	<b>64</b>
6.1 Removing and installing remote control receiver for auxiliary coolant heater R149 .....	64
6.2 Removing and installing ambient temperature sensor G17 .....	66
6.3 Functional description of remote control for auxiliary/supplementary heater .....	67
<b>7 Electric engine preheater, 230 V (or 115 V, depending on country)</b> .....	<b>71</b>
7.1 Safety measures for working on vehicles with engine preheater .....	71
7.2 Rules for cleanliness when working on engine preheater .....	71



7.3	Assembly overview - engine preheater, 1.6 l MPI, 2.0 l FSI, 1.9 l TDI	71
7.4	Assembly overview - engine preheater, 2.0 l TDI Common Rail	73
7.5	Removing and installing connector for mains plug	73
7.6	Checking connector	75
7.7	Testing safety switch (optional)	76
7.8	Removing and installing engine preheater	76
7.9	Connecting engine preheater into cooling circuit	79