



## Contents

|   |           |
|---|-----------|
| <b>00 - Technical data</b> .....  | <b>1</b>  |
| <b>1 Identification of gearbox</b> .....  | <b>1</b>  |
| 1.1 Location on gearbox .....   | 1         |
| 1.2 Code letters, assembly allocation and capacities - Touran 2003 ▶ .....                      | 2         |
| 1.3 Identification codes, assembly allocation, capacities, Passat 2006 ▶ .....                  | 3         |
| 1.4 Identification codes, assembly allocation, capacities, Golf 2009 ▶ .....                    | 3         |
| 1.5 Identification codes, assembly allocation, capacities, Golf Plus 2009 ▶ .....               | 4         |
| <b>2 Overview - power transmission</b> .....  | <b>5</b>  |
| <b>3 Calculating overall gear ratio "i"</b> .....   | <b>7</b>  |
| <b>4 General repair instructions</b> .....  | <b>8</b>  |
| 4.1 Gearbox .....   | 8         |
| 4.2 Gaskets and seals .....   | 8         |
| 4.3 Sealant .....   | 8         |
| 4.4 Locking devices .....   | 9         |
| 4.5 Nuts and bolts .....  | 9         |
| 4.6 Bearings .....  | 9         |
| 4.7 Shims .....   | 9         |
| 4.8 Synchro-rings .....   | 10        |
| 4.9 Gear wheels .....   | 10        |
| 4.10 Synchromeshed gears .....  | 10        |
| 4.11 Clutch .....   | 10        |
| <b>5 Safety precautions for vehicles with a start-stop system</b> .....                         | <b>11</b> |
| <b>30 - Clutch</b> .....  | <b>12</b> |
| <b>1 Repairing clutch mechanism, Touran</b> .....   | <b>12</b> |
| 1.1 Overview .....  | 12        |
| 1.2 Assembly overview - pedal cluster with clutch pedal switch F36 to 05.03 .....               | 13        |
| 1.3 Removing and installing clutch pedal switch F36 .....                                       | 14        |
| 1.4 Removing and installing mounting bracket (all Tourans) .....                                | 15        |
| 1.5 Removing and installing master cylinder with mounting bracket removed (through 05.03) ..... | 23        |
| 1.6 Removing and installing over-centre spring with mounting bracket removed .....              | 25        |
| 1.7 Assembly overview - pedal cluster with clutch pedal sender G476 from 06.03 .....            | 26        |
| 1.8 Removing and installing over-centre spring with mounting bracket installed .....            | 28        |
| 1.9 Removing and installing clutch pedal with mounting bracket installed .....                  | 31        |
| 1.10 Removing and installing master cylinder with mounting bracket removed (from 06.03) ..      | 34        |
| 1.11 Removing and installing clutch position sender G476 (from 06. 03) .....                    | 36        |
| 1.12 Assembly overview - hydraulics (LHD) .....   | 38        |
| 1.13 Assembly overview - hydraulics (RHD) .....   | 41        |
| 1.14 Removing and installing slave cylinder .....   | 42        |
| <b>2 Repairing clutch mechanism, Passat, Golf and Golf Plus</b> .....                           | <b>45</b> |
| 2.1 Overview .....  | 45        |
| 2.2 Assembly overview - pedal cluster .....   | 46        |
| 2.3 Removing and installing over-centre spring, Golf 2009 ▶ LHD .....                           | 47        |
| 2.4 Removing and installing over-centre spring - Golf 2009 ▶ right-hand drive .....             | 52        |
| 2.5 Removing and installing over-centre spring, Golf Plus .....                                 | 57        |
| 2.6 Removing and installing over-centre spring, Passat .....                                    | 62        |
| 2.7 Removing and installing clutch pedal, Golf 2009 ▶ LHD .....                                 | 63        |
| 2.8 Removing and installing clutch pedal - Golf 2009 ▶ right-hand drive .....                   | 69        |
| 2.9 Removing and installing clutch pedal, Golf Plus .....                                       | 74        |
| 2.10 Removing and installing clutch pedal, Passat .....   | 80        |
| 2.11 Removing and installing mounting bracket, Golf 2009 ▶ LHD .....                            | 82        |



|           |   |            |
|-----------|---|------------|
| 2.12      | Removing and installing mounting bracket, Golf 2009 ► RHD and Golf Plus RHD   | 87         |
| 2.13      | Removing and installing mounting bracket, Golf Plus left-hand drive           | 93         |
| 2.14      | Removing and installing mounting bracket, Passat                              | 98         |
| 2.15      | Removing and installing master cylinder                                       | 102        |
| 2.16      | Removing and installing clutch position sender G476                           | 103        |
| 2.17      | Assembly overview - hydraulics (LHD)  | 106        |
| 2.18      | Assembly overview - hydraulics (RHD)  | 108        |
| 2.19      | Removing and installing slave cylinder  | 109        |
| <b>3</b>  | <b>Bleeding clutch system</b>   | <b>112</b> |
| <b>4</b>  | <b>Repairing clutch release mechanism</b>                                     | <b>114</b> |
| <b>5</b>  | <b>Repairing clutch</b>   | <b>116</b> |
| <b>34</b> | <b>Controls, housing</b>  | <b>119</b> |
| <b>1</b>  | <b>Repairing selector mechanism, Touran</b>                                   | <b>119</b> |
| 1.1       | Installation position of selector mechanism                                   | 119        |
| 1.2       | Removing and installing gear knob and cover                                   | 120        |
| 1.3       | Removing and installing gaiter with gear knob                                 | 121        |
| 1.4       | Repairing gear lever and selector housing (through 10.06)                     | 123        |
| 1.5       | Repairing gear lever and selector housing (from 11.06)                        | 125        |
| 1.6       | Assembly overview - removing and installing selector cables                   | 130        |
| 1.7       | Removing and installing selector mechanism                                    | 134        |
| <b>2</b>  | <b>Repairing selector mechanism, Passat, Golf and Golf Plus</b>               | <b>138</b> |
| 2.1       | Installation position of selector mechanism                                   | 138        |
| 2.2       | Removing and installing gear knob and cover                                   | 139        |
| 2.3       | Removing and installing gaiter with gear knob and noise insulation, Golf      | 140        |
| 2.4       | Removing and installing gaiter with gear knob and noise insulation, Golf Plus | 142        |
| 2.5       | Removing and installing gaiter with gear knob, Passat                         | 144        |
| 2.6       | Repairing gear lever and selector housing (through 10.06)                     | 145        |
| 2.7       | Repairing gear lever and selector housing (from 11.06)                        | 148        |
| 2.8       | Attaching base plate  | 153        |
| 2.9       | Assembly overview - removing and installing selector cables                   | 153        |
| 2.10      | Removing and installing selector mechanism                                    | 156        |
| <b>3</b>  | <b>Adjusting selector mechanism</b>   | <b>161</b> |
| 3.1       | Checking selector mechanism   | 163        |
| <b>4</b>  |   | <b>164</b> |
| <b>5</b>  |   | <b>167</b> |
| 5.1       | Removing gearbox  | 169        |
| 5.2       | Installing gearbox  | 174        |
| <b>6</b>  | <b>Removing and installing gearbox, Passat</b>                                | <b>182</b> |
| 6.1       | Removing gearbox  | 183        |
| 6.2       | Installing gearbox  | 187        |
| <b>7</b>  | <b>Removing and installing gearbox, Golf</b>                                  | <b>194</b> |
| 7.1       | Removing gearbox  | 197        |
| 7.2       | Installing gearbox  | 202        |
| <b>8</b>  | <b>Removing and installing gearbox, Golf Plus</b>                             | <b>209</b> |
| 8.1       | Removing gearbox  | 211        |
| 8.2       | Installing gearbox  | 216        |
| <b>9</b>  | <b>Transporting gearbox</b>   | <b>223</b> |
| <b>10</b> | <b>Securing to engine and gearbox support</b>                                 | <b>224</b> |
| <b>11</b> | <b>Checking gearbox oil</b>   | <b>226</b> |
| <b>12</b> | <b>Dismantling and assembling gearbox</b>                                     | <b>228</b> |
| 12.1      | Overview - gearbox  | 228        |
| 12.2      | Assembly overview   | 229        |



|           |  |            |
|-----------|--|------------|
| 12.3      | Removing and installing cover for gearbox housing and 5th gear   | 230        |
| 12.4      | Removing and installing clutch housing   | 231        |
| 12.5      | Removing and installing input shaft, output shaft, differential, selector mechanism and selector forks | 232        |
| 12.6      | Dismantling and assembling procedure   | 233        |
| <b>13</b> | <b>Repairing gearbox housing and clutch housing</b>  | <b>244</b> |
| <b>14</b> | <b>Repairing selector unit</b>   | <b>247</b> |
| <b>15</b> | <b>Dismantling and assembling selector forks</b>   | <b>250</b> |
| <b>35</b> | <b>Gears, shafts</b>   | <b>255</b> |
| <b>1</b>  | <b>Input shaft</b>   | <b>255</b> |
| 1.1       | Dismantling and assembling input shaft   | 255        |
| <b>2</b>  | <b>Output shaft</b>  | <b>266</b> |
| 2.1       | Dismantling and assembling output shaft  | 266        |
| <b>39</b> | <b>Final drive - differential</b>  | <b>274</b> |
| <b>1</b>  | <b>Renewing flange shaft oil seals with gearbox installed, Touran</b>                                  | <b>274</b> |
| 1.1       | Renewing oil seal for left flange shaft  | 274        |
| 1.2       | Renewing seal for right flange shaft   | 276        |
| <b>2</b>  | <b>Renewing flange shaft oil seals with gearbox installed, Passat, Golf and Golf Plus</b>              | <b>279</b> |
| 2.1       | Renewing oil seal for left flange shaft  | 279        |
| 2.2       | Renewing seal for right flange shaft   | 280        |
| <b>3</b>  | <b>Differential</b>  | <b>283</b> |
| 3.1       | Dismantling and assembling differential  | 283        |
| 3.2       | Adjusting differential   | 290        |