



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Engine number/engine data</b>	<b>1</b>
<b>2 Safety precautions</b>	<b>5</b>
2.1 Safety regulations for working on fuel supply	5
2.2 Releasing high pressure in fuel system	6
2.3 Safety precautions when using testers and measuring instruments during a road test	7
2.4 Safety precautions when working on the cooling system	7
2.5 Safety precautions when working on ignition system	8
<b>3 General repair instructions</b>	<b>9</b>
3.1 Rules for cleanliness	9
3.2 Foreign objects in engine	9
3.3 Contact corrosion	9
3.4 Routing and attachment of lines	9
3.5 Fitting radiator and condensers	10
<b>10 - Removing and installing engine</b>	<b>11</b>
<b>1 Removing and installing engine</b>	<b>11</b>
1.1 Removing engine	11
1.2 Installing engine	34
<b>2 Assembly mountings</b>	<b>42</b>
2.1 Assembly overview - assembly mountings	42
<b>13 - Crankshaft group</b>	<b>45</b>
<b>1 Cylinder block (pulley end)</b>	<b>45</b>
1.1 Assembly overview - poly V-belt drive	45
1.2 Removing and installing poly-V belt	47
1.3 Removing and installing crankshaft pulley	48
1.4 Renewing crankshaft oil seal - belt pulley end	52
<b>2 Cylinder block, gearbox end</b>	<b>55</b>
2.1 Assembly overview - cylinder block, gearbox end	55
2.2 Removing and installing flywheel	57
2.3 Removing and installing crankshaft sealing flange on gearbox side	58
2.4 Removing and installing bracket for ancillaries	65
<b>3 Crankshaft</b>	<b>70</b>
3.1 Renewing needle bearing in crankshaft	70
3.2 Measuring axial clearance of crankshaft	72
3.3 Crankshaft dimensions	73
<b>4 Pistons and conrods</b>	<b>74</b>
4.1 Assembly overview - pistons and conrods	74
4.2 Checking pistons and cylinder bores	75
4.3 Removing and installing oil spray jets	76
4.4 Separating new conrod	77
<b>15 - Cylinder head, valve gear</b>	<b>79</b>
<b>1 Cylinder head</b>	<b>79</b>
1.1 Assembly overview - cylinder head	79
1.2 Removing and installing cylinder head cover and camshaft	82
1.3 Removing and installing cylinder head	96
1.4 Checking compression	102
<b>2 Valve gear</b>	<b>104</b>
2.1 Assembly overview - valve gear	104
2.2 Measuring axial play of camshaft	106



2.3	Removing and installing valve stem seals	107
<b>3</b>	<b>Inlet and exhaust valves</b>	<b>109</b>
3.1	Checking valve guides	109
3.2	Checking valves	109
3.3	Valve dimensions	111
3.4	Reworking valve seats	111
<b>4</b>	<b>Cover for timing chain</b>	<b>112</b>
4.1	Removing and installing top valve timing housing	112
4.2	Removing and installing bottom valve timing housing	115
<b>5</b>	<b>Chain drive</b>	<b>120</b>
5.1	Assembly overview - timing chain	120
5.2	Checking valve timing	125
5.3	Adjusting valve timing	127
5.4	Removing and installing timing chain	136
5.5	Removing and installing timing chain and chain drive for oil pump	145
<b>17</b>	<b>- Lubrication</b>	<b>149</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>149</b>
1.1	Assembly overview - sump/oil pump	149
1.2	Engine oil:	153
1.3	Removing and installing sump	153
1.4	Removing and installing oil pump	158
<b>2</b>	<b>Oil filter, oil pressure switch</b>	<b>160</b>
2.1	Assembly overview - oil filter	160
2.2	Checking oil pressure and oil pressure switch	161
2.3	Removing and installing non-return valve	162
<b>3</b>	<b>Engine oil cooler</b>	<b>164</b>
3.1	Removing and installing engine oil cooler	164
<b>4</b>	<b>Crankcase ventilation</b>	<b>165</b>
4.1	Assembly overview - crankcase breather system	165
4.2	Removing and installing oil separator	166
<b>19</b>	<b>- Cooling</b>	<b>169</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>169</b>
1.1	Coolant hose connection diagram	169
1.2	Draining and adding coolant	171
1.3	Checking cooling system for leaks	175
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>178</b>
2.1	Assembly overview - thermostat	178
2.2	Removing and installing coolant pump	179
2.3	Removing and installing coolant circulation pump V50	180
<b>3</b>	<b>Radiator, radiator fan</b>	<b>183</b>
3.1	Assembly overview - radiator/radiator fan	183
3.2	Removing and installing radiator	187
3.3	Removing and installing radiator fan V7	194
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>197</b>
<b>1</b>	<b>Exhaust turbocharger</b>	<b>197</b>
1.1	Assembly overview - turbocharger	197
1.2	Removing and installing turbocharger	199
1.3	Removing and installing charge pressure positioner V465	205
<b>2</b>	<b>Charge air system</b>	<b>208</b>
2.1	Assembly overview - charge air system	208
2.2	Removing and installing charge air cooler (intake manifold)	212



<b>24 - Mixture preparation - injection</b> .....	<b>214</b>
<b>1 Injection system</b> .....	<b>214</b>
<b>2 Air filter</b> .....	<b>215</b>
2.1 Assembly overview - air filter .....	215
2.2 Removing and installing air filter housing .....	217
<b>3 Intake manifold</b> .....	<b>219</b>
3.1 Assembly overview - intake manifold .....	219
3.2 Removing and installing intake manifold .....	223
3.3 Removing and installing throttle valve module J338 .....	224
3.4 Cleaning throttle valve module J338 .....	226
<b>4 Injectors</b> .....	<b>228</b>
4.1 Removing and installing injectors .....	228
4.2 Renewing seals on injectors .....	230
4.3 Cleaning injectors .....	234
<b>5 High-pressure pump</b> .....	<b>236</b>
5.1 Assembly overview - high-pressure pump .....	236
5.2 Removing and installing high-pressure pump .....	237
<b>6 Senders and sensors</b> .....	<b>241</b>
6.1 Checking fuel pressure sender G247 .....	241
<b>7 Engine control unit J623</b> .....	<b>245</b>
7.1 Removing and installing engine (motor) control unit J623 .....	245
7.2 Removing and installing engine (motor) control unit J623 with protective housing .....	248
<b>26 - Exhaust system</b> .....	<b>255</b>
<b>1 Exhaust pipes and silencers</b> .....	<b>255</b>
1.1 Assembly overview - silencers .....	255
1.2 Separating exhaust pipes from silencers .....	257
1.3 Installation position of clamp .....	259
<b>2 Exhaust gas cleaning</b> .....	<b>261</b>
2.1 Assembly overview - emission control .....	261
2.2 Removing and installing catalytic converter (Polo) .....	265
<b>28 - Ignition system</b> .....	<b>267</b>
<b>1 Ignition system</b> .....	<b>267</b>
1.1 Assembly overview - ignition system .....	267
1.2 Removing and installing engine speed sender G28 .....	269
1.3 Test data, spark plugs .....	269