



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Technical data | 1 |
| 1.1 Engine number | 1 |
| 1.2 Engine data | 1 |
| 10 - Removing and installing engine | 3 |
| 1 Removing and installing engine | 3 |
| 1.1 Removing | 4 |
| 1.2 Installing | 8 |
| 1.3 Specified torques | 10 |
| 1.4 Additional information and assembly work for vehicles with air conditioner | 11 |
| 13 - Crankshaft group | 12 |
| 1 Dismantling and assembling engine | 12 |
| 1.1 Part I: assembly overview - toothed belt drive | 13 |
| 1.2 Assembly overview - part II, cylinder block | 16 |
| 1.3 Removing and installing poly V-belt | 16 |
| 2 Cylinder block, sealing flange | 18 |
| 2.1 Assembly overview - aluminium cylinder block | 18 |
| 2.2 Renewing crankshaft oil seal - pulley end | 20 |
| 2.3 Poly V-belt pulley securing bolt tightening procedure | 21 |
| 2.4 Renewing crankshaft sealing flange - flywheel end | 22 |
| 2.5 Crankshaft dimensions | 29 |
| 3 Pistons and conrods | 31 |
| 3.1 Assembly overview | 31 |
| 15 - Cylinder head, valve gear | 35 |
| 1 Cylinder head | 35 |
| 1.1 Assembly overview | 35 |
| 1.2 Checking valve timing | 37 |
| 1.3 Removing, installing and tensioning toothed belt | 38 |
| 1.4 Checking semi-automatic toothed belt tensioning roller | 45 |
| 1.5 Removing and installing camshaft housing | 47 |
| 1.6 Removing and installing cylinder head | 51 |
| 1.7 Checking compression | 57 |
| 2 Valve gear | 59 |
| 2.1 Assembly overview | 59 |
| 2.2 Reworking valve seats | 62 |
| 2.3 Renewing camshaft oil seals | 63 |
| 2.4 Checking valve guides | 66 |
| 2.5 Renewing valve stem seals | 67 |
| 17 - Lubrication | 69 |
| 1 Parts of lubrication system | 69 |
| 1.1 Engine oil | 69 |
| 1.2 Assembly overview | 69 |
| 1.3 Assembly overview - oil filler neck, engine code BCA | 72 |
| 1.4 Removing and installing oil filler neck, engine code BCA | 72 |
| 1.5 Removing and installing oil sump | 73 |
| 1.6 Removing and installing oil pump | 75 |
| 1.7 Checking oil pressure and oil pressure switch | 77 |
| 19 - Cooling | 80 |



| | | |
|-----------|--|------------|
| 1 | Parts of cooling system | 80 |
| 1.1 | Assembly overview - parts of cooling system (radiator with two fans), body side | 80 |
| 1.2 | Assembly overview - parts of cooling system (radiator with one fan), body side | 83 |
| 1.3 | Assembly overview - parts of cooling system - thermostat side | 84 |
| 1.4 | Assembly overview - parts of cooling system - coolant pump side | 85 |
| 1.5 | Coolant hose schematic diagram | 86 |
| 1.6 | Draining and filling coolant | 87 |
| 1.7 | Removing and installing radiator fan V7 and radiator fan 2 V177 | 91 |
| 1.8 | Removing and installing radiator | 91 |
| 1.9 | Removing and installing coolant pump | 93 |
| 1.10 | Checking cooling system for leaks | 95 |
| 20 | Fuel supply system | 98 |
| 1 | Parts of fuel supply system | 98 |
| 1.1 | Assembly overview - dismantling and assembling fuel tank with add-on parts and fuel filter | 98 |
| 1.2 | Safety precautions when working on fuel supply system | 101 |
| 1.3 | Rules for cleanliness | 101 |
| 1.4 | Emptying fuel tank | 101 |
| 1.5 | Removing and installing fuel delivery unit | 104 |
| 1.6 | Removing and installing fuel gauge sender G | 106 |
| 1.7 | Removing and installing fuel tank | 106 |
| 1.8 | Assembly overview - fuel filter with add-on parts (engine code BCA) | 108 |
| 1.9 | Removing and installing fuel filter | 109 |
| 1.10 | Crash fuel shut-off | 109 |
| 1.11 | Checking fuel pump (vehicles ► model year 2006) | 110 |
| 1.12 | Checking fuel pump (vehicles model year 2006 ►) | 117 |
| 1.13 | Bleeding fuel system | 124 |
| 2 | Electronic power control (EPC) | 128 |
| 2.1 | Assembly overview | 128 |
| 2.2 | Removing and installing accelerator module | 128 |
| 3 | Activated charcoal filter system | 130 |
| 3.1 | Assembly overview - activated charcoal filter system | 130 |
| 3.2 | Checking fuel tank breather | 130 |
| 24 | Mixture preparation - injection | 132 |
| 1 | Injection system | 132 |
| 1.1 | General notes on injection | 132 |
| 1.2 | Safety precautions | 133 |
| 1.3 | Rules for cleanliness | 134 |
| 1.4 | Assembly overview - intake manifold (engine code BCA) | 134 |
| 1.5 | Assembly overview - intake manifold (engine codes BUD and CGGA) | 136 |
| 1.6 | Assembly overview - fuel rail with injectors | 137 |
| 1.7 | Assembly overview - air filter housing (engine code BCA) | 137 |
| 1.8 | Assembly overview - air filter housing (engine codes BUD and CGGA) | 139 |
| 1.9 | Removing and installing air filter housing (engine codes BUD and CGGA) | 140 |
| 1.10 | Cleaning throttle valve module J338 | 141 |
| 1.11 | Removing and installing injectors | 142 |
| 2 | Checking components | 144 |
| 2.1 | Checking intake air preheater (only engine codes BCA) | 144 |
| 2.2 | Checking injectors for leaks and quantity injected (vehicles ► model year 2006) | 144 |
| 2.3 | Checking injectors for leaks and quantity injected (vehicles model year 2006 ►) | 147 |
| 2.4 | Checking fuel pressure regulator and holding pressure | 150 |
| 3 | Engine control unit J623 | 153 |
| 3.1 | Removing and installing engine control unit J623 (Golf model year 2004 ► 2008) | 153 |



| | | |
|-----------|---|------------|
| 3.2 | Removing and installing anti-theft engine control unit J623 (Golf model year 2004 ▶ 2008) | 154 |
| 3.3 | Removing and installing engine control unit J623 (Golf 2009 ▶) | 157 |
| 3.4 | Removing and installing anti-theft engine control unit J623 (Golf 2009 ▶) | 158 |
| 3.5 | Removing and installing engine control unit J623 (Golf Plus) | 160 |
| 3.6 | Removing and installing anti-theft engine control unit J623 (Golf Plus) | 162 |
| 26 | - Exhaust system | 165 |
| 1 | Parts of the exhaust system | 165 |
| 1.1 | Assembly overview - catalytic converters and add-on parts (engine code BCA) | 165 |
| 1.2 | Assembly overview - catalytic converters and add-on parts (engine codes BUD and CGGA) | 167 |
| 1.3 | Assembly overview - silencers with mountings | 168 |
| 1.4 | Separating front and rear silencers | 169 |
| 2 | Exhaust gas recirculation system | 171 |
| 2.1 | Assembly overview - exhaust gas recirculation system | 171 |
| 28 | - Ignition system | 172 |
| 1 | Ignition system | 172 |
| 1.1 | General notes on ignition system | 172 |
| 1.2 | Assembly overview - ignition system | 172 |
| 1.3 | Removing and installing ignition coils with output stage | 173 |
| 1.4 | Safety precautions | 175 |
| 1.5 | Test data, spark plugs | 175 |