



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
01 - Self-diagnosis	3
1 Reading fault memory for LPG system (Golf and Golf Plus ▶ 2010)	3
1.1 Preparation for reading fault memory	3
1.2 Reading fault memory	3
1.3 Erasing fault memory	4
2 Reading fault memory for LPG system (Golf and Golf Plus 2010 ▶)	5
2.1 Preparation for reading fault memory	5
2.2 Reading fault memory	5
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing engine	8
1.2 Installing engine	12
13 - Crankshaft group	15
1 Dismantling and assembling engine	15
1.1 Assembly overview	15
1.2 Removing and installing poly-V belt	20
2 Removing and installing sealing flanges and flywheel or drive plate	22
2.1 Assembly overview - sealing flange	22
2.2 Renewing crankshaft oil seal (belt pulley end)	23
2.3 Removing and installing sealing flange (belt pulley end)	25
2.4 Removing and installing crankshaft sealing flange (flywheel end)	28
2.5 Removing and installing flywheel	32
3 Crankshaft	33
3.1 Assembly overview - crankshaft	33
3.2 Crankshaft dimensions	35
4 Dismantling and assembling pistons and conrods	36
4.1 Assembly overview - pistons and conrods	36
4.2 Checking pistons, piston rings and cylinder bores	38
4.3 Piston and cylinder dimensions	39
15 - Cylinder head, valve gear	40
1 Cylinder head	40
1.1 Assembly overview - cylinder head	40
1.2 Removing and installing cylinder head	43
1.3 Removing, installing and tensioning toothed belt	47
1.4 Checking semi-automatic toothed belt tensioner	54
1.5 Compression test	54
2 Repairing valve gear	57
2.1 Assembly overview - valve gear	57
2.2 Valve dimensions	59
2.3 Reworking valve seats	59
2.4 Checking valve guides	60
2.5 Renewing camshaft oil seal	61
2.6 Removing and installing camshaft	64
2.7 Renewing valve stem seals	69
2.8 Checking supporting elements with hydraulic clearance compensation	72



17 - Lubrication	73
1 Parts of lubrication system	73
1.1 Engine oil:	73
1.2 Assembly overview - parts of lubrication system	74
1.3 Removing and installing oil sump	77
1.4 Removing and installing oil pump	78
1.5 Checking oil pressure and oil pressure switch	79
19 - Cooling	81
1 Removing and installing parts of cooling system	81
1.1 Assembly overview - parts of cooling system, engine side	81
1.2 Assembly overview - parts of cooling system, body side (radiator with two radiator fans)	83
1.3 Assembly overview - parts of cooling system, body side (radiator with one radiator fan)	84
1.4 Coolant hose connection diagram	85
1.5 Draining and adding coolant	86
1.6 Removing and installing coolant pump	91
1.7 Removing and installing thermostat	93
1.8 Removing and installing radiator fan V7 and radiator fan 2 V177	94
1.9 Removing and installing radiator	96
1.10 Checking cooling system for leaks	98
20 - Fuel supply system	101
1 Fuel tank (petrol)	101
1.1 Safety regulations for working on fuel supply	101
1.2 Rules for cleanliness	101
1.3 Assembly overview - fuel tank	101
1.4 Emptying fuel tank	104
1.5 Removing and installing fuel tank	108
2 Fuel tank (LPG)	111
2.1 Safety regulations for working on fuel supply	111
2.2 Rules for cleanliness	111
2.3 Assembly overview - emptying fuel tank (LPG)	111
2.4 Emptying gas line	116
2.5 Assembly overview - fuel tank (LPG)	122
3 Repairing fuel and LPG supply systems	127
3.1 Safety precautions when working on the fuel and LPG supply system	127
3.2 Rules for cleanliness	127
3.3 Removing and installing fuel delivery unit	128
3.4 Removing and installing fuel gauge sender G	131
3.5 Assembly overview - fuel filter with attachments	132
3.6 Removing and installing fuel filter	133
3.7 Renewing gas filter	134
3.8 Checking fuel pump	139
3.9 Bleeding fuel system	148
4 Electronic power control (EPC)	151
4.1 Function of the electronic throttle	151
4.2 Assembly overview - accelerator module	151
4.3 Removing and installing accelerator pedal module	152
5 Activated charcoal filter system	155
5.1 Function	155
5.2 Assembly overview - activated charcoal filter system	155
5.3 Checking fuel tank breather	156
24 - Mixture preparation - injection	158



1	Injection system	158
1.1	General notes on injection	158
1.2	Safety precautions	159
1.3	Rules for cleanliness	159
1.4	Technical data	160
1.5	Assembly overview - intake manifold with attachments	160
1.6	Assembly overview - fuel rail with injectors	162
1.7	Assembly overview - air filter with attachments	163
1.8	Removing and installing lower part of intake manifold	163
1.9	Fuel rail, removing and installing gas rail	165
1.10	Removing and installing complete intake manifold	166
1.11	Removing and installing vaporiser on vehicles which can be operated with liquid gas	170
1.12	Removing and installing injectors	172
1.13	Removing and installing gas injector	173
2	Checking components	174
2.1	Checking injectors for leaks and quantity injected	174
2.2	Checking fuel pressure regulator and holding pressure	178
2.3	Checking intake manifold change-over	180
3	Engine control unit J623 Golf ▶ 2009	183
3.1	Removing and installing engine control unit	183
3.2	Removing and installing anti-theft engine control unit	184
4	Engine control unit J623 Golf Plus	188
4.1	Removing and installing engine control unit	188
4.2	Removing and installing anti-theft engine control unit	189
26	- Exhaust system	191
1	Removing and installing parts of exhaust system	191
1.1	Assembly overview - exhaust system	191
1.2	Separating centre and rear silencers	194
1.3	Removing and installing front exhaust pipe with catalytic converter	195
1.4	Removing and installing exhaust manifold	196
1.5	Aligning exhaust system free of stress	197
1.6	Removing and installing Lambda probe G39	198
1.7	Removing and installing Lambda probe after catalytic converter G130	199
2	Secondary air system	201
2.1	Function	201
2.2	Assembly overview - secondary air system	201
2.3	Checking combination valve	202
28	- Ignition system	204
1	Repairing ignition	204
1.1	General notes on ignition system	204
1.2	Safety precautions	204
1.3	Assembly overview - ignition system	205
1.4	Test data, spark plugs	206