



Contents

00 - Technical data	1
1 Engine number, engine data	1
2 Safety precautions	2
2.1 Safety precautions when working on fuel supply system	2
2.2 Safety precautions when working on ignition system	2
2.3 Releasing pressure in high-pressure area	3
3 General repair notes	5
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
10 - Removing and installing engine	6
1 Removing and installing engine	6
1.1 Removing engine	7
1.2 Securing engine to assembly stand	12
1.3 Installing engine	14
2	17
3 Engine cover	18
13 - Crankshaft group	19
1 Cylinder block (pulley end)	19
1.1 Assembly overview - cylinder block, belt pulley end	19
1.2 Assembly overview - poly V-belt drive	22
1.3 Removing and installing poly V-belt	23
1.4 Removing and installing tensioning element for poly V-belt	24
1.5 Removing and installing bracket for ancillaries	24
1.6 Renewing crankshaft oil seal - belt pulley end	26
1.7 Removing and installing sealing flange on pulley end	28
2 Cylinder block, gearbox end	32
2.1 Assembly overview - cylinder block, gearbox end	32
2.2 Removing and installing sealing flange on gearbox side	34
2.3 Removing and installing flywheel	35
2.4 Removing and installing drive plate	36
3 Crankshaft	38
3.1 Assembly overview - crankshaft	38
3.2 Renewing needle bearing in crankshaft	40
3.3 Crankshaft dimensions	41
3.4 Allocation of main bearings	41
4 Pistons and conrods	43
4.1 Assembly overview - pistons and conrods	43
4.2 Separating new conrod	44
4.3 Removing and installing pistons	45
4.4 Checking piston and cylinder bore	46
15 - Cylinder head, valve gear	49
1 Cylinder head	49
1.1 Assembly overview - cylinder head	49
1.2 Removing and installing cylinder head cover	51
1.3 Removing and installing cylinder head	53
1.4 Checking compression	58
2 Toothed belt drive	60
2.1 Removing and installing toothed belt	60



3	Valve gear	70
3.1	Assembly overview - valve gear	70
3.2	Removing and installing valve stem seals	72
3.3	Removing and installing camshaft adjuster	77
3.4	Removing and installing inlet camshaft control valve 1 N205	80
3.5	Removing and installing camshaft oil seal	82
3.6	Removing and installing camshafts	85
3.7	Inlet and exhaust valves	88
17	- Lubrication	90
1	Sump, oil pump	90
1.1	Engine oil	90
1.2	Assembly overview - sump	90
1.3	Removing and installing oil level and oil temperature sender G266	92
1.4	Removing and installing sump	92
2	Oil filter, oil pressure switch	96
2.1	Assembly overview - oil filter housing, oil pressure switch	96
2.2	Removing and installing oil filter housing	98
2.3	Checking oil pressure and oil pressure switch	99
2.4	Removing and installing oil pressure switch F1	100
3	Balancer shaft module	102
3.1	Assembly overview - balancer shaft module	102
3.2	Removing and installing balance shaft module	103
19	- Cooling	108
1	Cooling system, coolant	108
1.1	Coolant hose schematic diagram	108
1.2	Draining and filling coolant	110
1.3	Checking cooling system for leaks	114
2	Coolant pump, regulation of cooling system	117
2.1	Assembly overview - coolant pump, thermostat	117
2.2	Removing and installing coolant pump	119
2.3	Removing and installing thermostat	120
2.4	Removing and installing coolant temperature sender	121
2.5	Electric coolant pump	122
3	Coolant pipes	125
3.1	Assembly overview - coolant pipes	125
3.2	Removing and installing coolant pipes	126
4	Coolers, radiator, radiator fan	129
4.1	Assembly overview - radiator, radiator fan	129
4.2	Removing and installing cowl together with radiator fan V7 and radiator fan 2 V177	130
4.3	Removing and installing radiator	131
21	- Turbocharging/supercharging	133
1	Turbocharger	133
1.1	Assembly overview - turbocharger	133
1.2	Removing and installing turbocharger	138
1.3	Checking vacuum unit for turbocharger	146
2	Charge air system	148
2.1	Fitting hose connections with plug-in connectors	148
2.2	Assembly overview - charge air system	149
2.3	Schematic overview - charge air system	151
2.4	Removing and installing charge air cooler	151
2.5	Removing and installing charge pressure sender G31	153
2.6	Checking charge air system for leaks	153



24 - Mixture preparation - injection	156
1 Injection system	156
1.1 Vacuum system	156
1.2 Overview of fitting locations	157
2 Injectors	159
2.1 Removing and installing injectors	159
2.2 Renewing seals on injectors	161
2.3 Cleaning injectors	163
3 High-pressure pump	165
3.1 Assembly overview - high-pressure pump	165
3.2 Removing and installing high-pressure pump	166
3.3 Assembly overview - fuel pipes and fuel rail	167
4 Senders and sensors	170
4.1 Actuator for structure-borne sound R214 and control unit for structure-borne sound J869	170
4.2 Removing and installing fuel pressure sender G247	172
4.3 Checking fuel pressure sender G247	173
4.4 Removing and installing air mass meter G70	177
5 Intake manifold	178
5.1 Assembly overview - intake manifold	178
5.2 Removing and installing intake manifold with fuel rail	179
5.3 Removing and installing intake manifold flap motor V157 and intake manifold flap potentiometer G336	182
5.4 Removing and installing throttle valve module J338	185
5.5 Cleaning throttle valve module J338	186
6 Air filter	188
6.1 Assembly overview - air filter	188
6.2 Removing and installing air filter, engine cover	188
6.3 Removing and installing air filter element	190
7 Engine control unit J623	192
7.1 Removing and installing engine control unit	192
7.2 Removing and installing engine control unit with protective housing	193
26 - Exhaust system	197
1 Exhaust pipes, silencers	197
1.1 Assembly overview - silencers	197
1.2 Removing and installing front exhaust pipe	199
1.3 Separating centre and rear silencers	201
1.4 Aligning exhaust system free of stress	202
1.5 Checking exhaust system for leaks	204
28 - Ignition system	205
1 Ignition system	205
1.1 Assembly overview - ignition system	205
1.2 Removing and installing ignition coils with output stage	206
1.3 Test data, spark plugs	208