



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Engine number</b> .....	<b>1</b>
<b>2 Engine data</b> .....	<b>2</b>
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing engine .....	4
1.2 Securing engine to assembly stand .....	9
1.3 Installing engine .....	11
1.4 Assembly mountings .....	13
<b>13 - Crankshaft group</b> .....	<b>15</b>
<b>1 Dismantling and assembling engine</b> .....	<b>15</b>
1.1 Assembly overview .....	15
1.2 Removing and installing poly-V belt .....	20
1.3 Removing and installing tensioner for poly V-belt .....	22
<b>2 Sealing flange and flywheel or drive plate</b> .....	<b>23</b>
2.1 Assembly overview - sealing flange .....	23
2.2 Renewing crankshaft oil seal (belt pulley end) .....	24
2.3 Removing and installing sealing flange (belt pulley end) .....	26
2.4 Removing and installing sealing flange on gearbox side .....	29
2.5 Removing and installing flywheel .....	32
2.6 Removing and installing drive plate .....	33
<b>3 Crankshaft</b> .....	<b>36</b>
3.1 Assembly overview - crankshaft .....	36
3.2 Pulling needle bearing out of and driving into crankshaft .....	38
3.3 Crankshaft dimensions .....	39
3.4 Identification of crankshaft upper bearing .....	40
<b>4 Pistons and conrods</b> .....	<b>41</b>
4.1 Assembly overview - pistons and conrods .....	41
4.2 Checking pistons, piston rings and cylinder bores .....	43
4.3 Piston and cylinder dimensions .....	45
<b>15 - Cylinder head, valve gear</b> .....	<b>46</b>
<b>1 Cylinder head</b> .....	<b>46</b>
1.1 Assembly overview - cylinder head .....	46
1.2 Removing and installing cylinder head cover .....	48
1.3 Removing and installing cylinder head .....	50
1.4 Removing and installing toothed belt .....	55
1.5 Checking compression .....	73
<b>2 Valve gear</b> .....	<b>75</b>
2.1 Assembly overview - valve gear .....	75
2.2 Valve dimensions .....	77
2.3 Checking valve guides .....	77
2.4 Renewing valve stem seals .....	78
2.5 Renewing exhaust camshaft seal .....	83
2.6 Removing and installing camshaft adjuster .....	85
2.7 Removing and installing camshaft control valve 1 N205 .....	89
2.8 Removing and installing camshafts .....	91
<b>17 - Lubrication</b> .....	<b>94</b>
<b>1 Parts of lubrication system</b> .....	<b>94</b>



1.1	Engine oil: .....	94
1.2	Assembly overview - parts of lubrication system .....	94
1.3	Drain oiling filter housing .....	99
1.4	Removing and installing sump .....	100
1.5	Removing and installing oil pump with balance shaft gear assembly .....	103
1.6	Removing and installing oil filter bracket .....	108
1.7	Removing and installing oil pressure switch F1 .....	109
1.8	Checking oil pressure and oil pressure switch (single pin oil pressure switch) .....	110
1.9	Checking oil pressure and oil pressure switch (2-pin oil pressure switch) .....	112
<b>19</b>	<b>- Cooling .....</b>	<b>115</b>
<b>1</b>	<b>Parts of cooling system .....</b>	<b>115</b>
1.1	Assembly overview - parts of cooling system, engine side .....	115
1.2	Assembly overview - coolant circulation pump V50 (engine code BYD with bypass thermostat) .....	117
1.3	Assembly overview - coolant circulation pump V50 (engine code CDLA, CDLC, CDLF, CRZA) .....	118
1.4	Assembly overview - parts of cooling system, body side .....	118
1.5	Coolant hose connection diagram .....	120
1.6	Bypass thermostat (engine code BYD) .....	121
1.7	Draining and adding coolant .....	122
1.8	Assembly overview - coolant pump, thermostat .....	126
1.9	Removing and installing coolant pump .....	127
1.10	Removing and installing coolant temperature sender .....	129
1.11	Removing and installing coolant pipes .....	131
1.12	Removing and installing coolant thermostat housing with thermostat .....	133
1.13	Removing and installing fan support with radiator fan V7 and radiator fan 2 V177 .....	134
1.14	Removing and installing radiator (Golf 2004 ▶) .....	136
1.15	Removing and installing radiator (Golf 2009 ▶, Golf Cabriolet 2012 ▶, Scirocco) .....	137
1.16	Removing and installing auxiliary radiator (Golf 2009 ▶, Golf Cabriolet 2012 ▶, Scirocco) .....	138
1.17	Checking cooling system for leaks .....	139
<b>20</b>	<b>- Fuel supply system .....</b>	<b>141</b>
<b>1</b>	<b>Safety precautions .....</b>	<b>141</b>
1.1	Safety regulations for working on fuel supply .....	141
1.2	Releasing fuel pressure in high-pressure section .....	142
<b>2</b>	<b>Rules for cleanliness .....</b>	<b>144</b>
<b>3</b>	<b>Fuel tank (front-wheel drive) .....</b>	<b>145</b>
3.1	Assembly overview - fuel tank .....	145
3.2	Emptying fuel tank .....	147
3.3	Removing and installing fuel tank .....	151
<b>4</b>	<b>Fuel tank (four-wheel drive) .....</b>	<b>154</b>
4.1	Assembly overview - fuel tank .....	154
4.2	Emptying fuel tank .....	156
4.3	Removing and installing fuel tank .....	161
4.4	Removing and installing fuel gauge sender 2 G169 .....	165
4.5	Removing and installing suction-jet pump .....	167
<b>5</b>	<b>Repairing fuel supply .....</b>	<b>169</b>
5.1	Removing and installing fuel delivery unit .....	169
5.2	Removing and installing fuel gauge sender G .....	173
5.3	Checking fuel pump G6 .....	174
<b>6</b>	<b>Electronic power control (EPC) .....</b>	<b>186</b>
6.1	Assembly overview - accelerator module .....	186
6.2	Removing and installing accelerator pedal module .....	186



<b>7</b>	<b>Activated charcoal filter system</b>	<b>189</b>
7.1	Assembly overview - activated charcoal filter system	189
7.2	Checking fuel tank breather	189
7.3	Checking fuel system for leaks	191
<b>8</b>	<b>Activated charcoal filter system</b>	<b>199</b>
8.1	Overview of activated charcoal filter system	199
8.2	Assembly overview - activated charcoal filter system	201
8.3	Removing and installing activated charcoal filter	202
8.4	Removing and installing fuel system diagnostic pump V144	203
8.5	Checking fuel system for leaks	203
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>212</b>
<b>1</b>	<b>Exhaust turbocharger</b>	<b>212</b>
1.1	Fitting hose connections with plug-in connectors	212
1.2	Rules for cleanliness	213
1.3	Assembly overview - turbocharger	213
1.4	Removing and installing turbocharger	218
1.5	Checking vacuum unit for turbocharger	226
1.6	Removing and installing turbocharger vacuum unit (engine code BYD)	227
1.7	Adjusting turbocharger vacuum unit (engine code BYD)	227
<b>2</b>	<b>Charge air system</b>	<b>232</b>
2.1	Assembly overview - charge air cooling (engine code BYD)	232
2.2	Assembly overview - charge air cooling (engine codes CDLA, CDLC, CDLF, CRZA)	233
2.3	Assembly overview - noise booster (engine code BYD)	236
2.4	Actuator for structure-borne sound R214 and control unit for structure-borne sound J869 (engine codes CDLA, CDLC, CDLF, CRZA)	236
2.5	Schematic diagram of turbocharging system	239
2.6	Removing and installing charge air cooler (Golf and Golf Cabriolet)	240
2.7	Removing and installing charge air cooler (Scirocco)	241
2.8	Checking charge air system for leaks	242
<b>24</b>	<b>Mixture preparation - injection</b>	<b>245</b>
<b>1</b>	<b>Safety precautions and rules for cleanliness</b>	<b>245</b>
1.1	General information on self-diagnosis	245
<b>2</b>	<b>Injection system</b>	<b>246</b>
2.1	Technical data	246
2.2	Assembly overview - engine cover panel/air filter	246
2.3	Removing and installing engine cover panel/air filter	248
2.4	Removing and installing air filter element	250
2.5	Removing and installing air mass meter G70	251
2.6	Assembly overview - intake manifold	252
2.7	Removing and installing intake manifold	254
2.8	Removing and installing intake manifold flap motor V157 and intake manifold flap potentiometer G336	256
2.9	Assembly overview - fuel rail (vehicles up to 05.2007)	259
2.10	Assembly overview - fuel rail (vehicles from 05.2007)	260
2.11	Removing and installing fuel rail	262
2.12	Removing and installing throttle valve module J338	263
2.13	Cleaning throttle valve module J338	263
2.14	Assembly overview - high-pressure pump	264
2.15	Removing and installing high-pressure pump	266
2.16	Removing and installing fuel pressure sender G247	268
2.17	Checking fuel pressure sender G247	269
2.18	Removing and installing injectors	271
2.19	Renewing Teflon seal on injector	274



<b>3</b>	<b>Checking components</b> .....	<b>277</b>
3.1	Checking double non-return valve .....	277
<b>4</b>	<b>Engine control unit J623 (Golf 2004 ▶)</b> .....	<b>278</b>
4.1	Removing and installing engine (motor) control unit J623 .....	278
4.2	Removing and installing anti-theft engine control unit J623 .....	278
<b>5</b>	<b>Engine control unit J623 (Golf 2009 ▶ and Golf Cabriolet)</b> .....	<b>282</b>
5.1	Removing and installing engine control unit .....	282
5.2	Removing and installing anti-theft engine control unit .....	283
<b>6</b>	<b>Engine control unit J623 (Scirocco)</b> .....	<b>287</b>
6.1	Removing and installing engine (motor) control unit J623 .....	287
6.2	Removing and installing anti-theft engine control unit J623 .....	288
<b>26 - Exhaust system</b> .....		<b>290</b>
<b>1</b>	<b>Exhaust system</b> .....	<b>290</b>
1.1	Assembly overview - exhaust system (Golf 2004 ▶) .....	290
1.2	Assembly overview - exhaust system (Golf 2009 ▶) .....	293
1.3	Assembly overview - exhaust system (Golf Cabriolet 2012 ▶) .....	295
1.4	Assembly overview - exhaust system (Scirocco) .....	297
1.5	Separating centre and rear silencers (front-wheel drive) .....	299
1.6	Removing and installing front exhaust pipe with catalytic converters .....	300
1.7	Aligning exhaust system free of stress .....	301
1.8	Checking exhaust gas flap (Golf 2009 ▶, Golf Cabriolet 2012 ▶, Scirocco) .....	302
<b>28 - Ignition system</b> .....		<b>305</b>
<b>1</b>	<b>Repairing ignition system</b> .....	<b>305</b>
1.1	General notes on ignition system .....	305
1.2	Safety precautions .....	305
1.3	Assembly overview - ignition system .....	305
1.4	Removing and installing ignition coils with output stage .....	306
1.5	Test data, spark plugs .....	308